



RVC-S22/RG

無線手提旋風式吸塵機

Cordless Handheld Cyclonic Vacuum Cleaner



僅供家庭使用
For household use only

使用說明書

OPERATION MANUAL

- 在使用本產品前，請仔細閱讀本說明書，閱讀後小心收藏，以備日後查閱。
Please read the operation manual carefully before using. Keep it in a safe place for future reference.
- 本說明書中的圖示可能有與實物有不同的地方，僅供參考。
The images in the operation manual may not match with the real object and are for reference only.

非常感謝您選購樂信牌無線手提旋風式吸塵機，在使用前請先詳細閱讀此說明書，並保存以備日後參考。



目錄

1. 安全注意事項
2. 產品規格
3. 產品結構
4. 配件安裝及使用
5. 充電方法
6. 使用方法
7. 清潔及儲存
8. 故障排除
9. 特別聲明
10. 售後服務



1. 安全注意事項

使用本產品時，必須遵守下列安全預防措施：












下圖表示由於錯誤操作而引起不同程度的危險等級。

	警告: 此標誌表示可能造成傷亡。
	注意: 此標誌表示可能造成傷害或財物損失。

以下不同標誌區分各種必須遵守的指示。

	此標誌表示 禁止。
	此標誌表示 必須遵守。

 警告			
	為防止危險，請按照此說明書建議方法使用，切勿在室外、濕的表面使用或用作吸塵以外的其他用途。		切勿使用有殘缺或鬆動的插座。確保充電器使用前已充分抹乾及使用時插穩。
	切勿讓小孩在沒有監督下使用、清潔及維修保養本產品或把其當作玩具。請將本產品及其充電器放於小孩不能接觸的地方。		本產品必須使用生產商提供的充電池及充電器進行充電。使用非生產商提供的充電池或充電器，可能會損壞產品及造成危險。
	切勿將本產品、充電池、充電器或其插頭浸入水中，或被水濺濕，以免造成觸電的危險。		手濕時切勿安裝配件、接觸、插入或拔除充電池及充電器，否則可構成觸電的危險。
	切勿使用本產品吸入以下物品，否則會引起堵塞、重要部件的損壞及造成危險： - 易燃物質、高溫物質或易燃液體(如煙蒂、熱灰餘燼及汽油等) - 尖銳或金屬物件(如針、破碎的玻璃及牙籤等) - 超細物質(如石灰、水泥、碳粉及石膏粉等) - 大型物件 - 水、各種液體或潮濕表面(如濕毛毯等) - 化學物質(如清潔劑等)		為避免危險，使用及充電時必須遠離以下地方： - 易燃物、噴霧劑及煙劑等周圍 - 熱源(如散熱器)、火源或直接受陽光照射的地方 - 近水的環境 - 大量熱氣、蒸氣或潮濕的地方
	本產品可供年齡在8歲或以上的兒童及體質、感覺或智力有障礙人士或缺乏經驗和相關知識的人士使用，但他們必須曾經接受負責安全人士的監督或指導如何安全地使用吸塵機和理解所涉及的危險。		經常檢查本產品、充電器及充電池，如有損壞，為避免危險，請立即停止使用，並聯絡信興電器服務中心有限公司進行檢查及維修。切勿擅自改裝本產品或使用非生產商提供的零件修理，否則可造成危險及維修保養無效。

 
 注意			
	當本產品充電中或開啓後，切勿將毛髮、寬鬆的衣物、手指或身體任何部份(特別是口、耳及眼)靠近伸延管、吸風口或活動機件，以免造成傷害。		切勿在充電器的電源線上放重物或讓其接觸灼熱的表面; 切勿夾住、改裝、用力拉扯或扭曲充電器的電源線。
	切勿在沒有裝置過濾網及集塵杯的情況下使用本產品，以免因使用不當而造成損壞。		請確保本產品的吸氣及排氣口空氣流通。如有堵塞，應立即清理，否則會導致吸力減低或令摩打過熱。
	充滿電後，必須拔除充電器。長時間充電，可能造成充電池過熱及燃燒等危險。		在清潔本產品、安裝或拆卸配件前，請確保充電器已從插座拔掉並確保電源已關閉。
	在充電期間，切勿離開本產品。		在插入或拔除充電器時，應手握穩插頭，不要抓住電源線。
	切勿將本產品放置於書櫃、壁櫥或其他封閉的空間。確保本產品的通風良好。		切勿在充電器的電源線纏結的情況下使用。

2. 產品規格

型號	RVC-S22/RG
額定電壓	DC22.2V
充電池種類	鋰電池
額定充電池容量	2200mAh
充電器輸入規格	100-240V~ 50/60Hz
充電器輸出規格	DC 26V 450mA
充電時間	約6小時
使用時間	*約22-28 分鐘
集塵量	0.5 升
產品尺寸 (闊 x 深 x 高) (安裝伸延管及地刷)	220 x 220 x 1180 毫米
淨重 (安裝伸延管及地刷)	約2.1 公斤

* 本產品可運行時間的長短會因電池溫度及其他使用條件而有所差異。

3. 產品結構

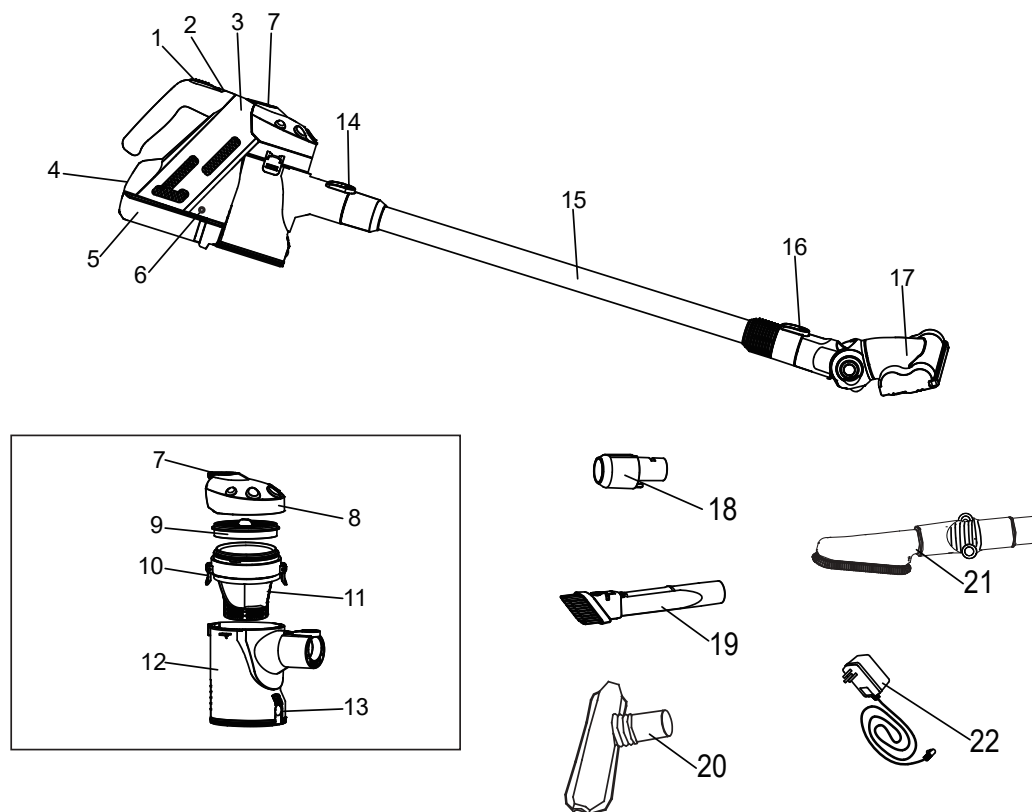

- | | |
|------------|--------------|
| 1. 電源開關鍵 | 12. 集塵杯 |
| 2. 電源指示燈 | 13. 集塵杯底蓋拆卸鍵 |
| 3. 主機 | 14. 連接拆卸鍵 |
| 4. 充電電池拆卸鍵 | 15. 伸延管 |
| 5. 充電池 | 16. 地刷拆卸鍵 |
| 6. 充電插孔 | 17. 電動地刷 |
| 7. 集塵杯拆卸鍵 | 18. 連接器 |
| 8. 集塵杯上蓋 | 19. 二合一縫隙吸咀 |
| 9. 過濾網 | 20. 床褥吸咀 |
| 10. 集塵杯上蓋扣 | 21. 多用途毛刷 |
| 11. 旋風式過濾芯 | 22. 充電器 |

 
4. 配件安裝及使用




(注意: 安裝及卸拆任何配件前, 切勿啓動電源並將電源插頭從插座拔出。)

安裝及拆卸電動地刷

將電動地刷插入主機, 直至聽到“咔嚓”聲表示已鎖緊。

拆卸電動地刷時, 請先按下連接拆卸鍵, 然後將地刷從主機拔出。

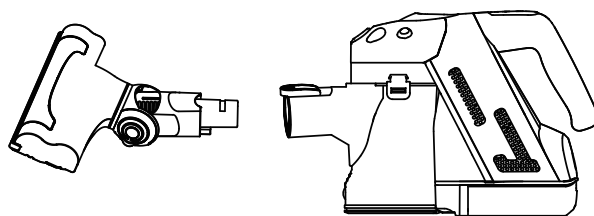
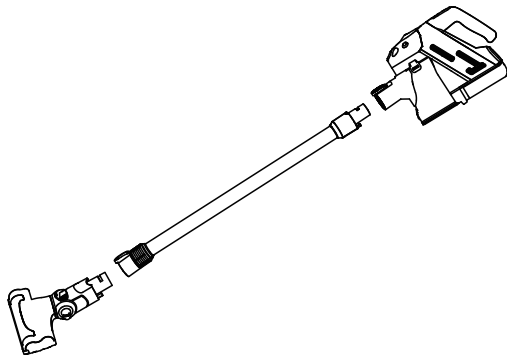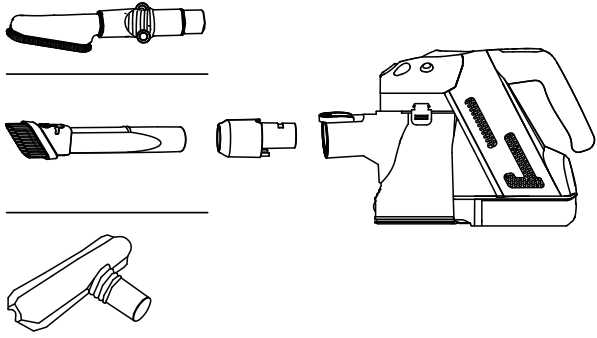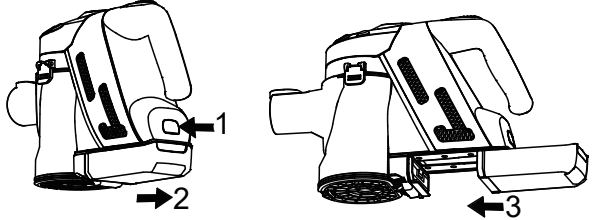
<p>安裝及拆卸伸延管及電動地刷</p> <p>將伸延管吸插入主機，再將電動地刷安裝至伸延管，直至聽到“咔嚓”聲表示已鎖緊。</p> <p>拆卸時，請先按下連接拆卸鍵，然後將伸延管從主機拔出。再按下伸延管上的地刷拆卸鍵，將地刷從伸縮管拔出。</p>	
<p>安裝及拆卸二合一縫隙吸咀 / 床褥吸咀 / 多用途毛刷</p> <p>將連接器插入主機上的連接插孔，直至聽到“咔嚓”聲表示已鎖緊，再將二合一縫隙吸咀 / 床褥吸咀 / 多用途毛刷安裝至連接器上。</p> <p>拆卸時，將二合一縫隙吸咀 / 床褥吸咀 / 多用途毛刷從轉換連接器拔出。再按下連接拆卸鍵，將連接器從主機拔出。</p>	
<p>拆卸充電電池</p> <p>按下主機背部的充電電池拆卸鍵(1)，並將充電電池向外推(2)。</p> <p>安裝充電電池</p> <p>將充電電池向前推回原位(3)。</p>	

5. 充電方法

1. 購買時，電池還未充滿電。第一次使用前請先將充電電池充滿電。
2. 充電時，確保電源開關鍵在關的位置並檢查充電電池已正確安裝，將充電器插入主機的充電插孔及電源插座。以下是充電指示燈的顯示：

充電時	充滿電時	工作時
紅燈閃爍	紅燈長亮	綠燈長亮

- 標準充電時間為6小時，實際充電時間會根據不同的環境及使用時間而變化。
- 充電時，充電器及主機會變熱，此乃正常現象。
- 切勿在室溫過低或過高或被陽光直射的高溫地方進行充電，否則可能導致延長充電時間、縮短使用時間及造成其他危險。





6. 使用方法

1. 使用前，請確保所需配件已安裝妥當。
2. 用手握緊主機，將電源開關鍵推前啟動吸塵機。
3. 使用後，將電源開關鍵推回原位停止運作。
4. 每次使用後，必須將吸塵機充電。

 
7. 清潔及儲存

建議用戶定期清理集塵杯及過濾網，否則如集塵袋太滿或濾網積聚太多灰塵，可能會減弱吸塵機的吸力。

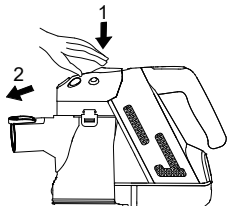清理集塵杯

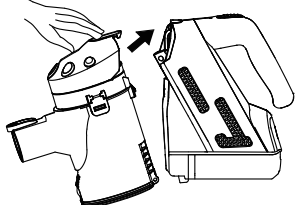1. 按下集塵杯前端拆卸鍵(1)，將集塵杯從主機拉出(2)。	
2. 將集塵杯放在垃圾桶上方，並按下集塵杯底蓋拆卸鍵打開底部，垃圾便會自動卸下。	
3. 解開集塵杯上蓋扣，取出旋風式過濾芯清潔。用戶可用軟刷清除旋風式過濾芯的灰塵或直接用水清洗旋風式過濾芯及集塵杯。重新安裝及使用前，請確保旋風式過濾芯及集塵杯已完全乾透。	
4. 清潔後，必須將集塵杯上蓋及底蓋關上，並確保集塵杯已妥當地安裝在主機上。	

清潔過濾網

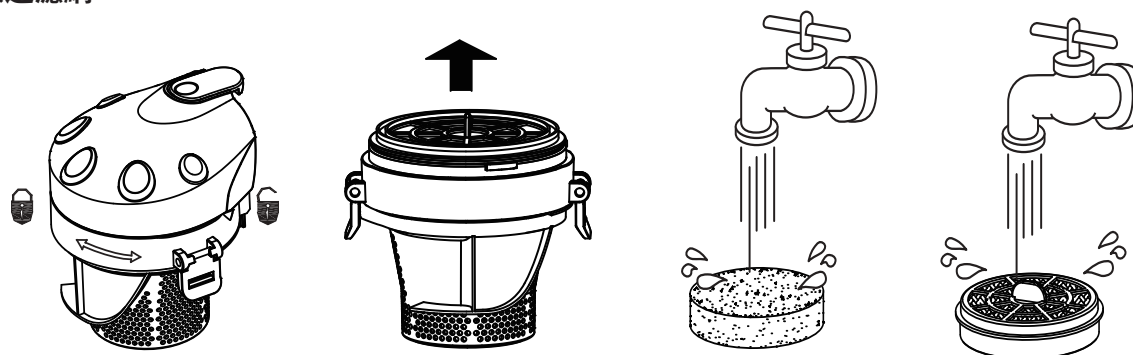 


1. 拆卸塵杯後，逆時針方向轉動集塵杯上蓋至“OPEN”位置。
2. 打開上蓋後，取出過濾網。
3. 用戶可用軟刷清理過濾網上的灰塵，再用水沖洗。
4. 必須待過濾網完全乾透後，才裝回原位。使用吸塵機前，必須確定過濾網已裝好。

清潔主機

1. 可用濕軟布清潔主機表面及配件，然後擦乾。切勿用水沖洗主機。
2. 切勿使用百潔布或其他粗硬的潔具進行清潔。
3. 切勿使用有毒或含腐蝕性清潔劑進行清潔。

清潔電動地刷

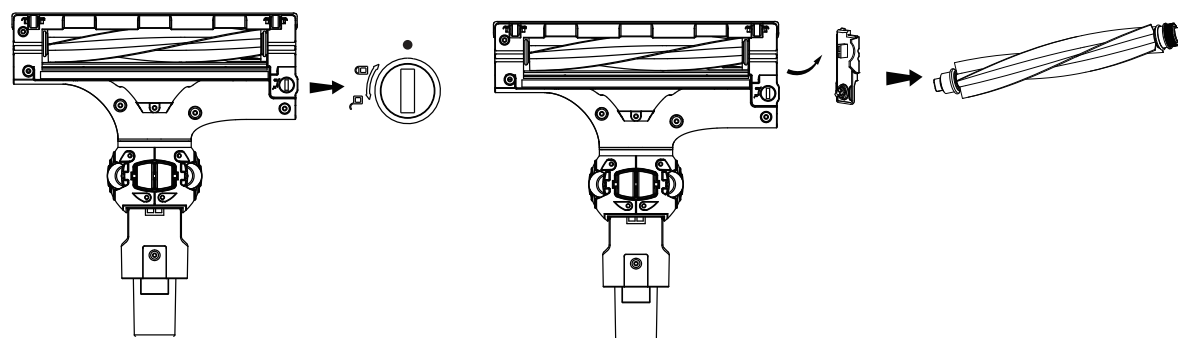

1. 逆時針方向轉動地刷蓋板鎖，以解開地刷蓋板鎖。
2. 打開地刷蓋板，取出旋轉毛刷。
3. 清潔旋轉毛刷後，放回原位。
4. 蓋上地刷蓋板，順時針方向轉動地刷蓋板鎖，以鎖緊地刷蓋板。

充電電池保養及棄置

1. 若1個月或以上不使用吸塵機時，充滿電後才可儲存，並每年充電1次。
2. 若6個月未曾使用吸塵機，電池充滿後的使用時間將會縮短。經過數次完全放電及充電的循環後，使用時間將恢復正常。
3. 充電電池為消耗品。如以正確方法充電後，使用時間出現明顯縮短的情況，請聯絡信興電器服務中心有限公司購買新充電電池更換。
4. 處理廢棄充電電池時，請聯絡當地政府環保部門，並查詢正確的廢棄處理方法。

儲存

待吸塵機完全冷卻及清潔後，才可儲存在紙盒內並須放置在陰涼及乾燥的環境中。

8. 故障排除

故障現象	原因	解決方法
產品不能運作。	充電電池電量不足。	將吸塵機充電或更換新充電電池。
吸力變弱。	集塵杯已滿。	清理集塵杯。
	充電電池電量不足。	將吸塵機充電。
	濾網積聚太多灰塵。	清洗過濾網。
吸塵時，有灰塵漏出。	集塵杯已滿。	清理集塵杯。
	集塵杯或過濾網安裝不良。	重新安裝集塵杯或過濾網。
使用中，產品突然停止操作。	集塵杯已滿。	清理集塵杯。

如使用以上方法仍未能使產品恢復正常操作，切勿嘗試自行維修。請聯絡信興電器服務中心有限公司進行檢查及維修。

9. 特別聲明

1. 此說明書所有內容經過核對，如有任何印刷錯誤或內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及規格以廠方生產資料為準。
3. 此說明書的電子副本可透過電子郵件發送致客戶。如有需要，請致電信興電工工程有限公司：2861 2767。

10. 售後服務

信興電工工程有限公司(“本公司”)將授權信興電器服務中心有限公司(“服務中心”)(統稱“信興”)提供一年保修服務並由發票/換購收據上的日期起計。超過這期間者，客戶須按服務中心的修理服務價目表繳付一切費用。

1. 信興對於任何因產品不適當地使用或任何產品之故障、損壞或停頓而引致任何人士或財產的直接或間接損失及破壞，概不負責。
2. 客戶須自行將產品送往客戶服務中心或市區內，並於產品修妥後於同一地點取回。
3. 保修卡(印在包裝盒上)只適用於香港及澳門。於修理時，客戶需出示保修卡及由香港或澳門經銷商發出的正式發票/換購收據予技術員查閱。保修卡上之產品型號必須與機身相符，保修卡上之購買日期須與正式發票/換購收據上的日期符合，方為有效。除指定保修卡外，任何商號及人士發出之保修卡，均不為信興認可。
4. 客戶不可擅自更改產品上的機身編號，如發現產品上的機身編號與保修卡所列者不符，保修卡則告無效。(如適用)
5. 除產品表面、機殼、損耗性零件及附件外，產品如在保修期內發生故障，經服務中心證實乃在正常使用情況下發生者，服務中心將提供免費修理及更換零件，經更換後之任何損壞零件，將歸服務中心所有。
6. 下列項目並不包括於保修範圍內。客戶須另付所需的服務費用。(甲) 修理或更換產品之附件、外接線及機殼。(乙) 曾被非服務中心的技術員明顯地或不明顯地進行改裝、更改或修理的產品。(丙) 曾經被不適當或疏忽使用、不正常供電或電壓不正常、意外、天災或因昆蟲、外物、液體入侵、腐蝕或外來因素而造成損壞的產品。(丁) 因產品不正確安裝而影響正常之操作。
7. 如中英文版本有差異時，應以中文版為準。
8. 所有資料如有任何更改，恕不另行通知。如有任何爭議，服務中心保留最終決定權。
9. 保修卡沒有賦予或意圖賦予任何第三者因《合約(第三者權利)條例》(第623章)所列之任何利益或權利以強制執行保修卡的任何條款內容。



Thank you for choosing Rasonic cordless handheld cyclonic vacuum cleaner. Please read the operation manual carefully before use and keep it for your future reference.

Table of Contents



1. Important Safeguards
2. Product Specifications
3. Product Descriptions
4. Accessories Assembly and Usage
5. Charging
6. Operation Instructions
7. Cleaning and Storage
8. Troubleshooting
9. Special Avowal
10. After Sales Service












1. Important Safeguards

When using the appliance, please follow the below safety precautions:
The following chart indicates the degree of damage caused by wrong operation.

	Warning: Indicates that may cause death or serious injury.
	Caution: Indicates hazards that may cause human injuries or property damages.

The following symbols can distinguish the instruction types that need to be strictly followed.

	These symbols mean prohibition.
	These symbols mean requirement that must be followed.

 Warning			
	To avoid danger, use the appliance only as described in this manual. Do not use outdoors, on wet surfaces or for other purposes than vacuuming.		Never use deficient or loosen power socket. Make sure the adaptor is dry before use and inserted firmly when use.
	Children shall not play with the appliance. Using, cleaning and maintenance shall not be made by children without supervision. Please put the appliance and its adaptor in a place not reachable by children.		The appliance must be used with the provided rechargeable battery and charged with the provided adaptor. To avoid the appliance damage and danger, never use the unauthorized rechargeable battery or adaptor.
	Never immerse the appliance, rechargeable battery, adaptor or its plug into water or let them wet, it is to avoid electric shock.		To avoid electric shock, never assemble accessories, touch, plug or unplug the rechargeable battery and adaptor with wet hands.
	Never use the appliance to suck below materials, otherwise it will cause blockage, damage on major parts and danger. <ul style="list-style-type: none"> – Flammable materials, hot materials or combustible liquids (e.g. cigarettes, burning ashes and gasoline etc.) – Sharp or metal objects (e.g. needles, broken glass and toothpicks etc.) – Fine powder (e.g. lime, cement, toner and gypsum powder etc.) – Large objects – Water, any liquid or wet surface (e.g. wet carpet) – Chemical substance (eg. cleanser) 		To avoid danger, never use and charge the appliance near the environment of: <ul style="list-style-type: none"> – Flammable materials, sprays and aerosols – Heat source (e.g. radiator), fire or expose under direct sunlight – Near water – Massive hot air, steam or humid area
	The appliance can be used by children aged from 8 years and above and person with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.		Always check the condition of the appliance, adaptor and rechargeable battery. To avoid hazards, please stop using immediately if any damage is found. Please contact Shun Hing Electric Service Centre Limited for checking and repairing. Do not attempt to modify the appliance by yourself or repair with any parts that are unauthorized, otherwise it may cause hazards and warranty becomes invalid.



Caution

 
 
 
	When the appliance is charging or switched on, keep the extension tube, suction inlets or moving parts away from your hair, loose clothing, fingers or any parts of your body (especially mouth, ears and eyes), it is to avoid injury.		Do not put heavy objects on the power cord of the adaptor or let it touch any hot surface. Never clip, modify, stretch or twist the power cord of the adaptor.
	Never use the appliance when filters and dust cup are not in place, it is to avoid damage due to improper use.		Always keep the suction inlet and the exhaust outlet free of blockage. If there is any blockage, please remove them immediately. Otherwise, it will cause loss of suction power or motor overheat.
	Make sure to unplug the adaptor after fully charged. Charging for a long time may cause hazards such as rechargeable battery overheat and burn.		Remove the adaptor from socket and the power switch is at the off position before cleaning appliance, installing or removing the accessories.
	Do not leave the appliance unattended while it is charging.		Always hold the adaptor plug tightly with hands when insert or remove it. Do not grasp its power cord.
	Do not place the appliance in a bookcase, built-in cabinet or in another confined space. Ensure the appliance is well ventilated.		Do not use the adaptor when its power cord is tangle.

2. Product Specifications

Model	RVC-S22/RG
Rated Voltage	DC22.2V
Rechargeable Battery Type	Lithium-ion Rechargeable battery
Rated Rechargeable Battery Capacity	2200mAh
Adaptor Input	100-240V~ 50/60Hz
Adaptor Output	DC 26V 450mA
Charging Time	Approx. 6 hrs.
Operation Time	*Approx. 22-28 mins.
Dust Cup Capacity	0.5L
Product Size (W x D x H) (Extension tube & motorized floor brush installed)	220 x 220 x 1180 mm
Net Weight (Extension tube & motorized floor brush installed)	Approx. 2.1 kg

* The length of operation time can run varies depending on the temperature of the battery and other usage conditions.

3. Product Descriptions

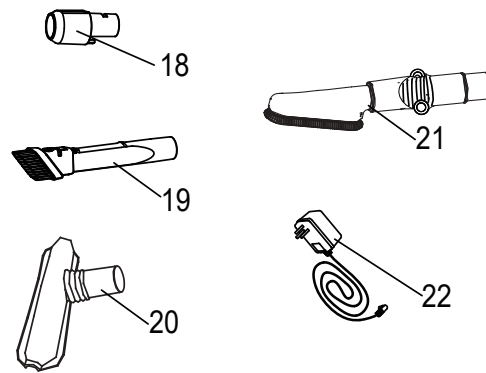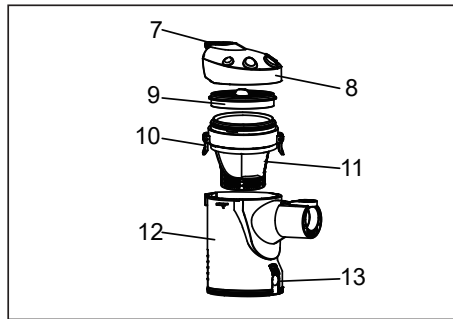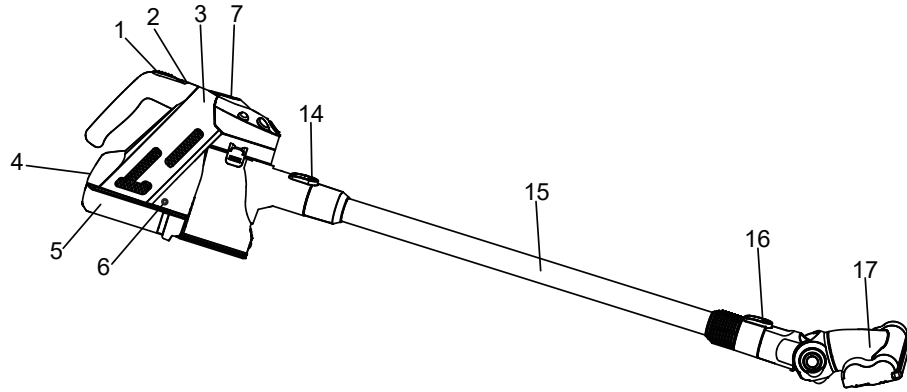

- | | |
|---|--|
| <ul style="list-style-type: none"> 1. Power switch 2. Power indicator light 3. Main body 4. Rechargeable battery detach button 5. Rechargeable battery 6. Charger inlet 7. Dust cup release button 8. Dust cup cover 9. Filter 10. Dust cup cover buckle 11. Cyclonic filter | <ul style="list-style-type: none"> 12. Dust cup 13. Dust cup bottom release button 14. Connector release button 15. Extension tube 16. Floor brush release button 17. Motorized floor brush 18. Connector 19. 2 in 1 crevice nozzle 20. Mattress nozzle 21. Universal brush 22. Adaptor |
|---|--|

 
4. Accessories Assembly and Usage




(Caution: Be careful not to turn on the power and must unplug the adaptor from the socket when install and detach any accessories.)

Attach and detach the motorized floor brush

Insert the motorized floor brush into the main body until a "click" sound is heard which means it is locked tightly.

When detach the motorized floor brush, press the connector release button and pull it out from the main body.

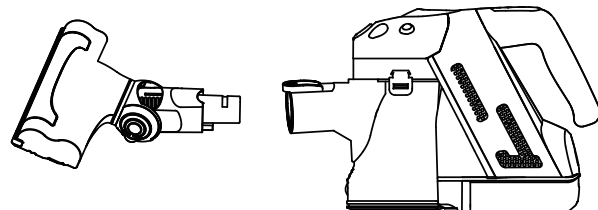
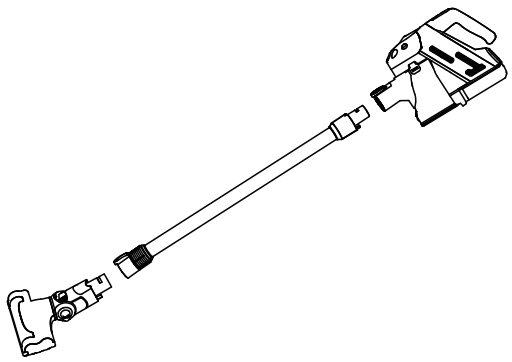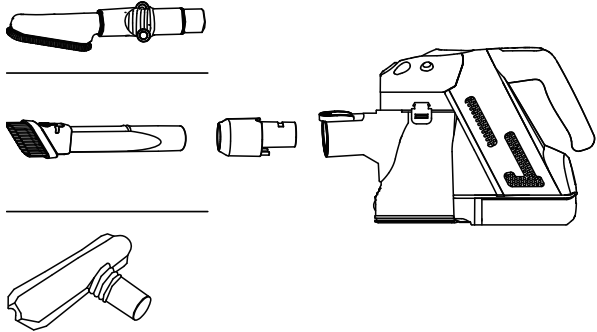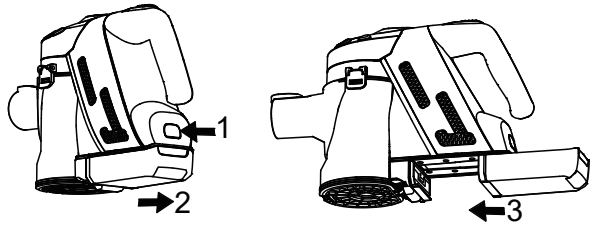
<p>Attach and detach the extension tube and the motorized floor brush Insert the extension tube into the main body, then install the motorized power floor to the extension tube until a "click" sound is heard which means it is locked tightly.</p> <p>When detach, press the connector release button and pull the extension tube out from the main body. Then press the floor brush release button on the extension tube and pull out the motorized floor brush.</p>	
<p>Attach and detach the 2 in 1 crevice nozzle / mattress nozzle / universal brush Insert the connector into the main body, until a "click" sound is heard which means it is locked tightly, then install the 2 in 1 crevice nozzle / mattress nozzle / universal brush to the connector.</p> <p>When detach, pull out the 2 in 1 crevice nozzle / mattress nozzle / universal brush from the connector. Then press the connector release button and pull the connector out from the main body.</p>	
<p>Detach the rechargeable battery Press the rechargeable battery detach button (1) at the back of the main body and pull out the rechargeable battery (2).</p> <p>Install the rechargeable battery Push the rechargeable battery back to its original position (3).</p>	

5. Charging

1. The rechargeable battery is not fully charged at the time of purchase. The rechargeable battery needs to be fully charged before first use.
2. When charging, check the power switch is at the off position and the rechargeable battery has installed correctly. Connect the adaptor with the charger inlet on the main body and the power socket. Below is the display of the power indication light:

Charging	Fully Charged	Working
Flash Red	Red	Green

- The standard charging time is approx. 6 hours. However, the actual charging time may vary with different environment and usage time.
- The adaptor and main body may become hot while charging, which is normal.
- Never charge the rechargeable battery in places of low or high temperature or expose to sunlight, otherwise the charging time may be longer, the operation time may be shorter and it may cause hazard.





6. Operation Instructions

1. Before use, make sure all necessary accessories are attached properly.
2. Grasp the main body and push the power switch forward to turn on the vacuum cleaner.
3. After use, push back the power switch to stop operation.
4. After every use, the vacuum cleaner must be charged.

 
7. Cleaning and Storage

It is recommended to clean the dust cup and filters regularly, otherwise if the dust cup gets too full or the filters get too dirty, it may weaken the suction power of the appliance.

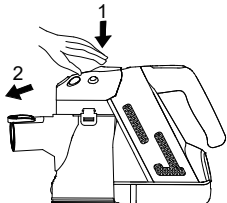Clean the dust cup
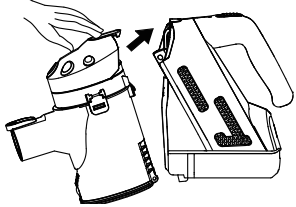
<p>1. Press the dust cup release button(1), take out the dust cup from the main body(2).</p>	
<p>2. Place the dust cup over the rubbish bin, then press the dust cup bottom release button to open the bottom cover, then the dust will fall down.</p>	
<p>3. Unlock the dust cup cover buckle and take out the cyclonic filter to clean it. You can use a soft brush to remove the dust on the cyclonic filter or wash the cyclonic filter and the dust cup with water directly. Make sure the cyclonic filter and dust cup are dry thoroughly before assembly and use.</p>	
<p>4. After clean, the dust cup cover and bottom must be closed properly. Make sure the dust cup is installed properly to the main body.</p>	

Clean the filters

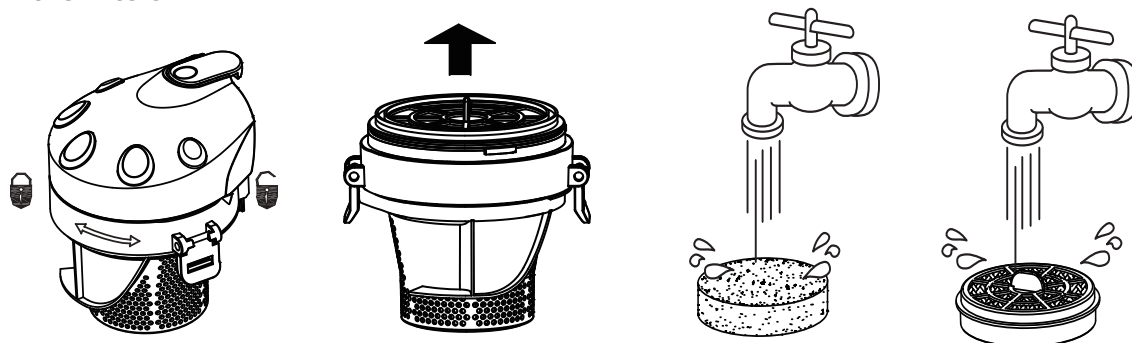 


1. After detach the dust cup, rotate the dust cup cover anti-clockwise to "OPEN" position.
2. After open the cover, take out the filters.
3. You can use a soft brush to remove the dust on the filters, then wash it with water directly.
4. The filters must be dry thoroughly before installed back. Make sure to put the filters in place before use the vacuum cleaner.

Clean the main body

1. Clean the main body surface and the accessories by a damp cloth, then rub it dry. Never rinse the main body with water.
2. Never clean with scouring pad or other hard material.
3. Never use poisonous or corrosive detergent for cleaning.

Clean the motorized floor brush

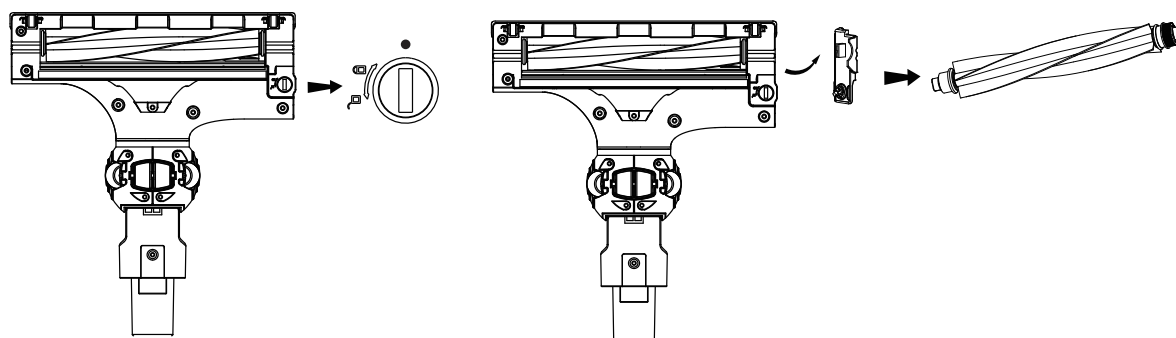

1. Rotate the brush cover lock anti-clockwise to open the brush cover.
2. Pull out the brush cover and take out the rotational brush.
3. Clean the rotational brush and put it back.
4. Close the brush cover, rotate the brush cover lock clockwise to lock the brush cover.

Rechargeable battery maintenance and disposal

1. If you idle the vacuum cleaner for a month or more, fully charge it before you store it, and charge it once a year.
2. If the vacuum cleaner has not been used for 6 months, the operation time after fully charged will be reduced. Operation time will return to normal after few fully discharged and charged cycles.
3. The rechargeable battery is a consumable part. If you find the operation time is obviously shorter even after charging correctly, please contact Shun Hing Electric Service Centre Limited to purchase a new rechargeable battery for replacement.
4. When disposing of the rechargeable battery, please contact your local authorities and ask for the correct method of disposal.

Storage

The vacuum cleaner must be cooled down and cleaned before storing in a box. Store it in a cool and dry place.

8. Troubleshooting

Problem	Cause	Solution
The appliance does not work.	The rechargeable battery power is not enough.	Charge the vacuum cleaner or change a new rechargeable battery.
The suction power becomes weak.	Dust cup is full.	Clean the dust cup.
	The rechargeable battery power is not enough.	Charge the vacuum cleaner.
When operate, some dust escape.	Filters get too dirty.	Clean the filters.
	Dust cup or filter is not installed properly.	Clean the dust cup.
The appliance stops operating during use.	Dust cup is full.	Install the dust cup or filter again.
		Clean the dust cup.

If the above solutions cannot fix the problem, do not attempt to repair it by yourself. Please contact Shun Hing Electric Service Centre Ltd. for checking and repairing.

9. Special Avowal

1. The content in the operation manual has been checked. Our company reserves the hermeneutic power to any printing errors or misunderstanding on the content.
2. If there are technical improvements on the appliance, the operation manual will be updated in new version without prior notice. The product appearance and specification are subject to the manufacturer information.
3. The e-copy of user manual can be sent by email on requested. For enquiries, please call Shun Hing Electric Works & Engineering Co., Ltd. hotline at 2861 2767.

10. After Sales Service

Shun Hing Electric Works & Engineering Co., Ltd. ("The Company") authorizes Shun Hing Electric Service Centre Ltd. ("SHESC") (collectively "Shun Hing") to offer one year warranty service to the product commencing from the date of purchase invoice or redemption voucher. Services beyond the said warranty period will be charges according to the standard service charge price list from SHESC.

1. Shun Hing shall not be liable for any direct or indirect loss or damage to any person or property, howsoever caused arising from improper use, or any stoppage, breakdown or failure of the product.
2. Customer is responsible to deliver the product to our service station or any place in urban area, and to pick up the repaired product from the same location.
3. The warranty card (printed on the packing box) is valid only in Hong Kong and Macau. Customer is required to present the warranty card together with the official purchase invoice issued by the dealers of Hong Kong or Macau or redemption voucher to our technician for verification when service is rendered. The warranty card is valid only if the model number stated herein corresponds with that of the product and the date of purchase/redemption stated herein is the same with the date of official purchase invoice/redemption voucher. Save and except the specific warranty card, any other warranty card issued by other parties will not be recognized by Shun Hing.
4. Customer shall not alter the serial number of the product. The warranty card is void if the serial number on the product does not match with that shown on the warranty card (if applicable).
5. For any defect which in our judgment is caused under normal use, SHESC will repair or replace the defective parts, excluding any surface, cabinet, consumptive parts and accessories, free of charge within the warranty period. Any defective part which has been replaced shall become the property of SHESC.
6. Warranty service does not cover the following items. Additional charges shall be levied if services are required. (a) Repair or replacement of accessories, external cables or cabinet of the product. (b) The product has been explicitly or implicitly modified, tempered with, altered or repaired in any way by persons other than technicians of SHESC. (c) The product has been damaged through misuse, negligence, power interruption or abnormal voltage input, accident, natural calamities, or due to ingress of insects, foreign matters or liquid, corrosion or external factors. (d) The normal operation of the product is affected by improper installation of the product.
7. In case there is any inconsistency or conflict between English version and Chinese version of the terms, the Chinese version shall prevail.
8. All terms stated are subject to change without notice. SHESC retains final deciding authority in case of dispute.
9. Nothing in the warranty card confers or purports to confer on any third party any benefit or any right pursuant to the Contracts (Rights of Third Parties) Ordinance (Cap. 623) to enforce any term of the warranty card.



信興電工工程有限公司

SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓909-912室

電話：2861 2767

圖文傳真：2865 6706

網址：<http://www.rasonic.com>

電郵：shew@shunhinggroup.com

Office: Room 909-912 9/F., Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, H.K.

Tel: 2861 2767

Fax: 2865 6706

Website: <http://www.rasonic.com>

E-mail: shew@shunhinggroup.com

保養及維修 Maintenance and Repair Service:

信興電器服務中心有限公司

SHUN HING ELECTRIC SERVICE CENTRE LTD.

香港新界葵涌勝耀街8號信興中心18樓

電話：2406 5666

圖文傳真：2408 0316

網址：<http://www.shunhing-service.com>

18/F, Shun Hing Centre, 8 Shing Yiu Street, Kwai Chung, N.T., H.K.

Tel: 2406 5666

Fax: 2408 0316

Website: <http://www.shunhing-service.com>

消耗品/附件銷售熱線：2406 5555

Consumables/Accessories Sales Hotline: 2406 5555

客戶服務中心：

香港新界葵涌勝耀街8號信興中心19樓

電話：(852) 2406 5439

傳真：(852) 2408 1389

澳門慕拉士大馬路193-199號南嶺工業大廈5樓I座

電話：(853) 2836 2928

傳真：(853) 2833 6405

有關最新客戶服務中心資訊，請參閱信興服務中心網址：www.shunhing-service.com 或致電維修服務熱線查詢。

Customer Service Centres:

19/F, Shun Hing Centre, 8 Shing Yiu Street, Kwai Chung, N.T.

Tel: (852) 2406 5439

Fax: (852) 2408 1389

Avenida de Venceslau de Morais, No. 193-199, 5 andar-I, Edf.

Tel: (853) 2836 2928

Fax: (853) 2833 6405

Industrial Nam Leng, Macau

For the latest information of customer service centres, please visit www.shunhing-service.com or call us at our hotline.