



Bathroom Heater

浴室暖風機

OPERATION MANUAL 使用說明書



型號/MODEL:FH-BB2A

僅適用於家庭使用 For Household Use Only

在使用本產品前，請仔細閱讀本說明書，閱讀後小心收藏，以備日後查閱。

Please read the operation manual carefully before using and keep it in a safe place for future reference.

本說明書中的圖示可能有與實物不同的地方，僅供參考。

Some figures in the manual may not match with the real object, just for reference only.

1. 安全注意事項 (務必詳細閱讀及遵守安全指導)

 
1. 不遵循或忽視以下安全注意事項會導致火災、觸電、傷害、財產損失或傷亡。
2. 警告! 對於行動不便的人在狹小空間使用產品時, 必須接受對其安全負責的監督。
3.  警告! 禁止覆蓋此產品, 以免造成產品過熱、故障、變形或變色。
4. 警告! 為降低火災風險, 確保產品上面、四周及背面必須保持 10 厘米的散熱空間。將紡織品、窗簾或任何其他易燃材料與產品出風口保持至少 1 米的距離。
5. 本產品屬高耗電量電器, 須使用獨立電源插座, 不應與其他電器共用一個電源插座, 亦須確保當地的電壓與本產品上所標明的額定電壓相符。
6. 身體、感官或精神能力有缺陷或缺乏經驗和知識的人士 (包括兒童) 不得使用本產品, 除非有人監督或指導。
7. 在插入或拔除插頭時, 用手握穩插頭本身, 不要抓住電源線。
8. 切勿使用有殘缺或鬆動的插座。使用前, 確保機身插頭及電源插頭已充分擦乾。
9. 定期檢查及清潔產品、入風口、出風口、電源插頭及插座, 並清除所有灰塵, 以免造成產品故障或因絕緣不良而導致火災。
10. 經常檢查本產品、電源線及插頭, 如有損壞, 為避免危險, 立即停止使用, 並聯絡信興電器服務中心有限公司安排檢查及維修。
11. 切勿在電源線上放重物、夾住、改裝、用力拉扯或扭曲電源線。切勿在電源線纏結的情況下使用或將電源線懸掛在桌子、櫥櫃的邊緣或讓它接觸灼熱的表面, 否則可能造成電源線的損壞。
12. 使用產品前, 確保電源線是完全鬆開的。切勿與其他高功率的電器共用同一插座、超額使用電線拖板, 以免電力負荷過重及造成危險。
13. 產品使用後必須清潔。切勿把產品、電源線或插頭浸入水中; 或被水濺濕, 以免造成觸電及火災。
14. 切勿在以下環境使用產品: 潮濕或近水的環境; 被陽光直接照射或靠近熱源或高溫的環境如焗爐附近; 在不平穩的表面上; 易燃物料或不耐熱物品附近(如枱布、窗簾及毛巾等)。
15. 手濕時切勿接觸、插入或拔除電源插頭, 否則有觸電的危險。
16. 切勿在入風口、出風口或隙縫間插入任何物件, 否則可能會導致觸電或因操作故障導致受傷。
17. 使用時, 切勿觸碰出風網、用力敲擊、移動或搖晃產品。
18. 為免危險, 產品只適用於本說明書所註明的用途。切勿將產品或任何部份在室外使用或作其他用途使用。如錯誤操作, 可造成傷害。
19. 切勿在產品加裝定時開關或獨立的遙控系統操作。
20. 電源線要擺放好, 防止行走時絆倒。
21. 將產品放置在平坦、穩定的平面上, 並確保使用產品時不會遇到任何障礙物。

22. 確保本產品的電源線沒有貼近機身，否則電源線的絕緣材料或會熔化，造成短路。
23. 使用前，確定產品清潔乾透，否則可能引致故障。
24. 切勿在產品周圍噴灑可燃性噴霧劑，否則可能使產品受損。
25. 切勿在浴缸、花灑頭或游泳池的四周使用產品。
26. 如產品曾經跌落或有明顯損壞跡象，切勿使用。
27. 切勿讓產品在無人看管下運作。
28. 產品不得直接置於電源插座下面。
29. 使用後，從電源插座拔出插頭及待產品冷卻後才移動、清潔或檢查產品。
30. 若產品出現異聲或風速不均勻的現象，可能是進風網的灰塵太多阻塞了氣流，用毛刷清潔一下後即可恢復正常。
31. 兒童不得在無人看管的情況下進行產品清潔和保養。兒童不得玩耍本產品。除非有人持續看管，否則 3 歲以下兒童應遠離本產品。
32. 3 歲至 8 歲兒童只能在產品已放置或安裝在其預期的正常工作位置，且在監督下或接受過產品安全使用指導，並了解相關危險的情況下，才能打開/關閉產品。3 歲至 8 歲兒童不得為產品插上電源、進行調整和清潔，也不得進行產品保養。
33. 此產品只供家庭或類似環境使用，如商戶內部、辦事處和其他工作環境的員工廚房區域；旅館、汽車旅館和其他住宿類型的環境。
34. 切勿擅自改裝產品或使用非生產商提供的零件進行維修，否則可能造成危險及維修保養將無效。
35. **注意：**本產品使用時某些零件可能非常燙熱，並可能導致燙傷。兒童和易受傷害人士在使用時應特別注意。

2. 清潔和儲存


1. 清潔前，必須先關閉產品及拔除電源插頭，並待產品完全冷卻。
2. 如產品有污漬，可用溫和清潔劑及海綿等軟性物料清潔，用擰乾的濕布抹淨，然後擦乾。
3. 切勿將電源線、插頭或主機浸在水中清潔或在水龍頭下沖洗。
4. 切勿使用有毒或含腐蝕性的清潔劑或粗硬的潔具(如鋼絲刷)進行清潔。
5. 缺乏適當清潔產品，會使產品表面劣化，縮短產品的使用壽命及可能會造成危險。
6. 儲存時，切勿將電源線纏繞在產品四周或壓住電源線，以免造成電源線損壞，並將產品放入紙箱並放置在乾爽和陰涼的環境中。

3. 產品結構

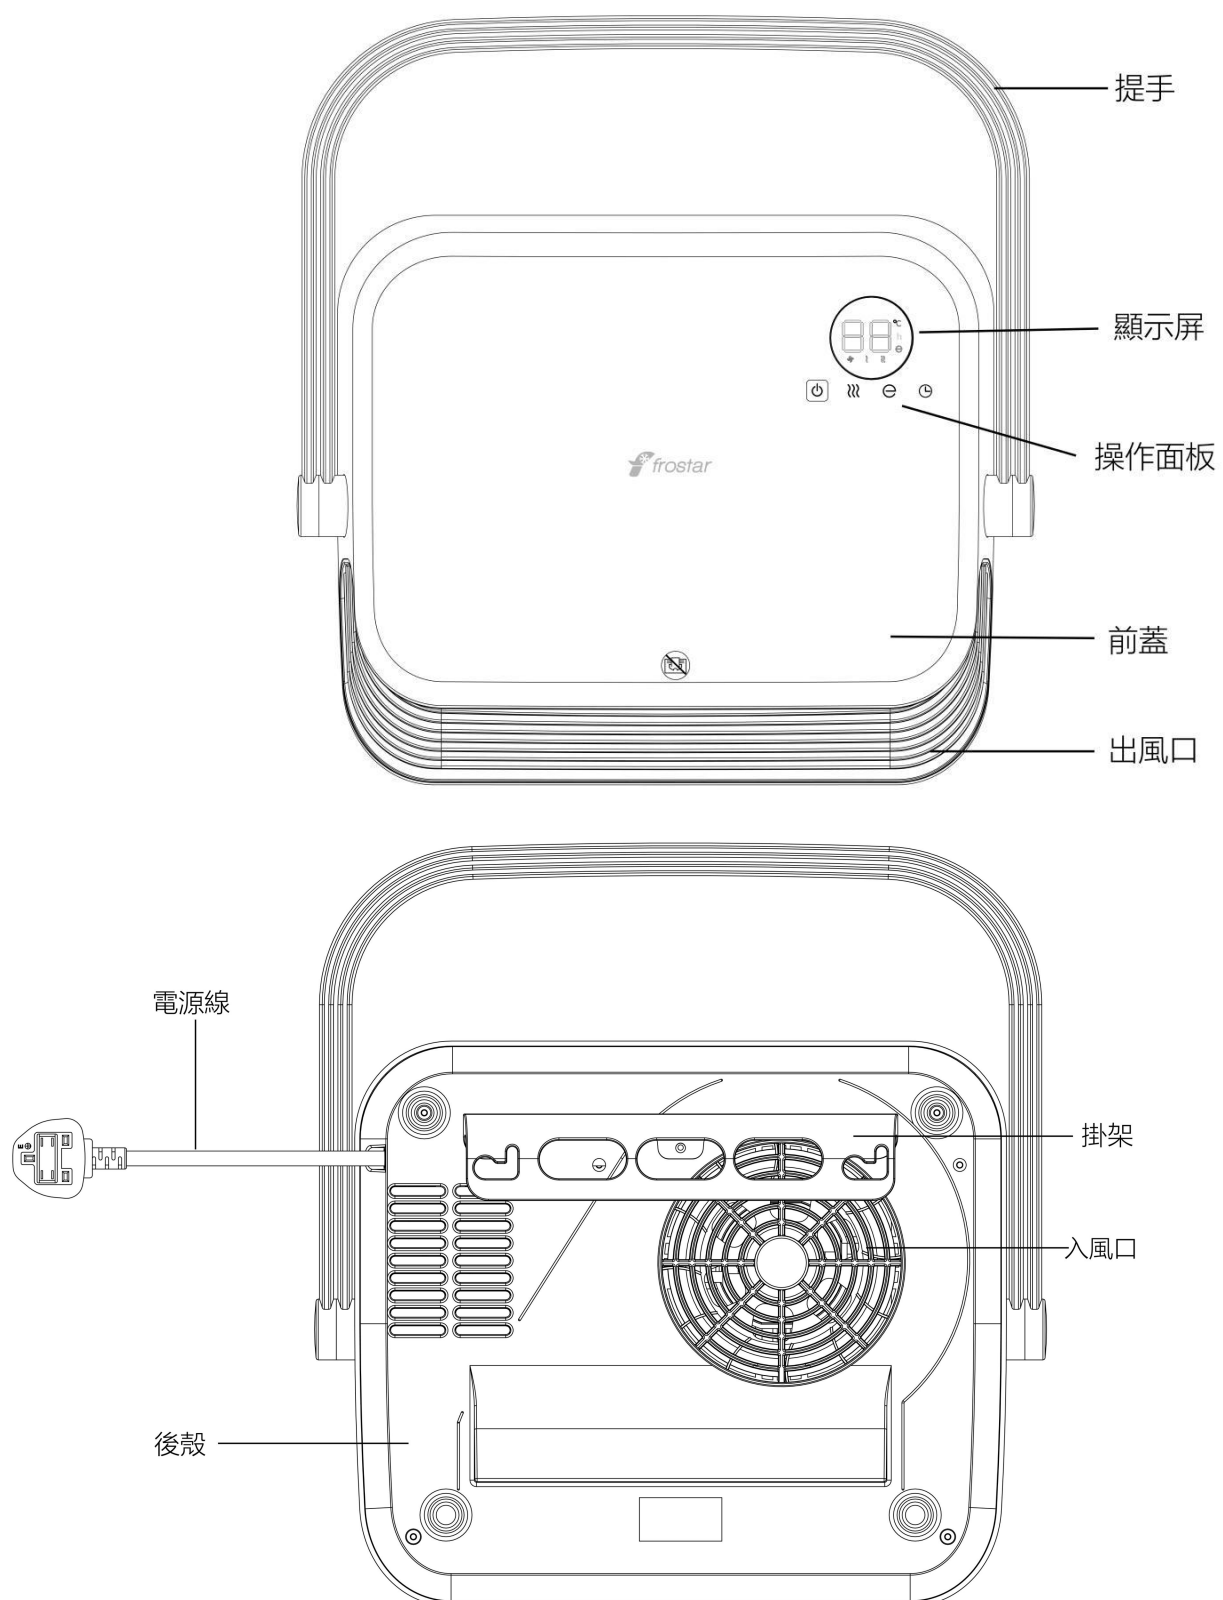

4. 操作說明

 4.1 操作面板

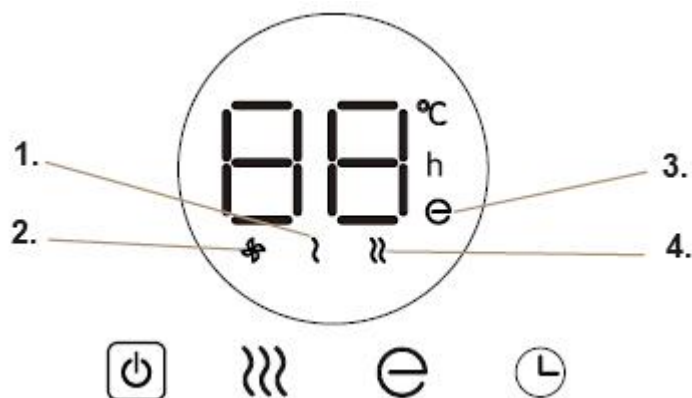

1. 低檔模式指示燈	3. 負離子指示燈
2. 風扇模式指示燈	4. 高檔模式指示燈



電源

電源鍵：按下此鍵，產品進入高檔加熱模式，對應的指示燈亮起；再按一下，產品進入待機狀態。



模式

模式鍵：按下此鍵，產品切換到低檔模式(功率 1000 瓦)開啟，對應的指示燈亮起；再按一下，切換到風扇模式(功率 35 瓦)開啟，對應的指示燈亮起，再按一下模式鍵，切換到高檔模式(功率 2000 瓦)開啟，對應的高檔指示燈亮起，依次循環操作。



負離子

負離子鍵：按下此鍵，負離子功能開啟，對應的指示燈亮起，再按一下，關閉此功能，對應的指示燈熄滅。



 
定時

定時鍵：按下此鍵，定時功能開啟，對應的指示燈亮起，默認開始定時時間為 0H(小時)，再按一下，依次循環切換為 “1H-2H-4H-8H-退出定時”。

注意：

1. 在加熱模式下按電源鍵，風機會延遲 15 秒後才關閉；
2. 在連續工作 15 小時無任何操作下，產品將會自動關機。

4.2 遙控器面板

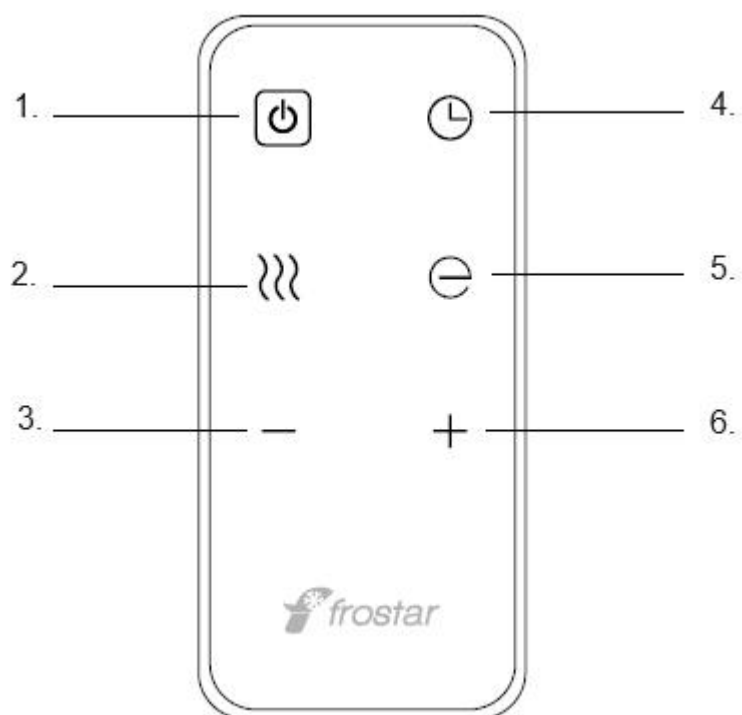

1. 【待機】鍵	4. 【定時】鍵
2. 【模式】鍵	5. 【負離子】鍵
3. 【時間減少】鍵	6. 【時間增加】鍵

1. 【待機】鍵: 按下此鍵，產品進入高檔加熱模式，對應的指示燈亮起；再按一下，產品進入待機狀態。
2. 【模式】鍵: 按此鍵切換加熱模式，依次由低檔模式、風扇、高檔模式之間循環選擇。
3. 【時間減少】鍵: 在定時模式下，按此鍵可減少定時時間，在“8H-7H-6H-5H-4H-3H-2H-1H-0H”之間選擇。
4. 【定時】鍵: 在工作狀態下，按此鍵進入定時設置模式，默認開始定時時間為 0H，可通過【時間增加】鍵“+”或【時間減少】鍵“-”進行定時時間設置，三秒無操作即按照選定的時間進入定時模式。
5. 【負離子】鍵: 在工作狀態下按下此鍵，可進入或退出負離子模式。
6. 【時間增加】鍵: 在定時模式下，按此鍵可增加定時時間，在“0H-1H-2H-3H-4H-5H-6H-7H-8H”之間選擇。

注意:

產品內置的過熱保護器，可防止機體過熱情況出現。當溫度過熱時，產品會自動關閉，直至重設產品時，才會重新啟動。

4.3 遙控器的使用

遙控功能與操作面板功能相似。功能描述詳見【遙控器面板】。

- 首次使用時，如右圖所示，取出電池絕緣膜。



- 遙控器裝入電池時務必保證⊕⊖極正確。如果正負極安裝錯誤，不僅會造成產品故障，還有可能因液體洩漏和電池破裂引發安全事故。
- 不使用時，將電池從遙控器中拔出，在裝有電池的狀態下長時間閒置時，有可能因液體洩漏造成內部髒污，因電池破裂造成火災和人員受傷等安全事故。
- 切勿將遙控器的電池放置在有日光直射的高溫場所中。
- 切勿使用非 CR2025 的電池。否則有可能造成液體洩漏。
- 遙控器電池洩漏的液體不慎進入眼睛時，切勿揉搓，應立即用涼水沖洗，並接受醫生的診斷治療。否則有可能造成失明或眼部殘疾。
- 切勿對電池充電，以免電池漏液、發熱、起火、破裂、引起火災或污染環境。
- 萬一發生電池漏液時，擦拭乾淨後裝入新電池才可使用。
- 廢棄遙控器時，務必拔出電池。在裝有電池的狀態下直接廢棄時，有可能引發意外事故。按照現行法規處理電池。

● 如電池沒電，更換方法如下：

1. 如下圖所示取出電池座；



2. 更換新的 CR2025 鈕扣電池，極性標記顯示在遙控器背面；

3. 關上電池座。

適用範圍

- 產品正面直線距離約 5 米。
- 遙控器與產品中間有障礙物時，可能會影響遙控器的正常運作。

切勿誤吞鋰電池

 
- 新電池及用完的電池務必置於嬰幼兒無法觸及的地方。
- 電池座若無法完全關閉，務必停止使用並置於嬰幼兒無法觸及的地方。
- 若誤吞電池，它會在 2 小時內對身體造成嚴重傷害，並可能導致死亡。
- 萬一發生誤吞或疑似誤吞時，立即就醫。

5. 安裝方法

5.1 座枱使用

放置於穩定的平面上使用。

警告：請勿覆蓋及踐踏

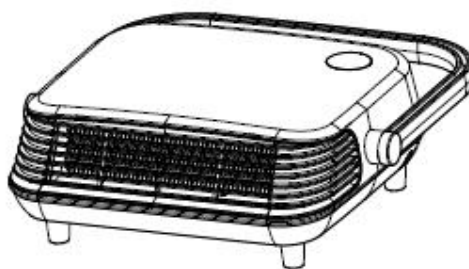

5.2 掛牆使用 (產品在浴室使用時僅允許固定安裝在牆壁上)

注意：

1. 安裝要求：產品離地面距離至少 1.2 米，距離左邊或右邊牆壁至少 0.3 米，距離水源至少 1.2 米。
2. 安裝必需牢固可靠，以防產品鬆動脫落！

取出兩組膨脹螺絲配件。



按產品背面掛架的安裝孔尺寸(圖 1)，在牆壁上鑽出對應的直徑約 6 毫米的固定孔(圖 2)

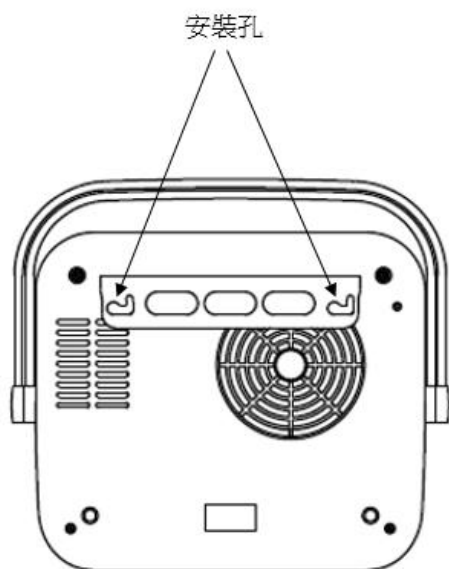 


圖 1



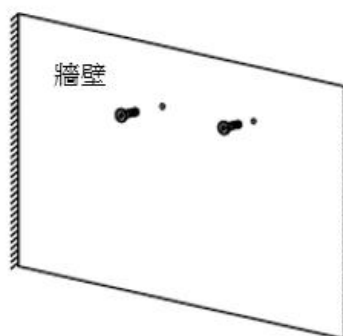 


圖 2

 將塑膠膨脹柱敲入牆壁內的固定孔，螺絲與塑膠膨脹柱的間隙要大於 4.5 毫米。

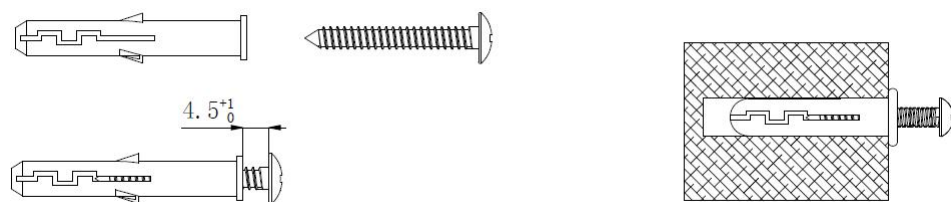


 將產品背面掛架上 L 形孔的大孔對準牆壁上的螺絲頭，扣入螺絲頭後，將產品向右方移動至窄孔，再將產品向下壓緊即可完成安裝。

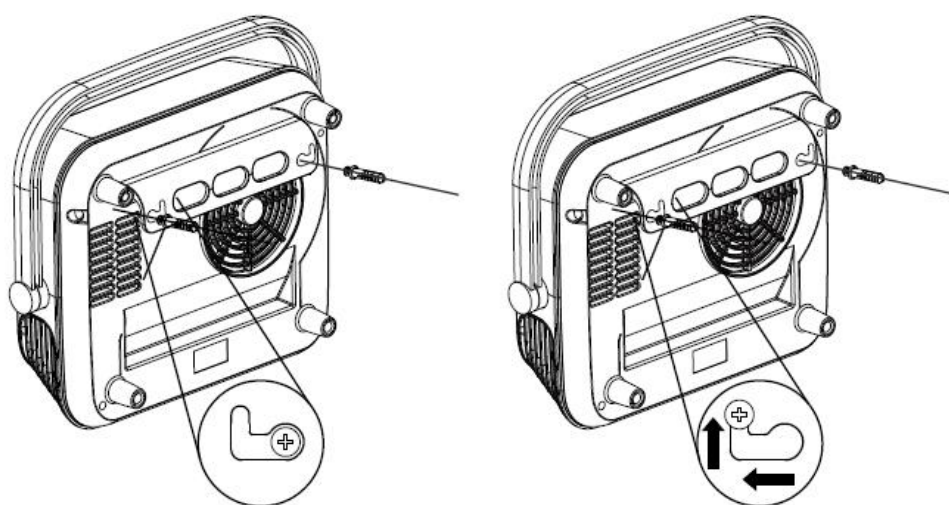

5.3 懸掛使用

 將產品掛於穩固的掛架上，距離背後牆身至少 5 厘米。

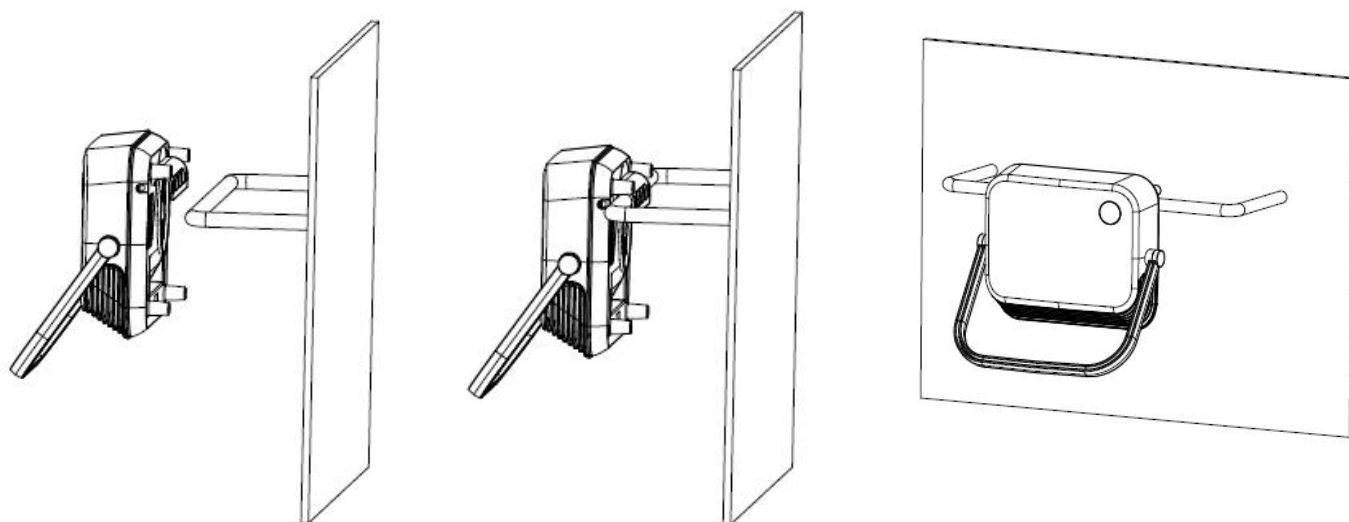

警告：請勿在產品背面放置毛巾、紙片等雜物，以避免遮擋進風口。

6. 產品規格

產品型號	FH-BB2A
額定電壓	220-240 伏特 ~ 50 赫茲
額定功率	2000 瓦
風扇功率	35 瓦
產品尺寸 (闊×深×高) (約)	337 x 351x 124 毫米 (平放)
淨重 (約)	1.9 公斤

7. 故障排除

故障現象	原因	解決方法
產品不能運作。	1. 檢查是否已連接電源。 2. 檢查是否已打開電源開關。	1. 檢查插頭是否完好，以及是否完全插入電源插座。 2. 按【電源】鍵開機。
產品只出冷風不出暖風。	發熱體故障。	聯絡信興電器服務中心有限公司進行檢查及維修。
產品運作途中突然停止。	1. 檢查是否電源插頭鬆脫。 2. 檢查是否進風口或出風口有堵塞。	1. 檢查插頭是否完好，以及是否完全插入電源插座。 2. 移走堵塞物。

*如使用以上方法仍未能解決故障，立即停止使用，並聯絡信興電器服務中心有限公司進行檢查及維修。

8. 特別聲明

1. 本說明書的內容經過核對，如有任何印刷錯誤或內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及規格以廠方生產資料為準。
3. 使用說明書的電子副本可以經電子郵件發送至用戶，如有需要，可致電信興電工工程有限公司：2861 2767。

9. 售後服務

信興電工工程有限公司授權信興電器服務中心有限公司(“服務中心”)提供一年保修服務並由發票/換購收據上的日期起計。服務中心保留所有更改保修條款的權利，恕不另行通知，有關保修條款詳情，可參閱本公司網站。

1. Important Safeguards (Be sure to read carefully and follow these safety directions)

1. Failure or negligence in observing these safety precautions could cause fire, electric shock, human injury or property damage or death.
2. WARNING! Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
3.  WARNING! In order to avoid overheating, do not cover the appliance.
4. WARNING! To reduce the risk of fire, make sure there is 10cm enough space on the top, its surrounding and back for good ventilation. Keep textiles, curtains, or any other flammable material at least 1 meter away from the air outlet.
5. The appliance is a high power consumption electric appliance. Use an independent power source to supply. Do not connect with other high wattage appliances under the same socket, make sure the input voltage match the rated voltage marked on the appliance.
6. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
7. Grasp the plug itself when plug in or remove the plug, do not grasp the power cord.
8. Do not use deficient or loosen socket. Make sure the power connector and plug are dry before use.
9. Regularly check and clean the appliance, air inlet, air outlet, power plug and socket, and clean their dust to avoid the appliance malfunction or fires caused by poor insulation.
10. Always check the condition of the appliance, power cord and plug. If any damage is found, stop using the appliance immediately to avoid hazard and contact Shun Hing Electric Service Centre Limited to check and repair.
11. Do not place heavy objects on the power cord. Never clip, modify, stretch or twist the power cord. Do not operate the appliance when the power cord is tangle or hang over the edge of a table, counter-top or let it touch any hot surface, it may damage the power cord.
12. Fully unwind the power cord before use. Do not use the same socket with other high power consumption appliance or use the extension cord beyond its capacity to avoid danger caused by overload.
13. Clean the appliance after use. Must not immerse the appliance, power cord or plug in water or let them wet, it can cause electric shock or fire.
14. Do not operate the appliance in following places: Humid environment or near water; expose to sunlight, near heat sources or high temperature place such as near an electric oven; unstable surface; near flammable or non-resistant to heat objects (e.g. table cloth, curtain and towel etc.).

 
15. Do not touch, plug in or remove the plug with wet hands, it can cause electric shock.
16. Do not insert any object in the air inlet, air outlet or gaps, it may cause electric shock or injury caused by malfunction.
17. Do not touch the air outlet and avoid any shocks, move or shake the appliance when in use.
18. To avoid danger, use the appliance only as described in the operation manual. Do not use it or any part of the appliance outdoors or out of the intended purpose. Misuse can cause potential injury and malfunction.
19. The appliance is not intended to be operated by means of an external timer or separate remote control system.
20. Place the power cord properly to prevent tripping when walking.
21. Use this heater on a horizontal and stable surface, and make sure use the appliance does not encounter any obstructions.
22. Make sure the power cord is not in contact with the appliance enclosure. Otherwise, insulating material of the power cord may melt resulting in a risk of short circuit.
23. Make sure the appliance is clean and dry before use, or it may cause malfunction.
24. Do not spray flammable liquid to the appliance as it may cause damage to the appliance.
25. Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
26. Do not use this heater if it has been dropped; Do not use if there are visible signs of damage to the heater.
27. Never leave the appliance unattended when in use.
28. Heater is not located immediately below a socket-outlet.
29. After use, remove the plug from the power socket and let the appliance cool down before moving, cleaning or checking.
30. If the appliance has unusual sounds or uneven wind speed, there may be too much dust in the air inlet grille blocking the airflow. Clean it with a brush and it will return to normal.
31. Cleaning and user maintenance shall not be made by children without supervision. Children being supervised not to play with the appliance. Children of less than 3 years should be kept away unless continuously supervised.
32. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
33. The appliance is intended to be used in household and similar applications such as staff kitchen in shops, offices and other working environments; by clients in hotels, motels and other residential type environments.

34. Do not attempt to modify the appliance by yourself or repair with any unauthorized parts, otherwise it will cause hazards and the warranty will become invalid.
35. **CAUTION**-Some parts of this products can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

2. Cleaning and Storage


1. Before cleaning, must turn off the appliance, unplug the power plug and let it cool down completely.
2. If there are stains on the surface of the appliance, use a neutral detergent and soft material such as sponge to clean, wipe it with a wrung wet cloth and dry it.
3. Do not immerse the power cord, plug and the whole unit into water or rinse under the tap.
4. Never use poisonous or corrosive detergent, or clean with harsh cleaning tools (e.g. metal-wired brush) for cleaning.
5. Lack of proper cleaning, the appliance surface will be degraded to shorten the appliance life and dangers may occur.
6. When store, never wrap the power cord around the appliance or clip the power cord, it is to prevent the power cord from deterioration. Put the appliance into a box and store in a dry and cool place.

3. Product Parts

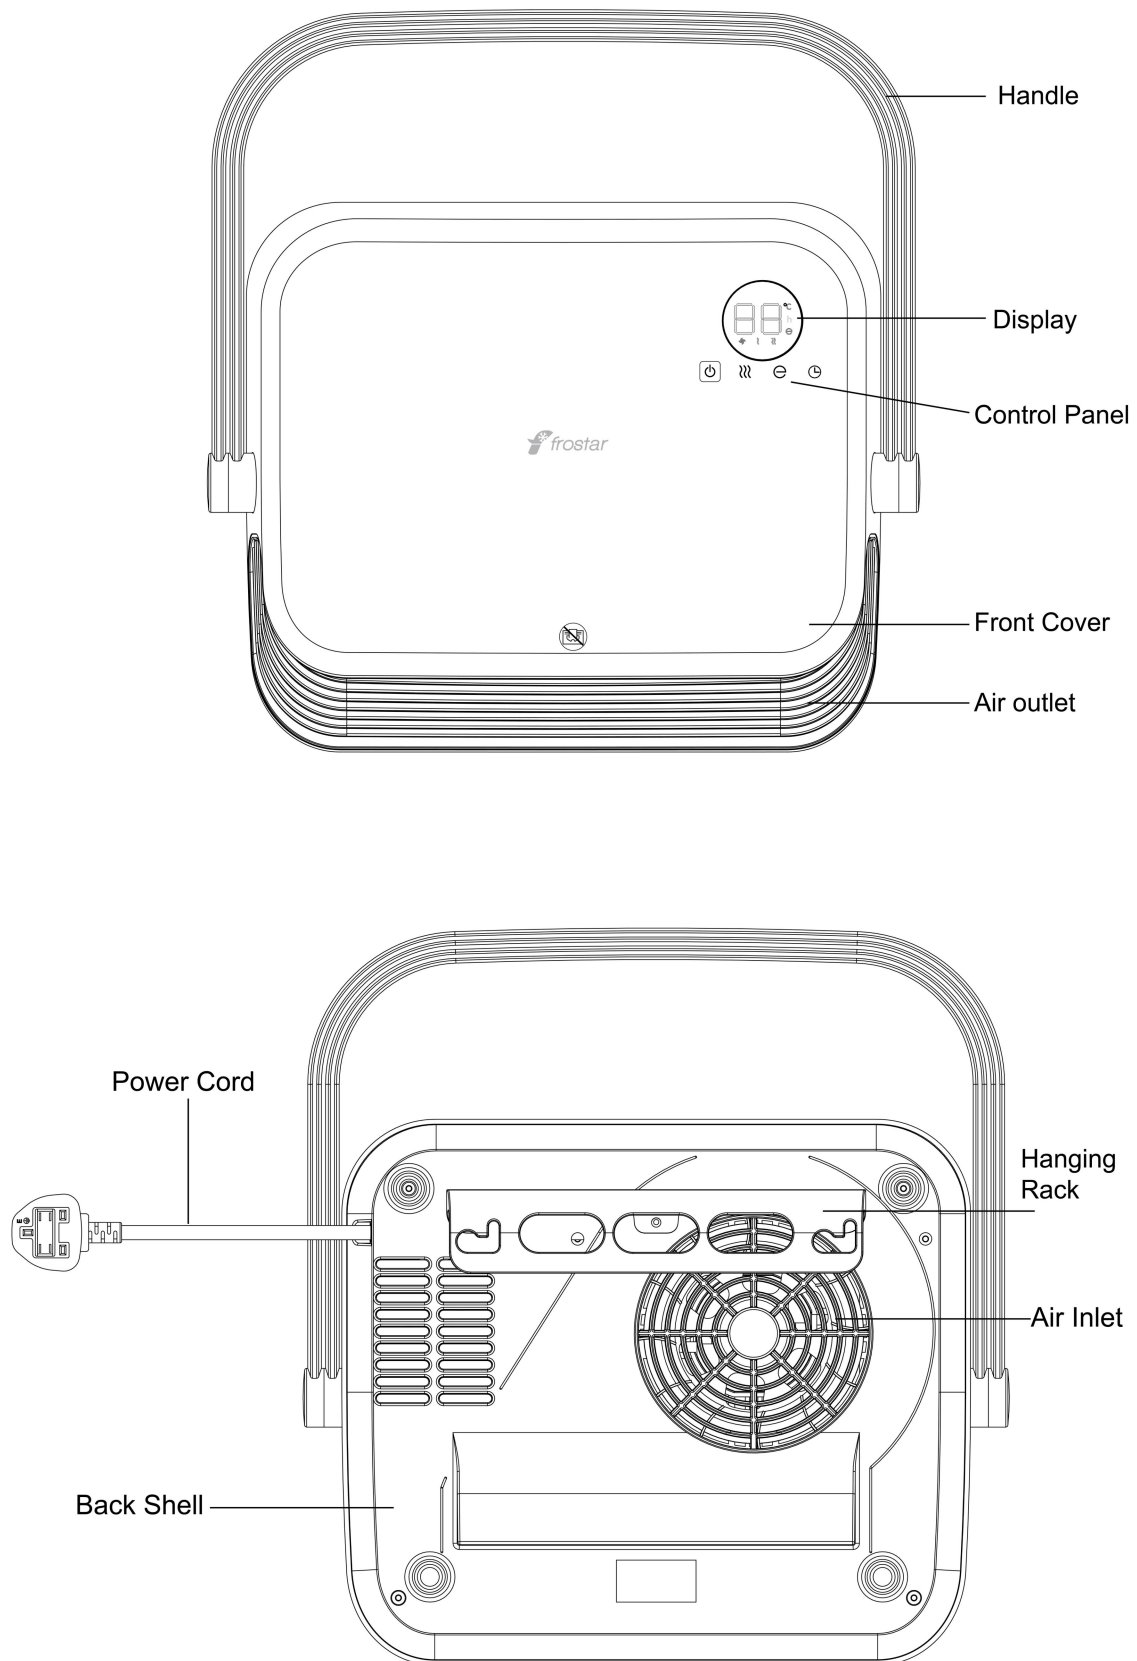

4. Operation Instructions

 4.1 Control Panel

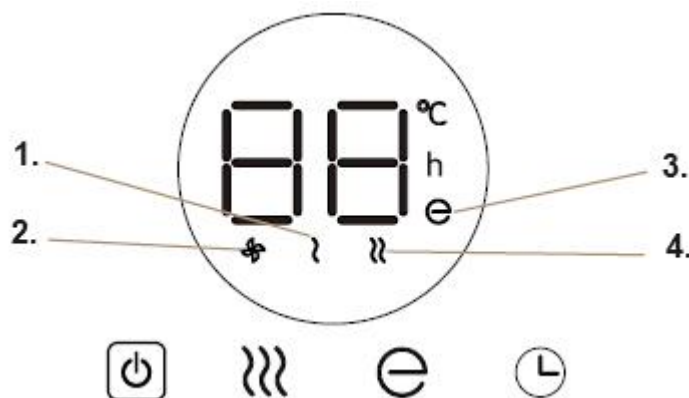

1. Low Mode Indicator	3. Anion Indicator
2. Fan Mode Indicator	4. High Mode Indicator



Power

Power button: Press this button, the appliance enters high-speed heating mode, the corresponding indicator lights up; press it again, the appliance enters standby mode.



Mode

Mode button: Press this button, the appliance switch to low mode (power 1000 Watts), the corresponding indicator lights up; press it again to switch to fan mode (power 35 Watts), the corresponding fan indicator lights up; press the mode button again to switch to high mode (power 2000 Watts), the corresponding high-speed indicator lights up, the operation is repeated in sequence with each press.



Anion

Anion button: Press this button to turn on the anion function and the corresponding indicator light lights up. Press it again to turn off and the corresponding indicator light will be off.



 
Timer

Timer button: Press this button to turn on the timer function, the corresponding indicator lights up, the default start timer is 0H, it will switch to "1H-2H-4H-8H-Exit" in sequence with each press.

Note:

1. Press the power button in the heating mode, the fan will shut down after 15 seconds;
2. The appliance will automatically shut down if there is no operation for 15 hours.

4.2 Remote Control Panel

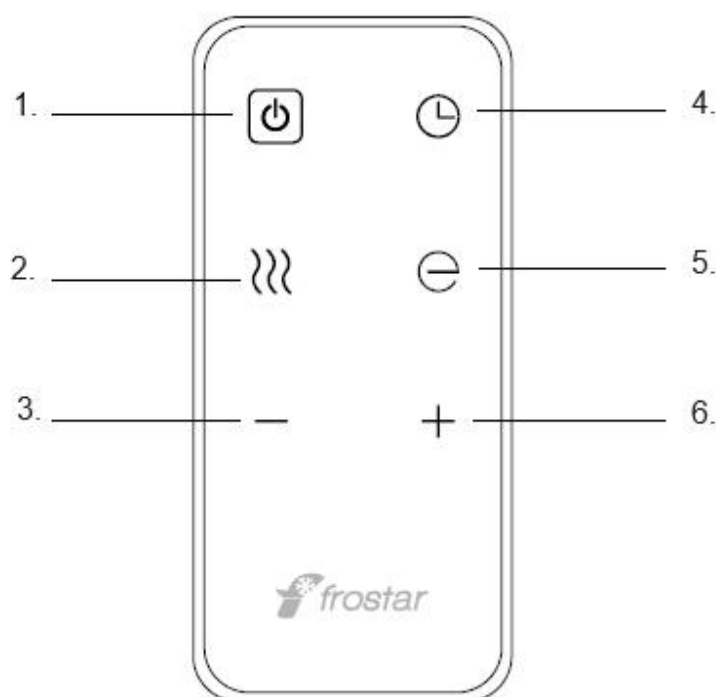

1. 【Standby】 Button	4. 【Timer】 Button
2. 【Mode】 Button	5. 【Anion】 Button
3. 【Time Decrease】 Button	6. 【Time Increase】 Button

1. 【Standby】 Button: Press this button to enter high-speed heating mode, the corresponding indicator lights up; press it again to enter standby mode.
2. 【Mode】 Button: Press this button to switch the heating mode. Low mode, fan, high mode can be chosen in order with each press.
3. 【Time Decrease】 Button: In timer mode, press this button to decrease the timer, "8H-7H-6H-5H-4H-3H-2H-1H-0H" can be chosen with each press.
4. 【Timer】 Button: In working state, press this button to enter the timer setting mode. The default start timer is 0H. You can set the timer by pressing the【Time Increase】button "+" or the 【Time Decrease】 button "-". If there is no selection for three seconds, the timer mode will be entered according to the selected hours.
5. 【Anion】 Button: In working state, press this button to enter or exit anion mode.
6. 【Time Increase】 Button: In timer mode, press this button to increase the timer, "0H-1H-2H-3H-4H-5H-6H-7H-8H" can be chosen with each press.

Note:

The built-in overheat protector can prevent the appliance from overheating. When the temperature is overheated, the appliance will shut down automatically and will not restart until the appliance is reset.

4.3 Using the remote control

The remote control functions are similar to the operation panel functions. For a detailed description of the functions, refer to 【Remote Control Panel】.

- For first use, remove the battery insulation film as shown in the right picture.



- Make sure the $\oplus \ominus$ polarity is correct when installing the battery in the remote control. If the positive and negative poles are installed incorrectly, it will not only cause the appliance failure, but also may cause accidents due to liquid leakage and battery rupture.
- When not in use, remove the battery from the remote control. If the battery is installed and left idle for a long time, there may cause internal dirt due to liquid leakage, or battery rupture may cause accidents such as fire and personal injury.
- Do not place the battery in a high temperature place with direct sunlight.
- Do not use batteries other than CR2025. It may cause liquid leakage.
- If the liquid leaked from the battery accidentally enters the eyes, do not rub it, but rinse it with cool water immediately and seek medical treatment from a doctor. It may cause blindness or eye disability.
- Do not charge the battery to avoid battery leakage, heat, fire, rupture, fire or environmental pollution.
- In case of battery leakage, wipe it clean and install new battery before use.
- When disposing of the remote control, make sure to remove the battery. Disposing directly with the battery installed may cause accidents. Dispose the battery in accordance with current regulations.

● If the battery is dead, replace it as follows:

1. Remove the battery holder as shown in the picture below;



2. Replace with a new CR2025 battery, the polarity mark shown on the back of the remote control;
3. Close the battery holder.

Possible range of use

- The distance from the front of the appliance is about 5 meters.
- If there is an obstacle between the remote control and the appliance, it may affect the operation of the remote control.

Do not swallow lithium battery

 
- Keep new and used battery out of reach of infants and young children.
- If the battery holder cannot be completely closed, stop using it and keep it out of reach of infants and young children.
- If the battery is swallowed, it will cause serious damage to the body within 2 hours and may cause death.
- In case of accidental or suspected swallowing, seek for medical attention immediately.

5. Installation

5.1 For desk use

Place on a stable and even surface.

WARNING: Do not cover or step on the product.

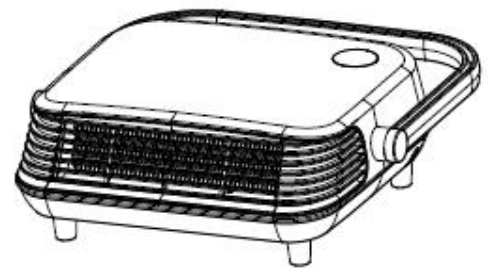

5.2 For wall mounting

(The appliance is only allowed to be installed on the wall when used in the bathroom).

 
CAUTION:

1. Installation requirement: appliance height from the ground should be at least 1.2 meter and distance from the left or right wall should be at least 0.3 meter, and at least 1.2 meter from the water source.
2. The installation must be firm and able to prevent the appliance from loosening or falling off.


Take out two sets of expansion screw accessories.



According to the installation hole size of the hanging rack at the back of the appliance (Picture 1), drill a corresponding fixing hole with a diameter of about 6 mm on the wall (Picture 2)

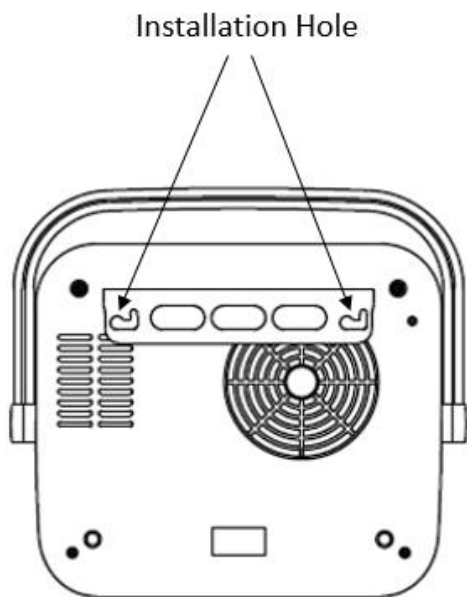


Picture 1

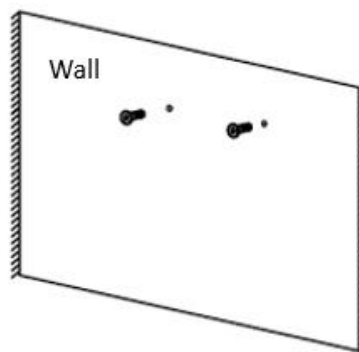 


Picture 2

 Knock the plastic expansion column into the fixing hole in the wall. The gap between screw and plastic expansion column must be greater than 4.5 mm.

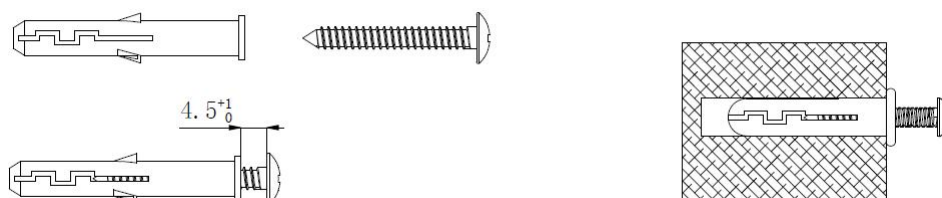


 Aim the large hole of the L-shaped hole on the back of the appliance with the screw head on the wall. After inserting the screw head, move the appliance from the right to the narrow hole, then press the appliance down to complete the installation.

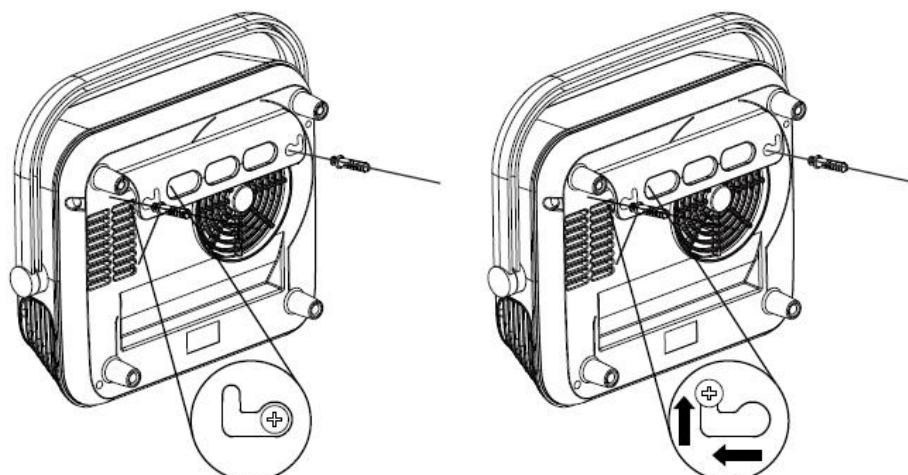

5.3 For hook mounting

 Hang the appliance to a stable rack, distance from the back wall should be at least 5cm.

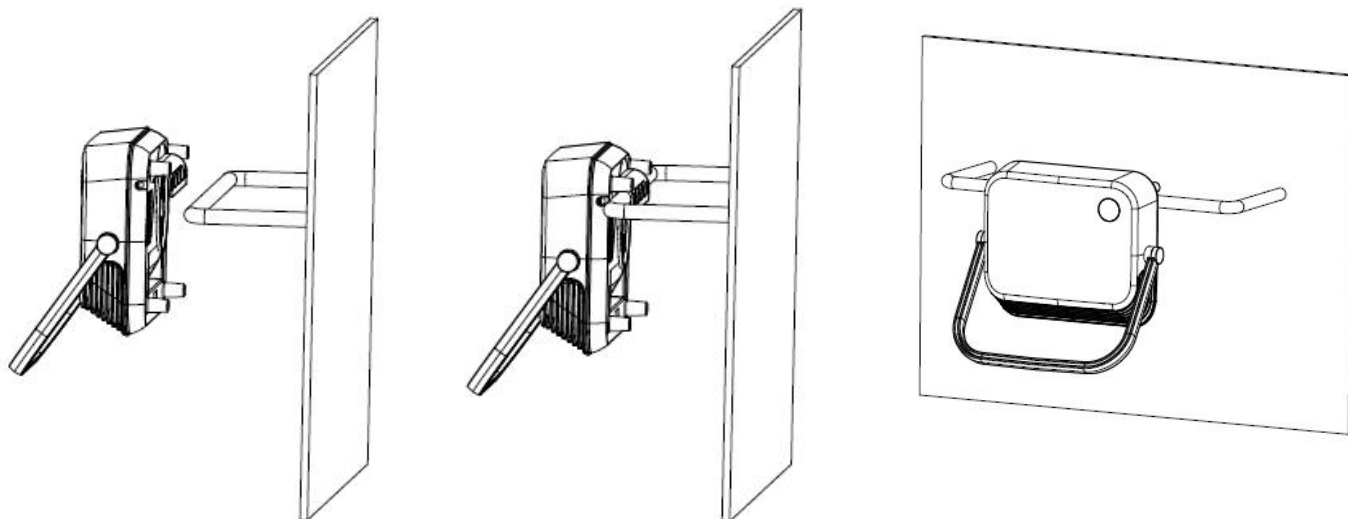

WARNING: To avoid blocking the air inlet, be careful not to put towels, paper pieces or any sundries on the back of the appliance.

6. Product Specifications

Model	FH-BB2A
Rated voltage	220-240V ~ 50Hz
Rated power	2000W
Fan power	35W
Product size (W x D x H) (approx.)	337 x 351 x 124mm (Horizontal placement)
Net weight (approx.)	1.9kg

7. Troubleshooting

Problem	Reason	Solution
The appliance does not work.	1. Check if the power is connecting. 2. Check if the appliance is turn on.	1. Check if the plug is in good condition and fully inserted into the socket. 2. Press 【Power】 button to turn on the appliance.
Heating modes do not work.	Malfunction of the heater.	Contact Shun Hing Electric Service Centre Ltd. to check and repair.
Appliance stops working suddenly.	1. Check if the power plug is loose. 2. Check if the air inlet or air outlet is blocking.	1. Check if the plug is in good condition and fully inserted into the socket. 2. Remove the blockages.

*If the above solutions cannot fix the problem, stop using immediately and contact Shun Hing Electric Service Centre Ltd. to check and repair.

8. Special Avowal

1. The information above has been checked; our company reserves the hermeneutic power to any print errors or misunderstanding on the content.
2. Please note that any technology improvement will be added to the new versions of operation manual without any prior notices. The appliance appearance and specification are subject to the actual appliance.
3. E-copy of operation manual can be sent by e-mail on request, please call Shun Hing Electric Works and Engineering Co., Ltd at 2861 2767.

9. After Sales Service

Shun Hing Electric Works & Engineering Co., Ltd. authorizes Shun Hing Electric Service Centre Ltd. ("SHESC") to offer one year warranty service to the appliance commencing from the date of purchase invoice or redemption voucher. SHESC reserves the right to change the warranty terms without prior notice. For details of the warranty terms, you can refer to our website.

信興電工工程有限公司

SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓

電話：2861 2767

圖文傳真：2865 6706

網址：<http://www.shew.com.hk>

電郵：shew@shunhinggroup.com

Office: 9/F, Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, H.K.

Tel: 2861 2767

Fax: 2865 6706

Website: <http://www.shew.com.hk>

E-mail: shew@shunhinggroup.com

保養及維修 Maintenance and Repair Service:

信興電器服務中心有限公司

SHUN HING ELECTRIC SERVICE CENTRE LTD.

香港新界葵涌勝耀街2號信興中心11樓

電話：2406 5666

圖文傳真：2408 0316

網址：<http://www.shesc.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. H.K.

Tel: 2406 5666

Fax: 2408 0316

Website: <http://www.shesc.com/en>

客戶服務中心

香港新界葵涌勝耀街2號信興中心1樓

九龍尖沙咀東部麼地道67號半島中心B座9樓

澳門慕拉士大馬路193-199號南嶺工業大廈5樓I座

Customer Service Centre

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

9/F, Block B, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon

Avenida de Venceslau de Morais, No. 193-199, 5 andar - 1, Edf. Industrial Nam Leng, Macau

有關最新之香港及澳門客戶服務中心資料，參閱信興服務中心網址：<http://www.shesc.com/zh>

For the latest information of Hong Kong and Macau service centre, please visit <http://www.shesc.com/en>