


**R**asonic

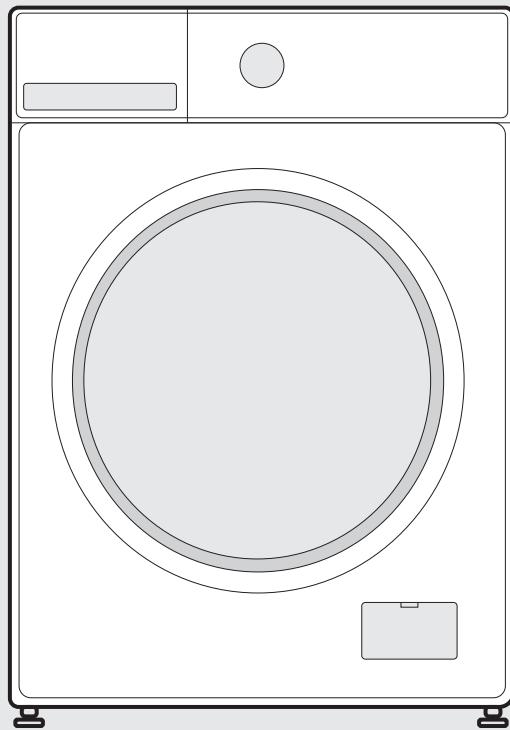

**Washer Dryer**

# **USER MANUAL**

**RW-AR86SF**  
**(For Household Use Only)**

Warning notices: Before using this product, please read this manual carefully and keep it for future reference. The design and specifications are subject to change without prior notice for product improvement. The images in the user manual may not match with the real object and are for reference only.

# CONTENTS

SAFETY INSTRUCTIONS	02
SPECIFICATIONS	07
PRODUCT OVERVIEW	08
QUICK START GUIDE	09
PRODUCT INSTALLATION	11
OPERATION INSTRUCTIONS	15
CLEANING AND MAINTENANCE	24
TROUBLE SHOOTING	28
DISPOSAL AND RECYCLING	29
SPECIAL AVOWAL, AFTER SALES SERVICES	30



CAUTION: HOT SURFACE !



CAUTION: RISK OF FIRE !



Read all instructions and explanations before use. Follow the instructions carefully.  
Keep the user manual handy for later use.

# SAFETY INSTRUCTIONS

- This appliance is not intended for use by persons(including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused.
- The openings must not be obstructed by a carpet.
- The product is intended only for home use.
- The maximum permissible inlet water pressure, 1 MPa, for appliances intended to be connected to the water mains.

The minimum permissible inlet water pressure, 0.05 MPa, if this is necessary for the correct operation of the appliance.

- That the appliance is not to be used if industrial chemicals have been used for cleaning.
- That the lint trap has to be cleaned frequently, if applicable.
- That lint must not to be allowed to accumulate around the appliance.
- Do not dry unwashed items in the appliance.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.
- Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the appliance.
- Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.
- Remove all objects from pockets such as lighters and matches.
- **WARNING:** Never stop a appliance before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.
- **WARNING:** The appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by a utility.
- For appliances with ventilation openings in the base, that a carpet must not obstruct the openings.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the appliance door is restricted.

Model	Washing/Drying Capacity
RW-AR86SF	8.0/6.0kg

# SAFETY INSTRUCTIONS

The product is intended only for home use and for textiles in household amounts suitable for washing. This appliance is for indoor use only and not intended for built-in use. Only use according to these instructions. The appliance is not intended for commercial use.

Any other use is considered as improper use. The producer is not responsible for any damage or injury that may result from it.

## Explanation of Symbols

### DANGER



This symbol indicates that there are dangers to the life and health of persons due to extremely flammable gas.

### WARNING OF ELECTRICAL VOLTAGE



This symbol indicates that there is a danger to life and health of persons due to voltage.

### WARNING



The signal word indicates a hazard with a medium level of risk which, if not avoided, may result in death or serious injury.

### CAUTION



The signal word indicates a hazard with a low degree of risk which, if not avoided, may result in minor or moderate injury.

### NOTE



The signal word indicates important information (e.g. damage to property), but not danger.

### OBSERVE INSTRUCTIONS



This symbol indicates that a service technician should only operate and maintain this appliance in accordance with the operating instructions.

Please read the following safety information thoroughly and follow it strictly to minimize the risk of fire or explosion, electric shock and to prevent property damage, personal injury or loss of life. Failing to follow these instructions shall void any warranty.



## WARNING: Electric Shock Hazard

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- If the machine is damaged, it must not be operated unless repaired by the manufacturer, its service agent or similarly qualified persons.
- Risk of electric shock!
- The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised that they do not play with the appliance.
- Children of less than 3 years should be kept away unless continuously supervised.
- Animals and children may climb into the machine. Check the machine before every operation.
- Do not climb or sit on the appliance.

## Installation Location and Surrounding

- All washing and additional substances are to be kept in a safe place out of the reach of children.
- The openings must not be obstructed by a carpet.
- Keep the appliance clear from heating sources and direct sunlight to avoid plastic and rubber parts to corrode.
- Do not use the appliance in humid environments or rooms containing explosive or caustic gas. In case of water leakage or water splashes, let the appliance dry in the open air.
- The appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted. .
- Do not operate the machine in rooms with a temperature of below 5°C. This can cause damages to parts of it. If it is unavoidable, make sure to drain the water completely from the appliance after every use (see "Cleaning and Maintenance - Cleaning the drain pump filter") to avoid damages caused by frost.
- Never use flammable sprays or substances in the immediate proximity of the appliance.
- That lint must not to be allowed to accumulate around the washer dryer (not applicable for appliances intended to be vented to the exterior of the building).

## Installation

- Remove all packaging material and transport bolts before using the appliance. Otherwise, serious damage may result.
- This appliance is equipped with a single inlet valve and can be connected to the cold water supply only.
- Mains plug must be accessible after installation.
- Before washing clothes for the first time, the product shall be operated once throughout all the procedures without any clothes inside.
- Do not put any excessively heavy objects on the appliance, like water containers or heating devices.

## Electrical Connection

- Make sure the supply cable is not trapped by the machine, or it can get damaged.
- Connect the product to a grounded outlet protected by a fuse complying with the values in the "Specifications" table. The grounding installation has to be made by a qualified electrician. Ensure that the machine is installed in accordance with the local regulations.
- Water and electrical connections must be carried out by a qualified technician in accordance with the manufacturer's instructions and local safety regulations.

### **WARNING:**

- Do not use multiple plugs or extension cords.
- The appliance must not be supplied through an external switching device, such as a timer or connected to a circuit that is regularly switched on and off by a utility.
- Do not pull the plug out of the mains outlet if there is flammable gas around.
- Never pull out power plug with wet hands.
- Always pull at the plug, not at the cable.
- Always unplug the appliance if it is not being used.

## Water Connections

- Check the connections of the water inlet tubes, the water tap and the outlet hose for possible problems due to changes of water pressure. If the connections loosen or leak, close the water tap and get it repaired.
- Do not use the appliance before the pipes and hoses are installed properly by qualified persons.
- Glass door may become very hot during the operation. Keep children and pets far away from the machine while it is operating.
- The water inlet and outlet hoses have to be safely installed and remain undamaged. Otherwise, water leakage can occur.
- Do not remove the drain pump filter while there is still water in the appliance. Big quantities of water can leak out, and there is a risk of scalding due to hot water.

## Operation and Maintenance

### **WARNING:**


- Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipate.
- The machine is not to be used if industrial chemicals have been used for cleaning. Risk of explosion.

- Never use any flammable, explosive or toxic solvents. Do not use gasoline and alcohol etc. as detergents. Only select detergents that are suitable for machine washing.
- Make sure that all pockets are emptied. Sharp and rigid items such as coins, brooches, nails, screws, stones etc. may cause serious damages to this machine.
- Remove all objects from pockets such as lighters and matches before use the appliance.
- Thoroughly rinse items that have been washed by hand.
- Do not dry unwashed items in the appliance.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, wax and wax removers should be washed in hot water with an extra amount of detergent before being dried in the appliance.
- Items containing foam rubber (latex foam), shower caps, water proof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine.
- Fabric softeners or similar products should be used as specified by the fabric softener instructions.
- Never try to open the door forcefully.
- The door will unlock shortly after the end of a cycle.
- Do not close the door with excessive force. If it is found difficult to close the door, check if the clothes are properly inserted and distributed.
- Always unplug the appliance and close the water tap before cleaning and maintenance and after each use.
- Never pour water over the appliance for cleaning purpose. Risk of electric shock!
- Repairs shall only be carried out by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- The producer will not be responsible for damages caused by the intervention of not authorized persons.

## Transport



- Before Transport:
  - Bolts shall be reinstalled to the machine by a specialized person;
  - Accumulated water shall be drained out of the machine.
- This appliance is heavy. Transport with care. Never hold any protruding part of the machine when lifting. The machine door can not be used as a handle.

# SPECIFICATIONS

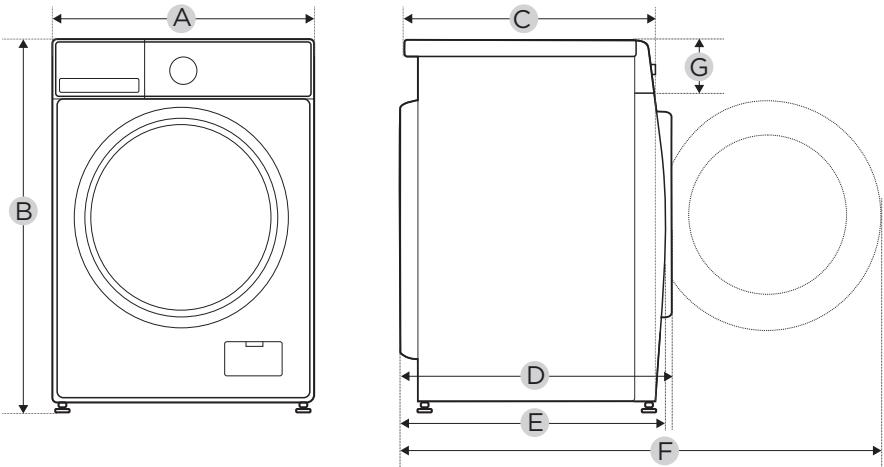

Model	RW-AR86SF
Rated Voltage	220-240V~, 50Hz
MAX.Current	10A
Standard Water Pressure	0.05MPa~1MPa
Washing Capacity	8.0kg
Drying Capacity	6.0kg
Dimension	
A	595mm
B	850mm
C	475mm
Weight	63kg
Rated Power	1900W
Drying Power	1300W
Reference Dimension	
D	540mm
E	521mm
F	985mm
G	135mm

# PRODUCT OVERVIEW

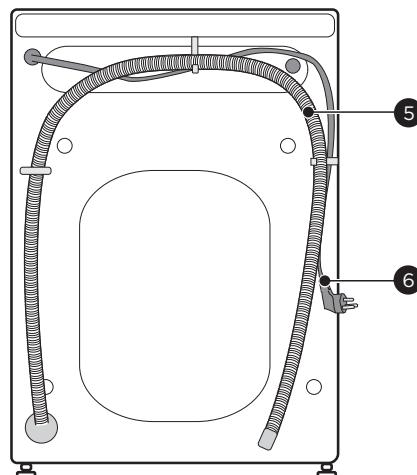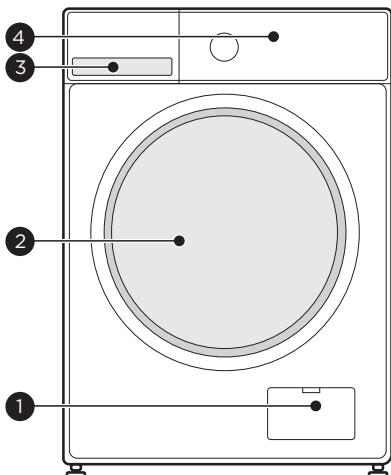

① Drain Pump Filter

② Door

③ Detergent dispenser

④ Control panel

⑤ Drain hose

⑥ Power supply cord

## NOTE

The product picture is for reference only, please refer to real product.


## Accessories

4 x Cover caps

1 x Supply hose cold water

1 x Owner's manual

Acoustic sponge

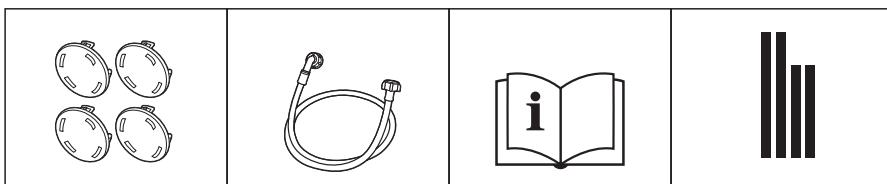

# QUICK START GUIDE




## CAUTION


- Before washing, please make sure the machine is installed properly.
- Your appliance was thoroughly checked before it left the factory. To remove any residual water and to neutralize potential odors, it's recommended to clean your appliance before first use. For this reason, recommended to clean the inner drum by running the "DRUM CLEAN" or other program with the optional temperature of 90°C. Be careful not to put laundry and detergent in the machine.

## 1. Before Washing


1. Plug in

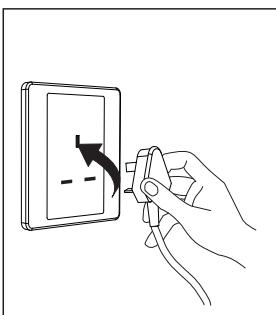


2. Open tap

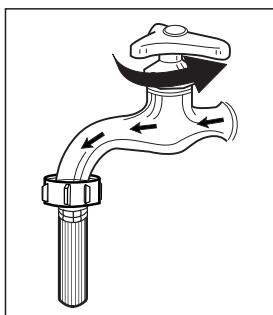


3. Load

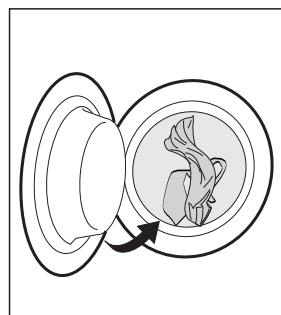

4. Close door

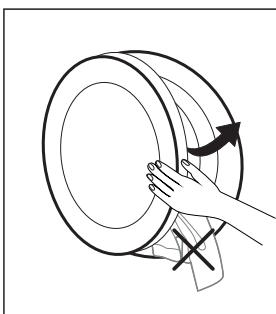

5. Add detergent

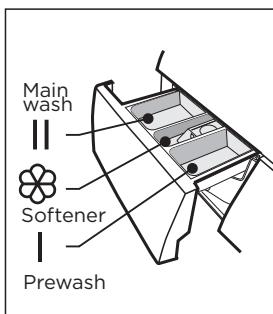


## NOTE


- Detergent need to be added in compartment I if the pre-wash function is selected.
- When closing the door, make sure that the clothes are not caught between the sealing ring and the machine door to prevent water leakage caused by pulling and damaging the sealing ring during operation.

## 2. Washing


1. Select programme

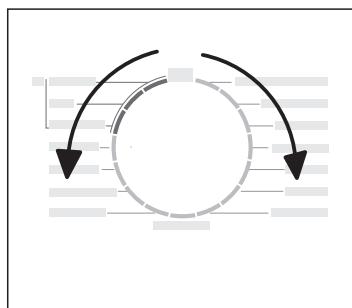

2. Select function or remain default settings

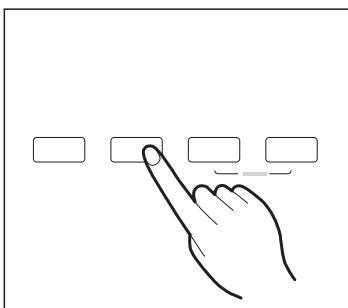

3. Press Start/Pause to start the programme

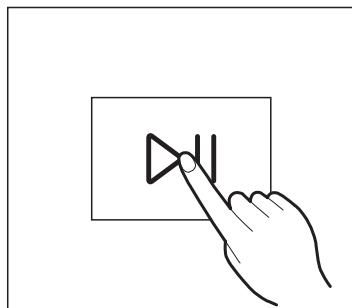


## 3. After Washing

Buzzer beep and "End" on display.

# PRODUCT INSTALLATION



## Tools Needed If Installation By Yourself (not include)

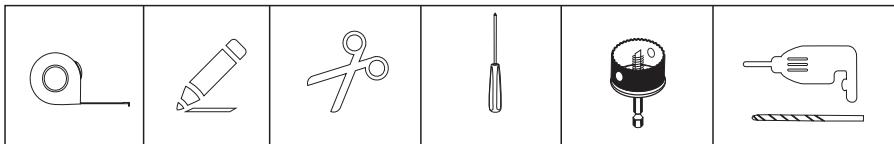

## Installation Area

### ⚠️ WARNING


- Stability is important to prevent the product from wandering!
- Make sure the machine is standing leveled and stable.
- Make sure that the product does not stand onto the power cord.
- Make sure to maintain the minimum distances from the walls as shown in the picture.

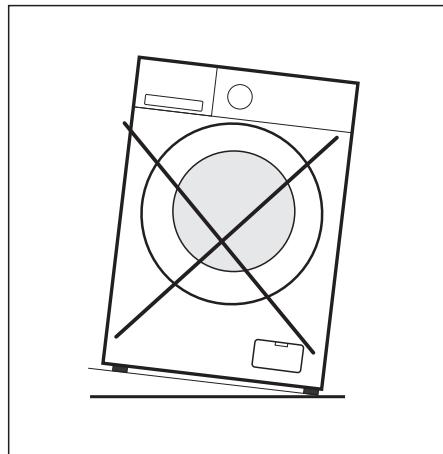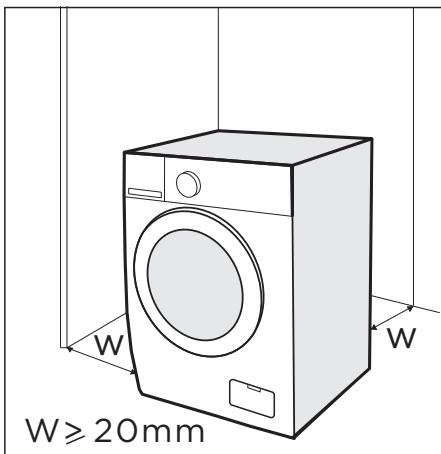

Before installing the machine, the location characterized as follows shall be selected:

- 1.Rigid, dry, and level surface.
- 2.Avoid direct sunlight.
- 3.Sufficient ventilation.
- 4.Room temperature is above 5 °C .
- 5.Keep far away from the heat sources such as coal or gas burning appliances.

## Unpacking the Machine

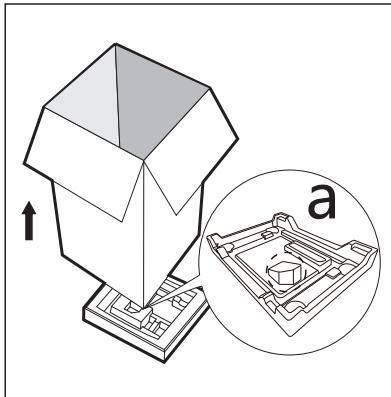

### ⚠ WARNING

- Packaging material (e.g. Films, Styrofoam) can be dangerous for children.
- There is a risk of suffocation ! Keep all packaging well away from children.




1. Remove the cardboard box and styrofoam packing.
2. Lift the machine and remove the base packaging. Make sure the small triangle foam (a) is removed with the bottom packaging together. If not, lay the unit down on the side surface and remove it manually.
3. Remove the tape securing the power supply cord and drain hose.
4. Remove the inlet hose from the drum.

## Remove Transport Bolts

### ⚠ WARNING

You must remove the transport bolts from the backside before using the product.


1. Loosen the 4 transport bolts with a spanner.
2. Remove the bolts including the rubber parts and keep them for future use.
3. Close the holes using the cover caps.

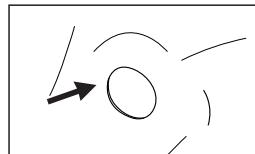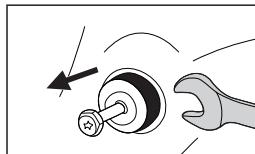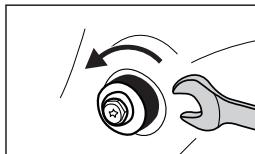

## Levelling the Machine

### ⚠ WARNING

The lock nuts on all four feet must be screwed tightly against the housing.

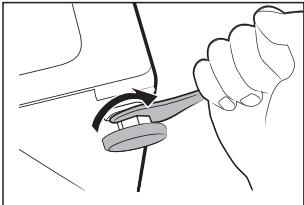


1. Loosen the lock nut.
2. Turn the foot until it reaches the floor.
3. Adjust the legs and lock the nuts with a spanner. Make sure the machine is level using a spirit level.

## Connect the Water Supply Hose


### ⚠ WARNING

To prevent leakage or water damage, follow the instructions in this chapter.

- Do not kink, crush or modify water inlet hose.

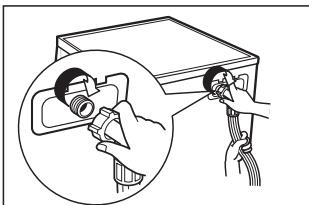

Connect the water supply hose to the water inlet valve and a water tap with cold water as indicated.

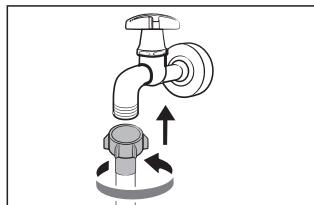

### ⚠ NOTE

- Connect manually, do not use tools. Check if the connections are tight.


## Drain Hose

### ⚠ WARNING


- Do not kink or protract the drain hose.
- Position drain hose properly, otherwise damage might result in water leakage.
- It is not allowed to remove the buckle of drain pipe.

There are two ways to place the end of drain hose:

1. Put it into the water trough.

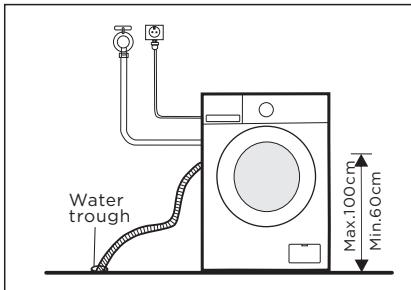



2. Connect it to the branch drain pipe of the trough.

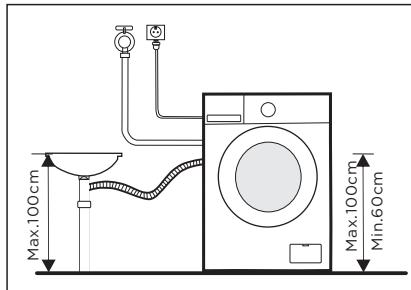

## Acoustic Sponge

### NOTE

- Please make sure to assemble the acoustic sponges, which can effectively reduce the noise caused by the machine while working, in order to provide you with a more peaceful and quiet living environment.

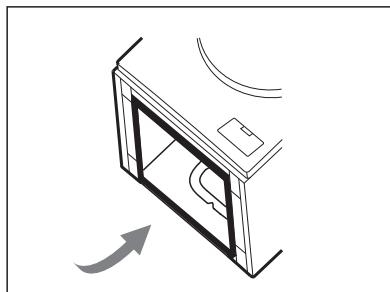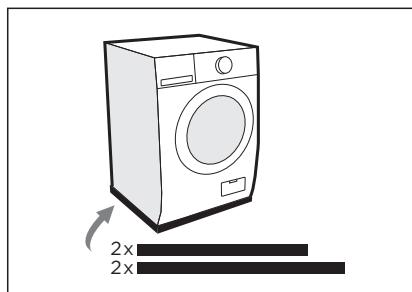


1. Get the machine laid on the floor, using some soft material like foam or clothes between the machine and floor for a protection;
2. Stick the 2x longer sponges to the longer bottom edges of machine, and the 2x shorter sponges to the shorter bottom edges.

# OPERATION INSTRUCTIONS


## Before Each Washing

- The ambient temperature of the machine should be 5°C-40°C. If used under 0°C, the inlet valve and draining system may be damaged. If the machine is installed under freezing conditions, it should be transferred to normal ambient temperature to ensure the water supply hose and drain hose can unfreeze before use.
- Please check your laundry care labels and the detergent use instructions before wash. Use non-foaming or less-foaming detergent suitable for machine properly.


1. Take all items out of the pockets

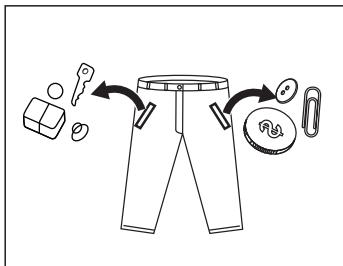


2. Sort laundry according to color and textile type

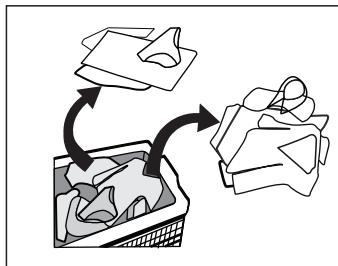

3. Tie together long textile strips and belts, close zips and button

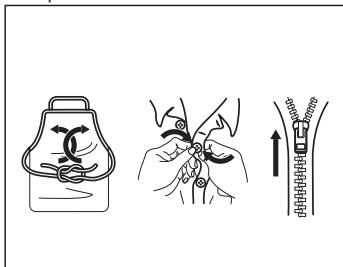

4. Put small items into a laundry bag

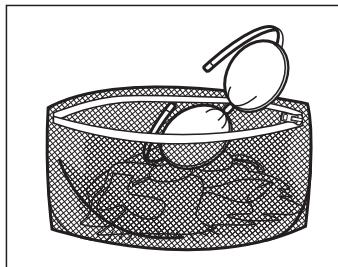


## ⚠️ WARNING

- It is prohibited to wash or dry clothes that adhere to any volatile or flammable substance such as cleaning agent, dry cleaning agent, spot remover, acetone, gasoline, kerosene, beauty oil, massage oil, animal oil, machinery oil, dry cleaning oil, volatile agent, alcohol, turpentine, wax, wax remover, banana water, disinfectant tablets, resin, etc.
- Washing single clothes items may easily create big eccentricity. Therefore it is suggested to add one or two more laundry items to the wash so that spin can be done smoothly.
- Do not wash, spin or dry water-proof seats, mats, or clothing.

## Detergent Dispenser

- I Pre wash
- II Main wash
- ❖ Softener
- ↙ Release button to pull out the dispenser

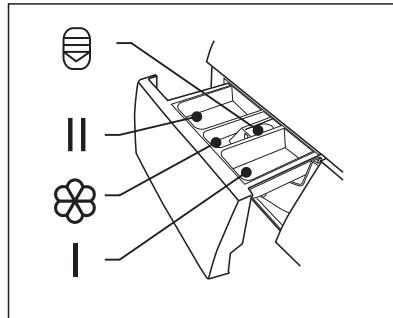

### ⚠ CAUTION

- Detergent only need to be added in "compartment I" after selecting pre-wash function.
- Do not put laundry beads into the detergent dispenser.


Programme	I	II / ⚡	❖	Programme	I	II / ⚡	❖
COTTON	●	○		DRUM CLEAN			
MIX	●	○		SPIN ONLY			
BABY CARE	●	○		BULKY	●	○	
QUICK 15'	●	○		WOOL	●	○	
1 hr WASH+DRY	●	○		ECO 40-60	●	○	
DRY ONLY				RAPID 59'	●	○	
DAILY WASH+DRY	●	○		20°C	●	○	
SYNTHETIC	●	○		PET HAIR CARE WASH	●	○	

● Means must

○ Means optional

## Control Panel

Model: RW-AR86SF

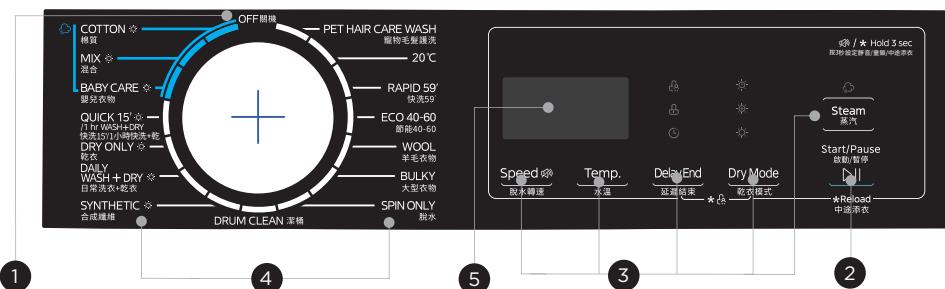

### 1 OFF

Turn the appliance off.

### 2 Start/Pause

Start or pause your programme.

### 3 Option

This allows you to select additional functions.

### 4 Programmes

Available according to the laundry type.


### 5 Display

The display shows settings, estimated remaining time, options and status messages.

## NOTE

- The Chart is reference only, please refer to real product as standard.

## Display

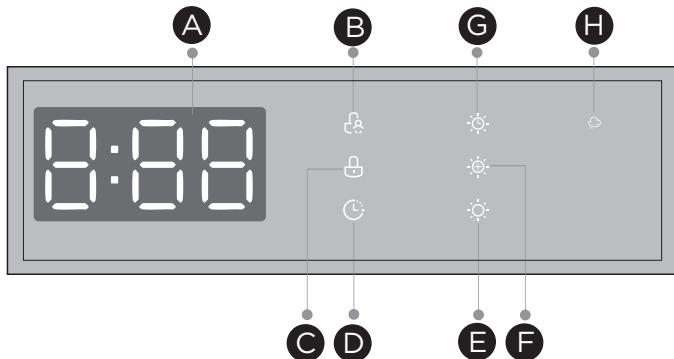

### A Display

Wash Time

125

Speed

600

End

End

Delay Time

2H

Error

E30

Temp.

30

### B Child Lock

### C Door Lock

### D Delay End

### E Normal Dry

### F Extra Dry

### G Timed Dry

### H Steam

## Option



### Spin Speed

When needed, the spinning speed can be adjusted by pressing the Speed button in the following steps: 0-400-600-800-1000-1200-1400



### Delay End

1. Select a programme.
2. Press the Delay End button to choose the delaying time 0-24H.
3. Press [Start/Pause] to start the delay end operation.



Choose programme



Setting time



Start

To cancel the Delay End function, press the "Delay End" button before starting the program until the display shows 0 H. If the program has already started, switch the appliance off and afterwards on and select a new programme.



### Temp.

When needed, the washing temperature can be adjusted by pressing the temperature button in the following steps:

Cold - 20°C - 30°C - 40°C - 60°C - 90°C.



### Steam

 
Steam is applicable for daily laundries.

The steam can deeply penetrate the fiber, which effectively eliminate bacterias and germs, preventing odors and protecting your health.



### Child Lock

To avoid mis operation by children.



Press [Delay End] and [Dry] simultaneously for 3 sec. until the buzzer beep. The child lock indicator switches on.



### CAUTION

When the Child Lock is activated, the display will alternately show "CL" and the remaining time.

Pressing any other button will cause the Child Lock indicator to flash.

When the program ends, "CL" and "End" will alternate on the display.

The Child Lock deactivates the function of all buttons except the Child lock button!

Press [Delay End] and [Dry Mode] simultaneously for 3 sec. can deactivate the Child Lock!

Please deactivate the Child Lock before selecting a new program!



### Dry

Press the Dry button continuously to choose the dry level: Normal Dry/

Extra Dry / Timed Dry.

※Normal Dry\*(d-2)

※Extra Dry\*(d-3)

※Timed Dry: Drying your laundry and finish within given time.

(30/60/90/120/180 minutes)

\*In Normal Dry and Extra Dry modes, the machine uses a built-in temperature sensor to monitor the drum temperature and automatically adjusts the drying time accordingly.

### NOTE

- Drying hints
  - Clothes could be dried after spinning.
  - To ensure quality dry the textiles, please classify them according to their kinds and the drying temperature.
  - Synthetic should be set the proper drying time.
  - If you want to iron the clothes after drying, please put them for a while.
- Clothes not suitable for drying
  - Particularly delicate items such as synthetic curtains, woolen and silk, clothes with metal inserts, nylon stockings, bulky clothes, such as anoraks, bedcovers, quilts, sleeping bags and duvets must not be dried.
  - Clothes padded with foam-rubber or materials similar to foam-rubber must not be machine dried.
  - Fabrics containing residues of setting lotions or hair sprays, nail solvents or similar solutions must not be machine dried in order to avoid the formation of harmful vapours.

Cycle	Additional functions	Cycle	Additional functions
COTTON		DRUM CLEAN	
MIX		SPIN ONLY	
BABY CARE		BULKY	
QUICK 15'		WOOL	
1 hr WASH+DRY		ECO 40-60	
DRY ONLY		RAPID 59'	
DAILY WASH+DRY		20°C	
SYNTHETIC		PET HAIR CARE WASH	



Mute the buzzer



Choose the Programme

Press the [Speed] button for 3sec.,  
the buzzer is mute.

To act the buzzer function, press the button again for 3 seconds. The setting will be kept until the next reset.



### CAUTION

- After Muting the buzzer function, the sounds will not be activated any more.



Reload

This operation can be executed during the washing progress. When the drum is still rolling and there is large amount of water with high temperature in the drum. The state is unsafe and the door cannot be opened forcefully. To Press 3sec. to reload, and start the clothes adding in the midway function. Please follow the steps as below:

1. Wait until the drum stops rotation.
2. The door lock is unlocked.
3. Close the door when the clothes are reloaded and press the [Start/Pause] button.



› Reload the clothes ›



Start

Press 3 sec.



### CAUTION

- Don't use the Reload function when the water level over the edge of the inner tub or the temperature is higher.

## Programmes

COTTON	Hard-wearing textiles, heat-resistant textiles made of cotton or linen.
RAPID 59'	Washing few and not very dirty clothes quickly.
SYNTHETIC	Wash synthetic articles, for example: shirts, coats, blending. While washing the knitting textiles, detergent quantity shall be reduced due to its loose string construction and easily forming bubbles.
BABY CARE	Washing the baby's clothes, it can make the baby's wear cleaner and make the rinse performance better to protect the baby skin.
DRY ONLY	Select it to dry clothes .The drying time according to the load .
MIX	Mixed load consisting of textiles made of cotton and synthetics.
20°C	Able to clean lightly soiled cotton laundry, at a nominal temperature of 20°C.
PET HAIR CARE WASH	Care wash the pet hair and fur from clothing, restrain growth of germ.
QUICK 15' 1hr WASH+DRY	<p>This procedure defaults to Quick 15' , press the "Dry" to switch to 1hr WASH+DRY.</p> <p>This procedure is suitable for washing few and not very dirty clothes quickly.</p> <p>For small synthetic clothes or shirts, load limitation is 1 kg (about 4 shirts).</p>
DAILY WASH+DRY	The standard energy program for washing and drying.
WOOL	Hand or machine-washable wool or richwool textiles. Especially gentle wash programme to prevent shrinkage, longer programme pauses (textiles rest in wash liquor).
SPIN ONLY	Spins and drains the water.
ECO 40-60	Able to clean normally soiled cotton laundry declared to be washable at 40°C or 60°C, together in the same cycle.
DRUM CLEAN	Specially set in this machine to clean the drum and tube. It applies 90°C high temperature sterilization to make the clothes washing more green. When this programme is performed, the clothes or other washing cannot be added. The customer can use this programme regularly according to the need.
BULKY	This program is specially designed for washing Bulky.

## NOTE

- The Chart is reference only, please refer to real product as standard.
- When the programme is finished , "End" will flash on the display, please turn the knob to the Off position.

## Washing Programmes Table

Programme	Wash/Dry Load (kg)	Default Temp. (°C)	Default Time (h:min)
	8.0/6.0		
⌚ COTTON	8.0/6.0	40	1:28
⌚ MIX	8.0/6.0	40	0:58
⌚ BABY CARE	8.0/6.0	60	2:01
QUICK 15'	2.0/--	Cold	0:15
⌚ 1 hr WASH+DRY	1.0/1.0	Cold	0:58
⌚ DRY ONLY	--/6.0	--	2:55
⌚ DAILY WASH+DRY	6.0/6.0	40	4:07
⌚ SYNTHETIC	4.0/3.0	40	1:25
DRUM CLEAN	--	90	1:18
SPIN ONLY	8.0/--	--	0:12
BULKY	8.0/--	40	1:48
WOOL	2.0/--	Cold	0:59
ECO 40-60	8.0/--	30	1:04
RAPID 59'	4.0/--	30	0:59
20°C	4.0/--	20	1:08
PET HAIR CARE WASH	4.0/--	40	2:04

### ⌚ NOTE

- The parameters in this table are only for user's reference. The actual parameters may be different from the parameters in above table.

# CLEANING AND MAINTENANCE

## Cleaning and Maintenance

### ⚠️ WARNING

- Always unplug the appliance and close the water tap before cleaning and maintenance.
- When cleaning the product, do not stretch your hands, feet or arms into the bottom of the machine case to prevent scratches.

### Cleaning the Cabinet

Proper maintenance on the machine can extend its working life. The surface can be cleaned with diluted non-abrasive neutral detergents when necessary. If there is any water overflow, use a towel to wipe it off immediately. Never use sharp items to clean the appliance.



### ⚠️ CAUTION

- Never use abrasive or caustic agents. Such as formic acids or its diluted solvents or similar substances, like alcohol or chemical products.

### Cleaning the Drum


Any rust stains left inside the drum by metal articles must be removed immediately using chlorine-free detergents. Never use steel wool for cleaning the drum!

### >Note

- Keep any laundry away from the machine while cleaning the drum.

### Cleaning the Door Seal and Glass

Wipe the glass and seal after each wash to remove lint and stains. If lint builds up it can cause leakages.  
Remove any coins, buttons and other objects from the seal after each wash.  
Clean the door seal and glass every month to ensure the normal operation of the appliance.

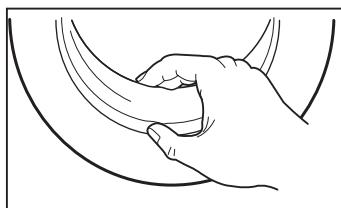


## Cleaning the Inlet Filter


### NOTE

- Diminishing water flow is a sign that the filter needs to be cleaned.

1. Close the tap and remove the water supply hose from it.

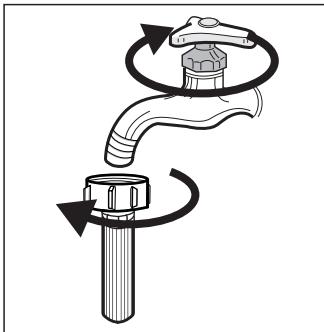


2. Clean the filter with a brush.

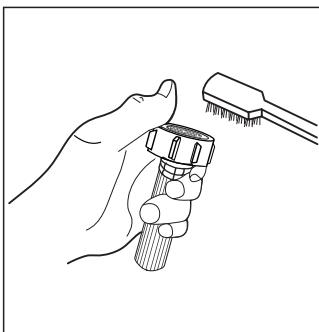


3. Unscrew the water supply hose from the backside of the machine.

Pull out the filter with long nose pliers.

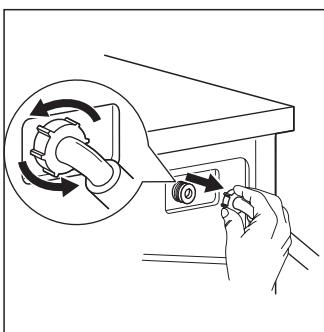

4. Use a brush to clean the filter.

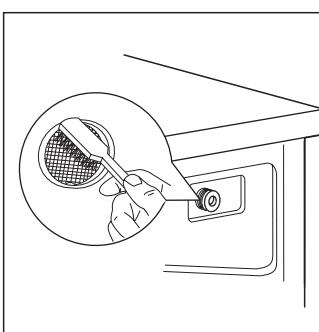


5. Reinstall the filter to the water inlet and reconnect the water supply hose.

6. Clean the Inlet filter every 3 months to ensure the normal operation of the appliance.


## Cleaning the Detergent Dispenser

- Press down the release [  ] on the softener cover and pull the dispenser drawer out of the recess.
- Lift the softener cover off the dispenser drawer and wash both items with water.
- Clean the inside of the recess with a brush.
- Restore the softener cover and push the drawer back into the recess.


1. Press the release and remove the dispenser drawer

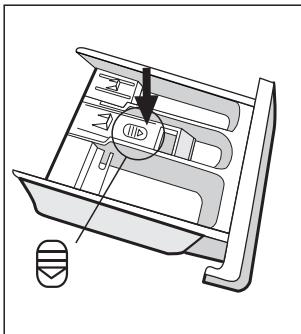


2. Clean the dispenser drawer and the softener cover under water

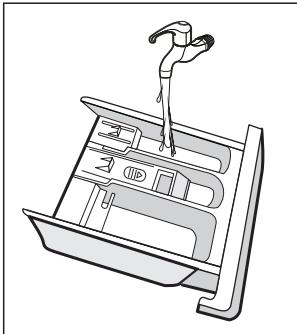

3. Clean the recess with a soft brush

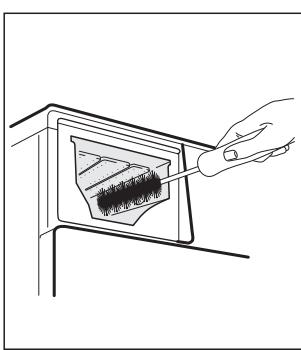

4. Insert the dispenser drawer

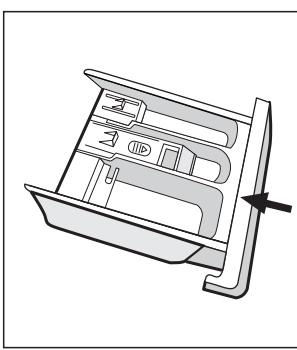

### NOTE


- Do not use abrasive or caustic agents to clean plastic parts.
- Clean the detergent dispenser every 3 months to ensure the normal operation of the appliance.

## Cleaning the Drain Pump Filter


### ⚠️ WARNING

- Make sure that the machine has finished the washing cycle and is empty. Switch it off and unplug it before cleaning the drain pump filter.
- Be careful of hot water. Wait for water cooling down. Risk of scalding!
- Clean the filter periodically every 3 months to ensure the normal operation of the appliance.


1. Open the drain pump filter cover cap

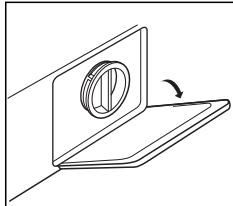


2. Open the filter by turning to the counter clockwise

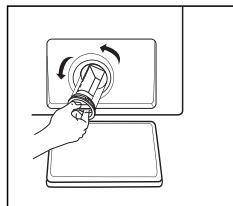

3. Remove extraneous matter

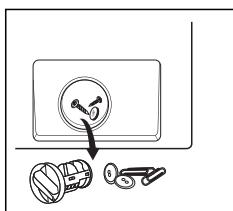

4. Close the drain pump filter cover cap

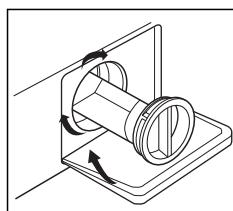

### ⚠️ CAUTION

- When the appliance is in use and depending on the programme selected there can be hot water in the pump. Never remove the pump cover during a wash cycle, always wait until the appliance has finished the cycle, and is empty. When closing the drain pump cover cap, ensure drain pump filter is securely re-tightened.

# TROUBLE SHOOTING

Whenever there is a problem with the appliance, check if you can solve it following the tables below. If the problem persists, please contact Shun Hing Electric Service Centre Ltd.

Description	Possible Cause	Solution
Appliance does not start	Door is not closed properly. Clothes are stuck.	Close the door properly and restart. Check the laundry.
Door can't be opened	Safety protection is activated.	Disconnect the power and restart.
Water leakage	Connections are not tight enough.	Check and fasten the water inlet pipe. Check and clean the outlet hose.
Detergent residues in the detergent dispenser	Detergent is damp and/or clotted.	Clean and wipe the detergent dispenser dry.
Indicator or display does not work	PC board or harness have connection problems.	Switch off the power and check if the mains plug is connected properly.
Abnormal noise	Fixing bolts are still in place. Floor is not solid or level.	Check if the fixing bolts have been removed. Make sure the appliance is installed on a solid and level floor.

## Error Codes

Description	Possible Cause	Solution
<b>E30</b>	Door is not closed properly.	Close the door properly and restart.
<b>E10</b>	Water injecting problem during wash cycle.	Check if the water pressure is high enough. Straighten the water pipe. Clean the inlet valve filter.
<b>E21</b>	Overtime water draining	Check the drain hose for blockage.
<b>E12</b>	Water overflow	Restart the appliance.
<b>EXX</b>	Others	Restart the appliance. If problem persists, please contact the Shun Hing Electric Service Centre Ltd.

# DISPOSAL AND RECYCLING

## Important Instructions for Environment

From 31 December 2018, the disposal licensing control, import and export permit control and landfill disposal ban in respect of abandoned regulated electrical equipment (REE) have commenced. Any person who is engaged in the storage, treatment, reprocessing or recycling of abandoned REE must obtain a waste disposal license; a permit is required for the import and export of abandoned REE; and abandoned REE is no longer be accepted for disposal at the landfills and other designated waste disposal facilities (e.g. refuse transfer stations).



## **SPECIAL AVOWAL**

1. The information above has been checked. Our company reserves the hermeneutic power to any printing errors or misunderstanding on the content.
2. If there are technical improvements on the appliance, the user manual will be updated without any prior notice. The product appearance and color are subject to the actual appliance.
3. The e-copy of user manual can be sent by e-mail on requested, please call Shun Hing Electric Works & Engineering Co. Ltd. hotline at 2861 2767.

## **AFTER SALES SERVICES**

For any defect, in the judgment of technician from Shun Hing Electric Service Centre Limited, caused under normal use, we are responsible for repairing or replacing parts of the said electrical appliance free of charge within one year guarantee period commencing from the date of purchase. Any defective part which has been replaced shall become our property. Guarantee service does not cover the repair or replacement of accessories, power cord or cabinet, etc. Additional charges shall be levied if services are required.

Please present the official invoice and the guarantee certificate with the sales point's chop or the redemption center's chop for free maintenance. For enquiries, please call Shun Hing Electric Service Centre Limited hotline at 2406 5666.

Turn off the power and contact Shun Hing Electric Service Centre Ltd. as soon as any of the following events occur.

- The circuit breaker frequently trips or the fuse blows regularly.
- If water or foreign objects have accidentally entered the washing machine.
- If there is abnormal sound during operation.

## 信興電工工程有限公司

### SHUN HING ELECTRIC WORKS & ENGINEERING CO., LTD

辦公室: 香港九龍尖沙咀東部麼地道 67 號半島中心 9 樓

OFFICE: 9/F, PENINSULA CENTRE, 67 MODY ROAD, TSIMSHATSUI EAST, KOWLOON, HONG KONG

電話 TEL: (852) 2861 2767 傳真 FAX: (852) 2865 6706

網址 WEBSITE: [www.rasonic.hk](http://www.rasonic.hk) 電郵 EMAIL: [shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

## 保養及維修 MAINTENANCE AND REPAIR SERVICE

### 信興電器服務中心有限公司

### SHUN HING ELECTRIC SERVICE CENTRE LTD.

辦公室: 香港新界葵涌勝耀街 2 號信興中心 11 樓

OFFICE: 11TH FLOOR, SHUN HING CENTRE, 2 SHING YIU STREET, KWAI CHUNG, NEW TERRITORIES, HONG KONG

電話 TEL: (852) 2406 5666 傳真 FAX: (852) 2408 0316

網址 WEBSITE: [www.shesc.com](http://www.shesc.com)

## 消耗品/附件銷售熱線 CONSUMABLES/ ACCESSORIES SALES HOTLINE

電話 TEL: (852) 2406 5666

## 客戶服務中心 CUSTOMER SERVICE CENTRES

香港新界葵涌勝耀街 2 號信興中心 1 樓

1ST FLOOR, SHUN HING CENTRE, 2 SHING YIU STREET, KWAI CHUNG, NEW TERRITORIES, HONG KONG

電話 TEL: (852) 2406 5439 傳真 FAX: (852) 2408 1389

澳門慕拉士大馬路 193-199 號南嶺工業大廈 5 樓 I 座

AVENIDA DE VENCESLAU DE MORAIS, NO. 193-199, 5 ANDAR-I, EDF. INDUSTRIAL NAM LENG, MACAU

電話 TEL: (853) 2836 2928 傳真 FAX: (853) 2833 6405

有關最新之客戶服務中心資訊, 請參閱信興電器服務中心有限公司網址 [www.shesc.com](http://www.shesc.com) 或致電維修服務熱線查詢。

For the latest information of Shun Hing Electric Service Centre Ltd, please visit [www.shesc.com](http://www.shesc.com) or call us at our hotline.

RW/ARM/0925

