 




RBF-C94W / RBF-C94B

WiFi 智能無葉風扇 WiFi Smart Bladeless Fan

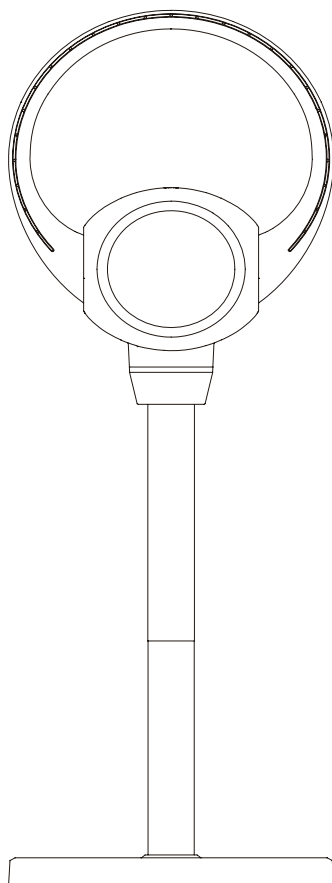

僅適用於家庭使用
For Household Use Only

使用說明書

OPERATION MANUAL

在使用本產品前，仔細閱讀本說明書，閱讀後小心收藏，以備日後查閱。

Read the operation manual carefully before using and keep it in a safe place for future reference.

本說明書中的圖示可能有與實物不同的地方，僅供參考。

Some figures in the manual may not match with the real object, just for reference only.

1. 安全注意事項 (務必詳細閱讀及遵守安全指導)

1. 務必嚴格遵守以下說明之注意事項以防止對使用者或其他人造成傷害或財物損失。
2. 本產品不適用於身體、感官或精神能力下降或缺乏經驗和知識的人士 (包括兒童) 使用，除非有負責其安全的人士對其進行監督或指導。清潔和保養工作不得讓兒童在無人監督的情況下進行。
3. 切勿與其他高功率的電器共用同一電源插座；或超額使用電線拖板，以免電力負荷過重而導致火災及危險。
4. 經常檢查產品、電源線及適配器，如有損壞，為避免危險，應立即停止使用，並聯絡信興電器服務中心有限公司安排檢查及維修。
5. 在連接電源後，切勿移動本產品。
6. 移動、清潔或進行任何維修前，必須先關閉電源，並拔出電源適配器。
7. 在插入或拔除適配器時，應手握穩適配器本身，不要抓住電源線。切勿在電源線上放重物、夾住、改裝、用力拉扯或扭曲電源線。
8. 電源線嚴禁擺放在地毯下，不能被地毯、其他裝置或類似物品覆蓋，電源線應遠離行走區域，放置在不會被絆倒的地方。
9. 拔除電源適配器前必須關閉產品上的所有功能操作。
10. 長時間不使用本產品時，應拔下電源適配器。包好本產品防止灰塵進入機內，並放置乾燥通風處存放。
11. 切勿在進風口或出風口處放置任何物品或遮蓋物。確保風口保持暢通，並無灰塵、絨毛、頭髮或其他任何可能阻礙空氣流通的障礙物。
12. 產品必須平放使用，前方保持 30 厘米空間，機側及背部則保持 15 厘米空間，以確保產品保持空氣流通。產品切勿放置在牆櫃及櫥櫃使用及堵塞排氣口。
13. 本產品應放置在遠離熱源、周圍無腐蝕性氣體，通風良好且乾燥的地方；不能在室外、潮濕、高溫的地方使用。
14. 嚴禁將本產品、電源線、電源適配器浸入水中；或被水濺濕；或靠近熱源，以免造成觸電或火災。
15. 切勿在本產品附近使用任何空氣清新劑或類似產品。切勿對本產品使用清潔劑或潤滑劑。
16. 避免產品出風口長時間、直接向嬰幼兒吹風。
17. 為了安全起見，當人離開產品時，必須關機，以免發生意外事件。
18. 切勿擅自改裝產品或使用非生產商提供的原裝配件，否則可能造成危險及保養將無效。
19. 切勿在有爆炸性或易燃氣體的環境中操作本產品及其部件。
20. 本產品只可使用隨機的電源適配器。
21. 應當對小孩進行監管，以確保他們不會玩耍本產品。

2. 清潔和保養


1. 必須在待機模式下拔除電源適配器後，才可進行清潔。
2. 切勿將電源線、適配器或主機浸在水中清潔或在水龍頭下沖洗。為防止產品損壞，不要讓水滲入產品內部零件。
3. 切勿使用粗糙的潔具(如鋼絲刷)、有毒或含腐蝕性的清潔劑進行清潔。
4. 使用乾軟布輕輕擦拭產品表面；如表面比較髒，可使用稀釋的中性清潔劑及微濕軟布進行擦拭；然後再用乾軟布抹乾。
5. 使用軟刷或吸塵器清潔進風口和出風口的灰塵，積聚太多灰塵會影響產品使用效果，在灰塵較少時及時進行清潔。建議最少每個月清潔產品一次。
6. 清潔完畢後，必須待產品完全乾燥才可使用。
7. 儲存時，切勿將電源線纏繞在產品四周或壓住電源線，以免造成電源線損壞。
8. 如長時間不使用本產品，應將產品收藏回包裝盒內並放置在乾燥陰涼且安全的地方。

3. 產品規格


3.1 風扇

產品型號	RBF-C94W / RBF-C94B
額定電壓	24 伏特 
額定功率	35 瓦
產品尺寸 (闊×深×高) (約)	320 x 320 x 940 毫米
淨重 (約)	4.1 公斤

3.2 電源適配器

輸入電壓 / 頻率 / 電流	100-240 伏特~, 50/60 赫茲, 1.2 安培
輸出電壓 / 電流 / 功率	24 伏特  , 1.5 安培, 36 瓦

 
4. 產品說明

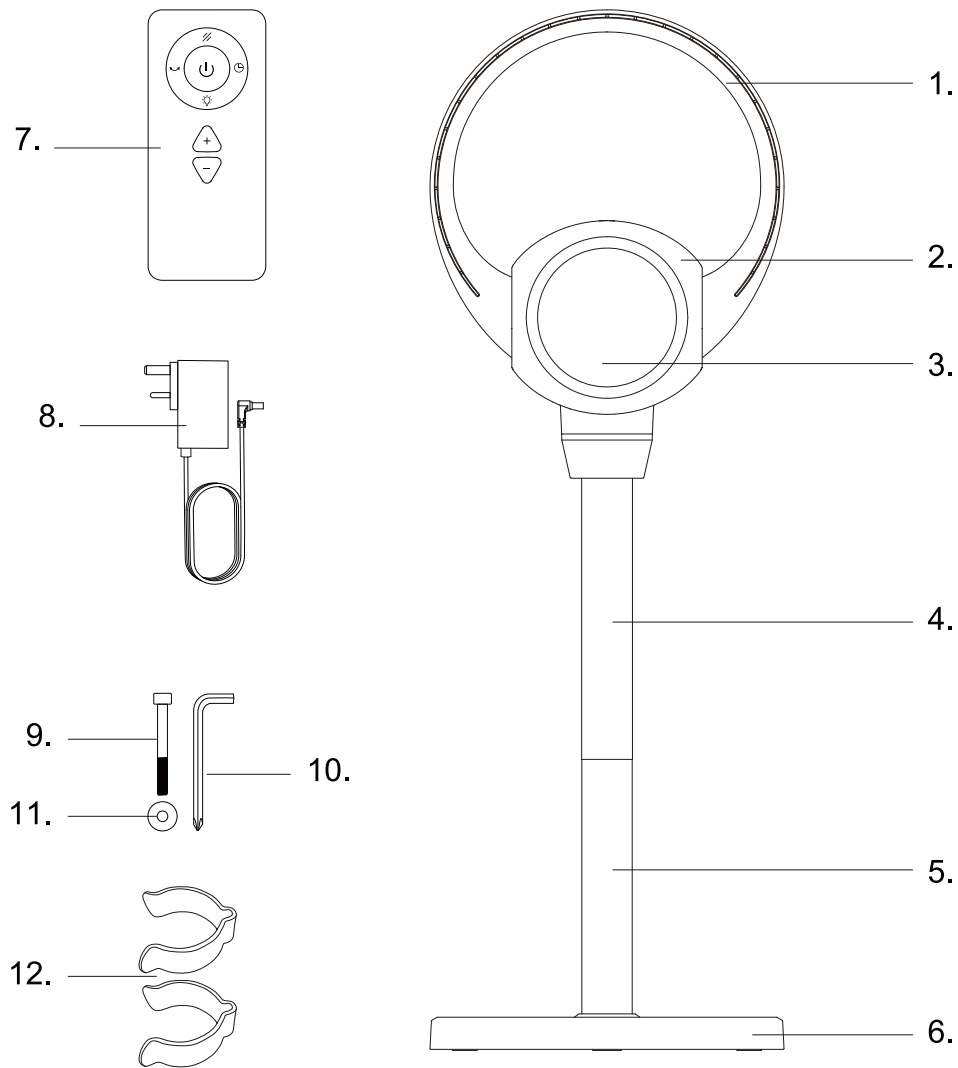

1. 風圈及出風口	7. 遙控器
2. 主機	8. 電源適配器
3. 控制面板	9. 底座螺栓
4. 上支柱	10. 扳手
5. 下支柱	11. 墊片
6. 底座	12. 電源線卡扣


5. 安裝方法

 座地使用 / 使用支柱

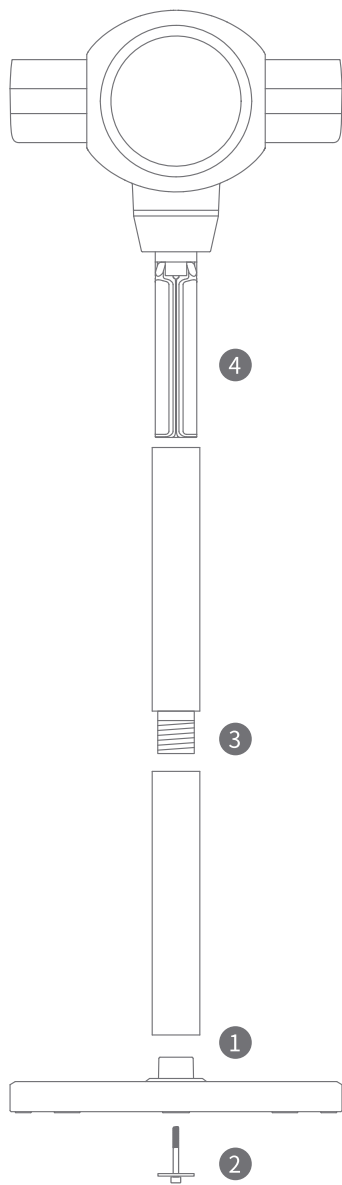

1. 將下支柱插入底座；
2. 先將墊片裝入螺栓，再將螺栓插入底座並用扳手順時針擰緊；
3. 將上支柱順時針旋轉固定到下支柱上；
4. 將主機插入上支柱，插入角度需對準按鈕即可完成安裝。

 
座枱使用 / 不使用支柱

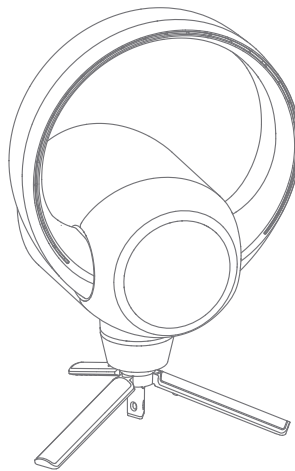


打開主機底部支柱，
可以擺放在枱面上。

6. 操作說明

6.1 產品使用

 
1. 接通電源後，產品會發出提示音，啟動/待機鍵  亮著，產品進入待機狀態。
2. 如需調整出風角度，可待產品停止運行後，單手握住支架，另一隻手輕抬或輕按風圈。

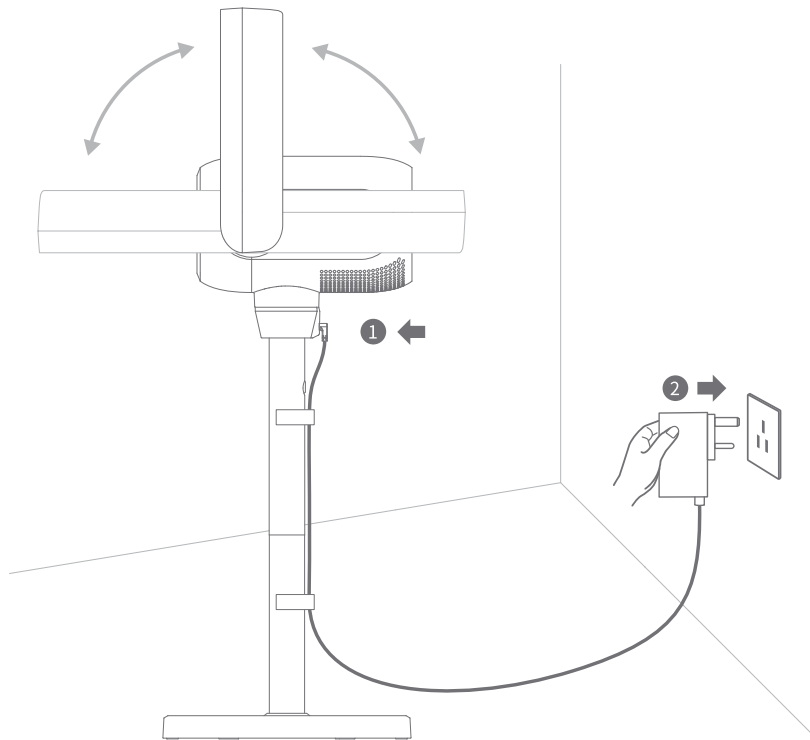

注意：

1. 本產品必須水平放置使用，嚴禁放置在不平穩的地方(如有斜度、柔軟的表面)，以避免本產品翻倒造成損壞或者故障；嚴禁在高溫潮濕的地方使用本產品(如浴室、廚房)。
2. 切勿在進風口或出風口處放置任何物品或遮蓋物(例如窗簾)。確保風口保持暢通，並無灰塵、絨毛、頭髮或其他任何可能阻礙空氣流通的障礙物。
3. 產品前方必須保持 30 厘米空間，機側及背部則保持 15 厘米空間，以確保產品保持空氣流通。切勿放置產品在牆櫃及櫥櫃使用，切勿堵塞排氣口。

 6.2 控制面板

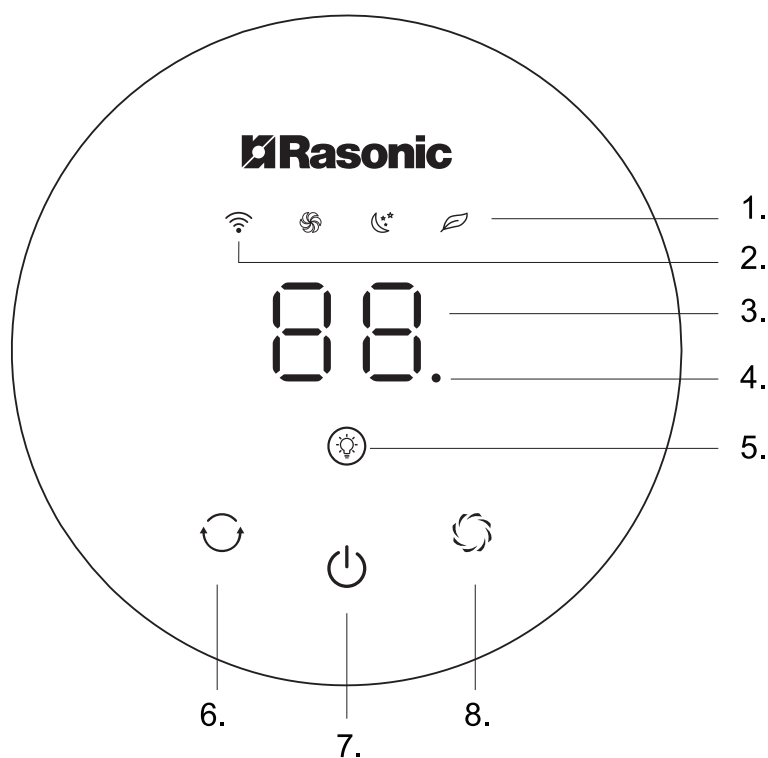 








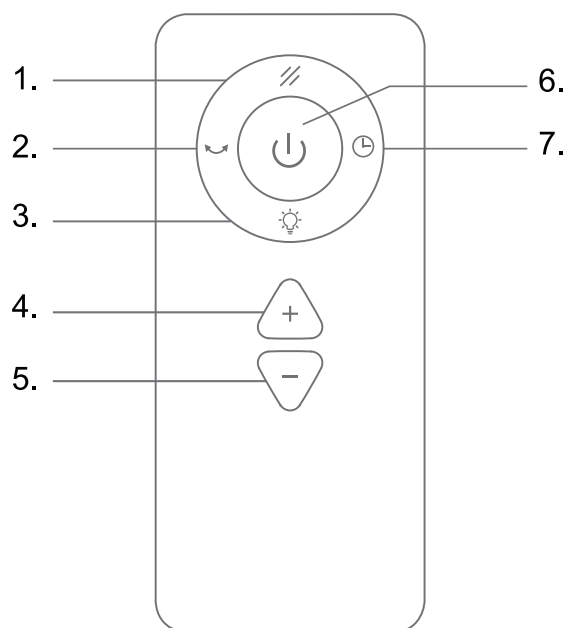

序號	控制面板	說明
1.	模式指示燈	強勁風、 睡眠風、 自然風。
2.	WiFi 指示燈	在開機狀態下，長按控制面板上的啟動/待機鍵5秒，產品會發出提示音，WiFi指示燈開始閃爍，產品進入藍牙網路配對模式。
3.	屏幕顯示	搖頭角度、檔位、定時時間顯示。
4.	定時指示燈	開啟定時功能時，此指示燈閃爍。
5.		開啟氣氛燈，點按調節亮度，依次循環切換：1-4檔、關閉。
6.		依次循環切換搖擺角度：30°、60°、90°、取消。
7.		啟動 / 待機。
8.		以切換風速 (在 1-2-3-.....-20-1-2 之間循環)。 備註：長按2秒進入強勁風模式，顯示 " " 風量變為最高。

注意：

1. 模式、定時功能只能配合遙控器使用。
2. 在開機狀態下，面板20秒內無任何操作，產品將自動進入熄屏狀態，氣氛燈、搖擺、開關、風速鍵指示燈均有顯示，但顯示的亮度降低50%，觸摸氣氛燈、搖擺和風速鍵可喚醒屏幕。

6.3 遙控器面板




序號	按鍵	說明
1.		依次循環切換：強勁風、睡眠風、自然風、風速。 強勁風模式：顯示 “  ” 風量變為最高； 睡眠風模式：顯示 “  ” 風量每 15 分鐘會降低，直至降到最低； 自然風模式：顯示 “  ” 風量弱-中-強循環出風。
2.		依次循環切換搖擺功能：30°、60°、90°、取消。
3.		開啟氣氛燈，點按調節亮度，依次循環切換：1-4 檔、關閉。
4.	+	增加風速。
5.	-	減少風速。
6.		啟動 / 待機。
7.		設置定時器 (顯示會在 0-1-2...-8-0H 之間循環); 0H 表示定時器已取消。當手動退回待機後，定時設定會被取消。

注意：在強勁風、睡眠風或自然風模式下按加鍵+或減鍵-，直接退出當前模式。

6.4 遙控器操作指南

使用遙控器

 
1. 遙控器已安裝電池，首次使用前抽出絕緣膠片，如下圖 A 所示。
2. 使用遙控器時，將遙控器對準控制面板，如下圖 B 所示。
3. 本產品設有遙控器磁吸功能，不使用遙控器時可以把遙控器磁吸在機體上方，如下圖 C 所示。

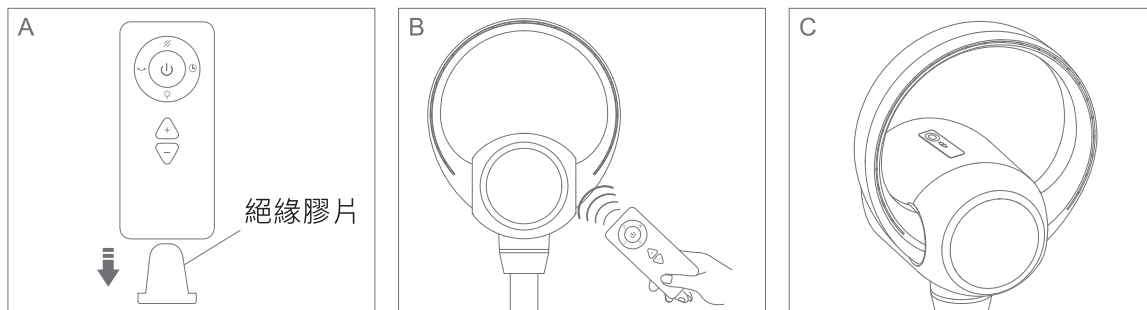

更換電池

遙控器更換電池的操作步驟如下圖 1-4 所示：

 1. 從遙控器底部側面按壓，釋放電池支架；
2. 向下拉並取出電池支架；
3. 更新一枚新 CR2025 電池，安裝電池時，將「+」極面朝上；
4. 將電池支架裝回遙控器。

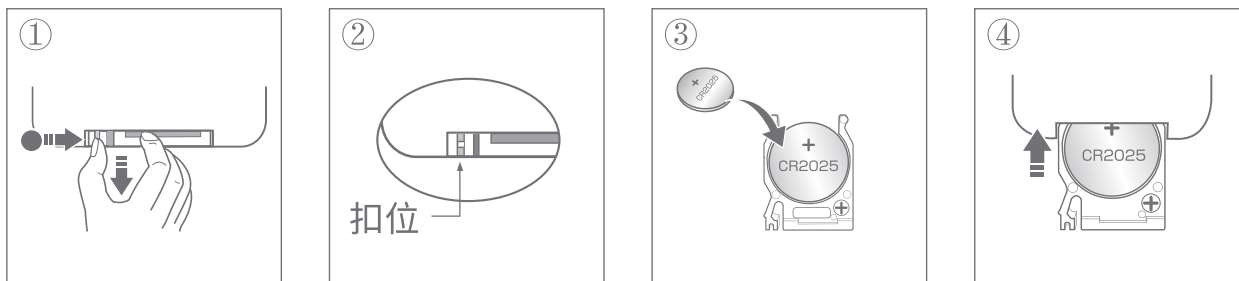

重要提示

1. 嚴禁為本產品電池充電！將遙控器放置在兒童無法接觸的地方，切勿吞服電池！
2. 如果遙控器按鍵失靈，嘗試更換新 CR2025 電池。
3. 安裝電池時，注意電池朝向，切勿裝反。
4. 使用本產品的遙控器時，其他電器可能會產生反應。這是由於遙控器的頻率產生重疊而發生的現象，產品本身並無品質問題。為了避免誤操作，操作時應將遙控器遠離其他電器。
5. 如長時間不使用遙控器時，取出電池，以免電池漏液損壞遙控器。
6. 電池必須按照正確的極性方向插入。
7. 萬一錯誤吞食，應立即求診。

6.5 設備綁定

1. 本產品可綁定於信興集團手機應用程式內，掃描以下二維碼或前往 Google Play / “App Store” 下載 “信興集團” 手機應用程式，註冊帳戶並登錄。



2. 用戶可於本公司網頁 www.shew.com.hk 主頁的 [空調通風](#) > [電風扇](#) > [Rasonic](#) 專頁，於 RBF-C94W / RBF-C94B WiFi 智慧無葉風扇的 “安裝手冊” 中下載有關手機應用程式的使用方法。

7. 故障排除

故障情況	可能原因	解決方法
無法開機	電源插頭沒有插上或接觸不良。	把電源插頭插穩。
	產品損壞。	聯絡信興電器服務中心有限公司檢查及維修。
無法關機	產品損壞。	聯絡信興電器服務中心有限公司檢查及維修。
遙控器失靈	電池電力耗盡。	更換新電池。
	電池安裝方向錯誤。	按正確的方向重新安裝電池。
	遙控器沒有對準主機信號接收器。	對準控制面板操作。

*如使用以上方法仍未能解決故障，立即停止使用，並聯絡信興電器服務中心有限公司進行檢查及維修。

8. 特別聲明

1. 本說明書的內容經過核對，如有任何印刷錯誤或內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及規格以廠方生產資料為準。
3. 使用說明書的電子副本可以經電子郵件發送至用戶，如有需要，可致電信興電工工程有限公司：2861 2767。

9. 售後服務

信興電工工程有限公司授權信興電器服務中心有限公司(“服務中心”)提供一年保修服務並由發票/換購收據上的日期起計。服務中心保留所有更改保修條款的權利，恕不另行通知，有關保修條款詳情，可參閱本公司網站。

1. Important Safeguards (Be sure to read carefully and follow these safety directions)

1. Strictly follow the precautions below to prevent injury or property damage to the user or others.
2. This appliance is not intended for use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Cleaning and user maintenance shall not be made by children without supervision.
3. Do not connect with other high wattage appliances under the same socket, or overuse extension cords to avoid overloading the electrical load and causing fire or other dangers.
4. Always check the condition of the appliance, power cord and adapter. If any damage is found, stop using the appliance immediately to avoid hazard and contact Shun Hing Electric Service Centre Limited to check and repair.
5. Do not move this appliance after connecting it to the power source.
6. Before moving, cleaning, or performing any maintenance, the power must be turned off and the power adapter unplugged.
7. When inserting or removing the adapter, hold the adapter itself firmly and do not grab the power cord. Never place heavy objects on the power cord, clamp, modify, pull or twist it.
8. Power cord must not be placed under carpets or covered by carpets, other fixtures, or similar items. Power cord should be kept away from walking areas and placed in places where they will not cause tripping.
9. All functions on the appliance must be turned off before unplugging the power adapter.
10. When not using this appliance for a long period of time, unplug the power adapter. Pack the appliance to prevent dust from entering and store it in a dry, well-ventilated place.
11. Never place any items or obstructions at the air inlet or outlet. Ensure the air vents are unobstructed and free of dust, lint, hair, or any other obstructions that may hinder airflow.
12. The appliance must be used on a level surface, with 30 cm of space in front and 15 cm of space on the sides and back to ensure air circulation. Do not place the appliance in wall cabinets or cupboards and do not block the exhaust vents.
13. This appliance should be placed in a well-ventilated and dry place away from heat sources and free from corrosive gases; it should not be used outdoors, in humid or high-temperature environments.
14. Do not immerse this appliance, power cord, or power adapter in water; or allow them to get wet; or place them near heat sources to avoid electric shock or fire.
15. Do not use any air fresheners or similar appliances near this appliance. Do not use cleaning agents or lubricants on it.


16. Avoid continuously exposure of direct wind from the appliance especially to infant and children.
17. For safety reasons, shut down the appliance before the user leave the appliance so as to avoid accidents.
18. Do not modify the appliance or use non-original parts provided by the manufacturer, otherwise it may cause danger and the maintenance service will be invalid.
19. Never operate the appliance or its parts in an environment with explosive or flammable gases.
20. The appliance is only to be used with the power supply unit provided with the appliance.
21. Children should be supervised to ensure that they do not play with the appliance.

2. Cleaning and Storage


1. The power adapter must be unplugged before cleaning in standby mode.
2. Do not immerse the power cord, adapter, or main unit in water or rinse it under running water. To prevent damage, do not allow water to seep into the internal parts.
3. Do not use rough cleaning tools (such as steel brush), toxic, or corrosive cleaning agents to clean.
4. Gently wipe the appliance surface with a dry, soft cloth. If the surface is dirty, use a diluted neutral detergent and wipe with a slightly damp cloth; then dry with a soft cloth.
5. Use a soft brush or vacuum cleaner to clean dust from the air inlet and outlet. Excessive dust accumulation will affect the performance of the appliance; clean promptly when dust levels are low. It is recommended to clean the appliance at least once a month.
6. After cleaning, the appliance must be completely dried up before use.
7. When storing, never wrap the power cord around the appliance or press on the power cord to avoid damaging it.
8. If the appliance will not be used for a long period of time, it should be stored back in the packaging and placed in a dry, cool, and safe place.

3. Product Specifications


3.1 Fan

Model	RBF-C94W / RBF-C94B
Rated voltage	24V 
Rated power	35W
Product size (W x D x H) (approx.)	320 x 320 x 940mm
Net weight (approx.)	3.8kg

3.2 Power adapter

Input voltage / frequency / current	100-240V~, 50/60 Hz, 1.2A
Output voltage / current / power	24V  , 1.5A, 36W

 
4. Product Parts

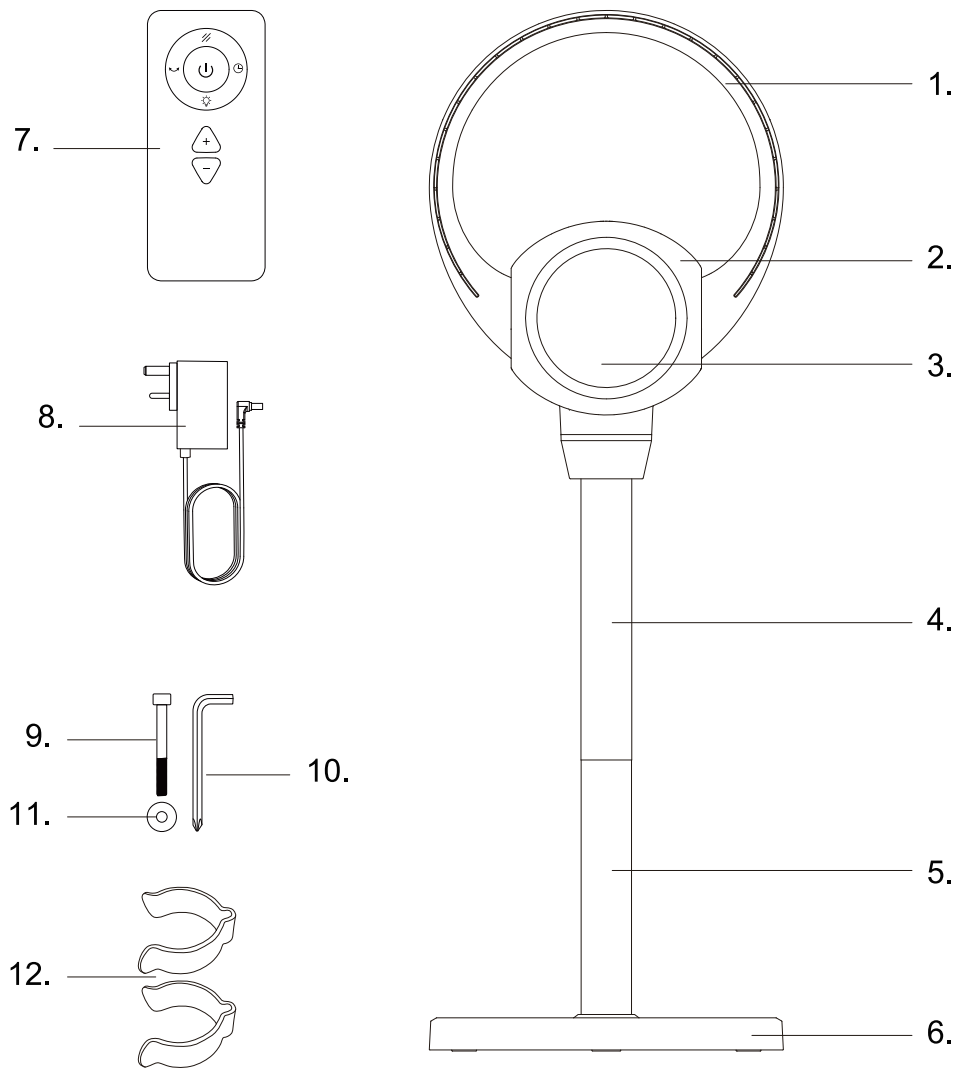

1. Fan Coil and Air Outlet	7. Remote Control
2. Main Unit	8. Power Adapter
3. Control Panel	9. Base Bolt
4. Upper Pole	10. Wrench
5. Lower Pole	11. Gasket
6. Base	12. Power Cord Clip


5. Install the Fan

 Use as a stand fan / with poles

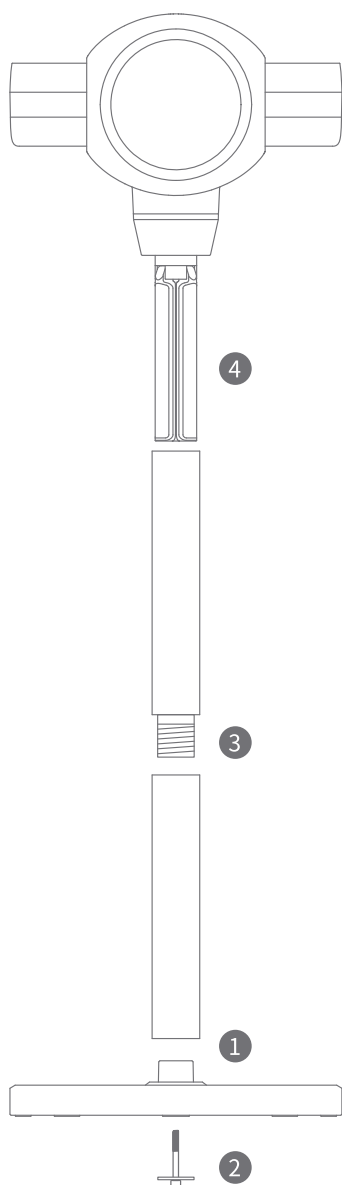

- 1: Insert the lower pole into the base;
- 2: Insert the gasket into the bolt, then insert the bolt into the base and tighten it clockwise with a wrench;
- 3: Rotate and fix the upper pole clockwise onto the lower pole;
- 4: Insert the main unit into the upper pole, align the insertion angle with the button to complete the installation.

 
Use as a table fan / without poles

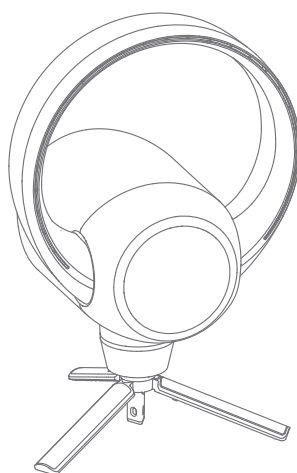


Open the pole at the bottom of the main unit to place it on a desktop.

6. Operation Instructions

6.1 How to use

 
1. The appliance will emit a beep after power is connected, the Start-up / Standby button  will be on, the appliance will enter standby mode.
2. To adjust the airflow angle, wait until the appliance has stopped running, hold the pole with one hand, gently lift or press the fan coil with the other hand.

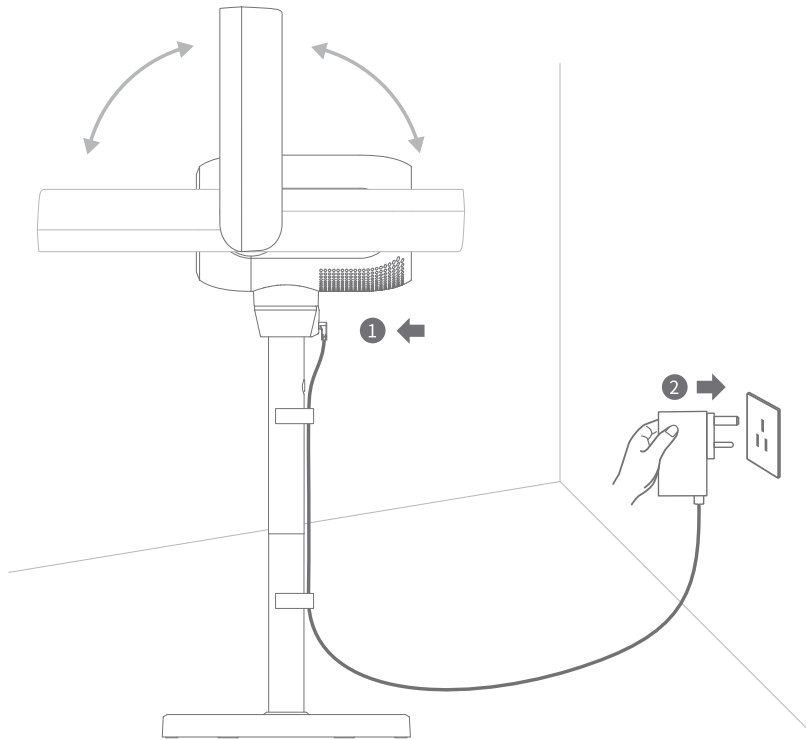

Note:

1. This appliance must be used horizontally. Do not place it on unstable surfaces (such as sloping or soft surfaces) to avoid tipping over and causing damage or malfunction. Do not use this appliance in hot and humid environments (such as bathrooms or kitchens).
2. Never place any items or obstructions (such as curtains) at the air inlet or outlet. Ensure the air vents are unobstructed and free of dust, lint, hair, or any other obstructions that may hinder airflow.
3. Maintain 30 cm of space in front of the appliance and 15 cm of space on the sides and back to ensure air circulation. Do not place the appliance in wall cabinets or cupboards, do not block the exhaust vents.

 6.2 Control Panel

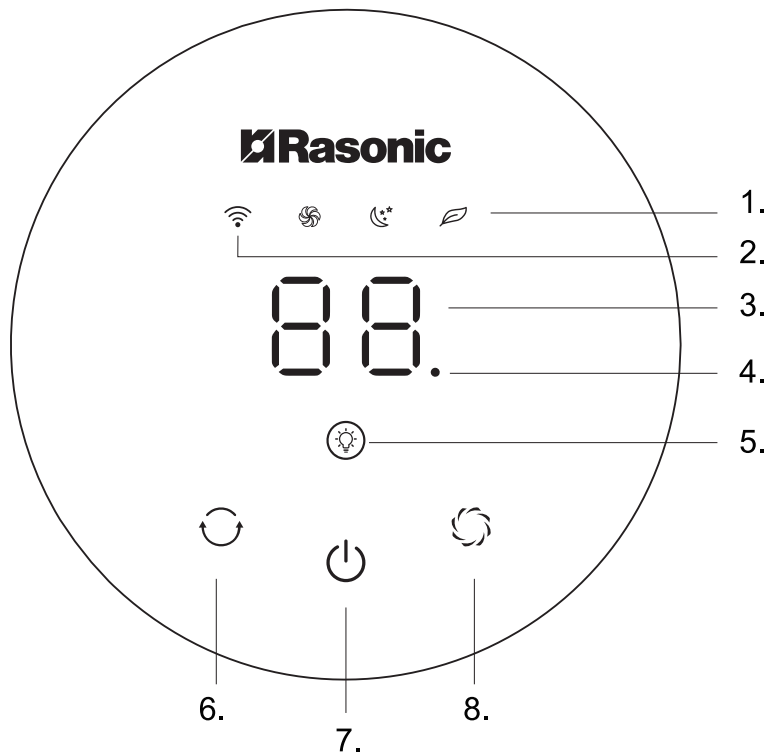


No.	Control Panel	Instructions
1.	Mode Indicator	Turbo, Sleep, Natural.
2.	WiFi Indicator	When the appliance is powered on, press and hold the Start-up / Standby button on the control panel for 5 seconds. The appliance will emit a beep and the WiFi indicator light will start flashing, indicating the appliance has entered Bluetooth pairing mode.
3.	Screen display	Displays swing angle, speed, and timer.
4.	Timer Indicator	This indicator light flashes when the timer function is enabled.
5.		Turn on the mood light, tap to adjust the brightness, and cycle through levels 1-4, turn off.
6.		Cycle through the swing angle: 30°, 60°, 90°, cancel.
7.		Start-up / Standby.
8.		Switch fan speeds (cycles between 1-2-3-...-20-1-2). Note: Press and hold for 2 seconds to enter turbo mode, shows " " indicating the fan speed is at its highest setting.

Note:

1. The mode and timer functions can only be used with the remote control.
2. In the power-on state, if there is no operation on the panel within 20 seconds, the appliance will automatically enter the off-screen state. The Mood Light, Swing, Start-up / Standby and fan speed indicator lights will still be displayed, but the display brightness will be reduced by 50%. Touching the Mood Light, Swing and fan speed can wake up the screen.

 6.3 Remote Control Panel

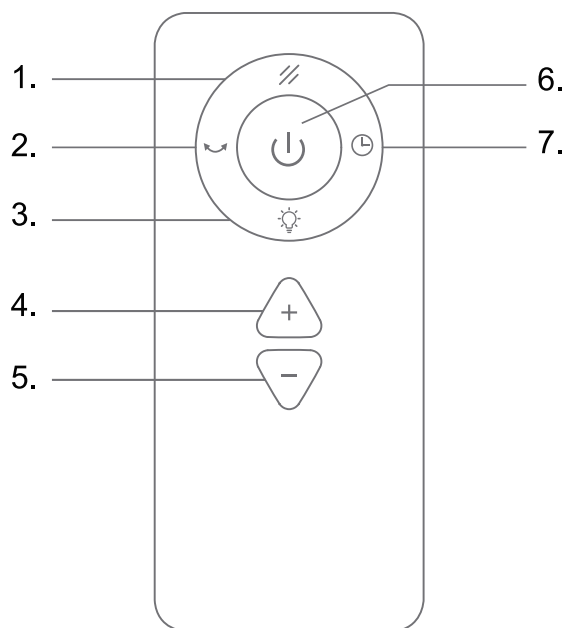


No.	Button	Instructions
1.		Cycle through the following modes: Turbo, Sleep, Natural, Speed. Turbo mode: Displays " ", fan speed is at its highest setting. Sleep mode: Displays " ", fan speed decreases every 15 minutes until it reaches its lowest level. Natural mode: Displays " ", fan speed cycles from weak to medium to strong.
2.		Cycle through the swing angle: 30°, 60°, 90°, cancel.
3.		Turn on the mood light, tap to adjust the brightness, and cycle through levels 1-4, turn off.
4.		Increase fan speed.
5.		Decrease fan speed.
6.		Start-up / Standby.
7.		Set a timer (the display will cycle between 0-1-2...-8-0H); 0H indicates the timer has been canceled. The timer setting will be canceled when return to standby mode manually.

Note: Press the + or - button in Turbo, Sleep or Natural mode, it will exit the current mode directly.

6.4 Remote Control Operation Instructions

How to use

 
1. The remote control is pre-charged with a battery. Remove the insulating film before first use, as shown in Figure A below.
2. When using the remote control, aim it at the control panel, as shown in Figure B below.
3. This appliance comes with a magnetic remote control function. When not in use, the remote control can be magnetically attached to the top of the appliance, as shown in Figure C below.

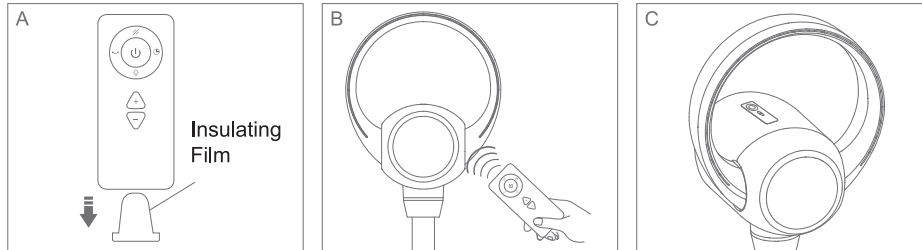

Replace the battery

The steps for changing the battery in the remote control are shown in Figures 1-4 below:

 1. Press down on the bottom side of the remote control to release the battery holder;
2. Pull down and remove the battery holder;
3. Replace a new CR2025 battery, the "+" polarity should be facing upwards when installing the battery;
4. Reinstall the battery holder into the remote control.

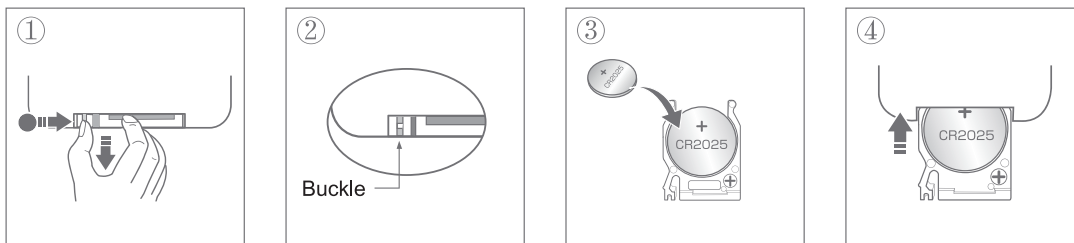

Important Notes

1. Do not recharge the battery for this appliance! Keep the remote control out of reach of children. Do not swallow the battery!
2. If the remote control buttons does not respond, try to replace a new CR2025 battery.
3. When installing the battery, pay attention to the polarity; do not reverse install.
4. When using this remote control, other electrical appliances may react. This is due to overlapping frequencies between the remote controls and is not a quality issue. To avoid accidental operation, keep the remote control away from other electrical appliances during operation.
5. If the remote control will not be used for a long period of time, remove the battery to prevent leakage and damage.
6. Battery must be inserted with the correct polarity.
7. In case of accidental swallowing, seek medical attention immediately.

6.5 Bind Device

1. The appliance can be bounded with “Shun Hing” APP. Scan the QR code below, or download the “Shun Hing” APP from “Google Play” or “App Store” . After installation, register a new account and log in accordingly.



2. Users can download the instructions on how to use the mobile APP from the "Installation Guide" of the RBF-C94W / RBF-C94B WiFi Smart Bladeless Fan. It is on our website www.shew.com.hk under [Ventilation & Air Conditioning](#) > [Electric Fan](#) > [Rasonic](#) page.

7. Troubleshooting

Problem	Possible Cause	Solution
Appliance does not turn on	Power plug is not plugged in properly.	Plug in the power plug properly.
	Appliance is damaged.	Contact Shun Hing Electric Service Centre Ltd. to check and repair.
Appliance cannot turn off	Appliance is damaged.	Contact Shun Hing Electric Service Centre Ltd. to check and repair.
Remote control does not respond	Battery is dead.	Replace a new battery.
	Battery polarity is reversed.	Reinstall the battery and make sure the polarity is correct.
	Remote control is not aimed directly at the signal receptor.	Aim remote control directly at the control panel.

*If the above solutions cannot fix the problem, stop using immediately and contact Shun Hing Electric Service Centre Ltd. to check and repair.

8. Special Avowal

1. The information above has been checked; our company reserves the hermeneutic power to any print errors or misunderstanding on the content.
2. Please note that any technology improvement will be added to the new versions of operation manual without any prior notices. The appliance appearance and specification are subject to the actual appliance.
3. E-copy of operation manual can be sent by e-mail on request, please call Shun Hing Electric Works and Engineering Co., Ltd at 2861 2767.

9. After Sales Service

Shun Hing Electric Works & Engineering Co., Ltd. authorizes Shun Hing Electric Service Centre Ltd. ("SHESC") to offer one year warranty service to the appliance commencing from the date of purchase invoice or redemption voucher. SHESC reserves the right to change the warranty terms without prior notice. For details of the warranty terms, you can refer to our website.



SHUN HING GROUP
信興集團
SINCE 1953

Rasonic 樂信牌

信興電工工程有限公司

SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓

電話：2861 2767

圖文傳真：2865 6706

網址：<http://www.shew.com.hk>

電郵：shew@shunhinggroup.com

Office: 9/F, Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, H.K.

Tel: 2861 2767

Fax: 2865 6706

Website: <http://www.shew.com.hk>

E-mail: shew@shunhinggroup.com

保養及維修 Maintenance and Repair Service:

信興電器服務中心有限公司

SHUN HING ELECTRIC SERVICE CENTRE LTD.

香港新界葵涌勝耀街2號信興中心11樓

電話：2406 5666

圖文傳真：2408 0316

網址：<http://www.shesc.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. H.K.

Tel: 2406 5666

Fax: 2408 0316

Website: <http://www.shesc.com/en>

客戶服務中心

香港新界葵涌勝耀街2號信興中心1樓

九龍尖沙咀東部麼地道67號半島中心B座9樓

澳門慕拉士大馬路149號激成工業大廈(第一期)2樓F座

Customer Service Centre

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

9/F, Block B, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon

Avenida de Venceslau de Morais, No. 149, 2 andar - F, Edf, Industrial Keck Seng (Bloco 1), Macau

有關最新之香港及澳門客戶服務中心資料，參閱信興服務中心網址：<http://www.shesc.com/zh>

For the latest information of Hong Kong and Macau service centre, please visit <http://www.shesc.com/en>

RBF-C0126