

Rasonic 樂信牌

RST-F12

智能多士爐 Smart Toaster



僅適用於家庭使用
For Household Use Only

使用說明書

OPERATION MANUAL

在使用本產品前，仔細閱讀本說明書，閱讀後小心收藏，以備日後查閱。
Read the operation manual carefully before using and keep it in a safe place for future reference.

本說明書中的圖示可能有與實物不同的地方，僅供參考。

Some figures in the manual may not match with the real object, just for reference only.

目錄

- 1.安全注意事項
- 2.清潔和儲存
- 3.產品部件
- 4.加熱架使用說明
- 5.功能操作須知
- 6.操作說明
- 7.產品規格
- 8.故障排除
- 9.特別聲明
- 10.售後服務

1. 安全注意事項

(務必詳細閱讀及遵守安全指導)

1.1 使用前說明

1. 務必嚴格遵守以下說明之注意事項以防止對使用者或其他人造成傷害或財物損失。
2. 本產品不適用於身體、感官或精神能力下降或缺乏經驗和知識的人士(包括兒童)使用，除非有負責其安全的人士對其進行監督或指導。不得讓兒童在無人監管的情況下進行清潔和保養工作。
3. 切勿與其他高功率的電器共用同一電源插座；或超額使用電線拖板，以免電力負荷過重而導致火災及危險。
4. 本產品只可供家庭或類似環境使用，如商戶內部、辦事處和其他工作環境的員工廚房區域；旅館、汽車旅館和其他住宿類型的環境。
5. 確保本產品連接於帶接地線插座。為避免危險，切勿在本產品加裝定時開關或獨立的遙控系統來操作。
6. 經常檢查產品、電源線及插頭，如有損壞，為避免危險，應立即停止使用，並聯絡信興電器服務中心有限公司安排檢查及維修。
7. 在連接電源後，切勿移動本產品。
8. 移動、清潔或進行任何維修前，必須先關閉電源，並拔出電源插頭。
9. 在插入或拔除電源插頭時，應用手握穩插頭本身，不要抓住電源線。切勿在電源線上放重物、夾住、改裝、用力拉扯或扭曲電源線。
10. 嚴禁在地毯下擺放電源線，電源線不能被地毯、其他裝置或類似物品覆蓋。電源線應遠離行走區域，放置在不會被絆倒的地方。
11. 拔除電源插頭前必須關閉產品上的所有功能操作。
12. 本產品必須水平放置使用，嚴禁放置在不平穩的地方(如有斜度、柔軟的表面)，以免本產品翻倒造成損壞或者故障。

13. 本產品應放置在遠離熱源、周圍無腐蝕性氣體，通風良好且乾燥的地方；不能在室外、潮濕、高溫的地方使用。
14. 確保本產品上方至少有20厘米的散熱空間，四周至少有10厘米的散熱空間。
15. 為安全起見，當人離開產品時，必須關機，以免發生意外事件。
16. 長時間不使用本產品時，應拔下電源插頭。包好本產品防止灰塵進入機內，並放置乾燥通風處存放。
17. 嚴禁將本產品、電源線、插頭浸入水中；或被水濺濕、或靠近熱源，以免造成觸電或火災。
18. 切勿擅自改裝產品或使用非生產商提供的原裝配件，否則可能造成危險及保修無效。
19. 應當對小孩進行監管，以確保他們不會玩耍本產品。
20. 檢查碎屑盤是否放置在正確的位置。
21. 在第一次使用烘烤之前，用低檔進行1-2次空載加熱，以去除產品內的水分和氣味，如果在這個過程中冒煙或有異味，屬於正常現象。
22. 除了規定的烘烤食物外，本產品不要用於其他用途。
23. 切勿將過大的食物、鋁箔、包裝或餐具放入機器內，因為它們可能造成火災或其他危險。
24. 當使用加熱架烘烤食物時，需提前把加熱架放在麵包槽上面。
25. 此產品可供年齡在8歲或以上的兒童及體質、感覺或智力有障礙人士或缺乏經驗和相關知識的人士使用，但他們必須接受負責安全人士的監督或指導如何安全地使用產品和理解所涉及的危險。
26. 兒童不得玩耍本產品。兒童不得進行清潔和維護，除非他們年滿8歲且有成人監督。
27. 將本產品及其電源線放在8歲以下兒童無法觸及的地方。

 
1.2 使用時說明

- 1.不要觸摸產品高溫表面，不要按住麵包槽，以免燙傷。
- 2.不要在烘烤時移動麵包。
- 3.不要在麵包上添加配料，否則容易導致配料在產品內融化或滴落，影響產品的使用安全性。
- 4.不要烘烤麵包絲。
- 5.不要把塗有牛油的麵包或帶有包裝的食物放進產品內。
- 6.不要烤饅頭、迷你法式麵包等。
- 7.不要烘烤厚度超過2.5厘米的麵包。
- 8.不要烘烤高度超過10厘米的麵包。
- 9.在使用時，切勿用防塵蓋或其他物品覆蓋本產品。
- 10.不要把紙張、紙板、塑膠或布放入產品內，也不要把它們放在產品上面或墊在產品下面。
- 11.切勿將非食品類物品放入機器內。
- 12.本產品不可烘烤非建議的食物，建議的食物包括方包、貝果、窩夫、西式油酥糕點和英式鬆餅，烘烤其他食物可能引起火災或損壞產品。
- 13.當產品已經在烘烤食物時，不可再放加熱架同時烘烤兩種食物。
- 14.當使用加熱架烘烤時，不要用手觸摸加熱架，以免燙傷。
- 15.當使用加熱架烘烤時，食物不能超出加熱架的承受面積範圍，以免烘烤不到位。
- 16.當使用加熱架烘烤時，不要用手移動食物，以免燙傷；如確實需要移動，應使用食物鉗或筷子小心移動。

17. 當產品正在運作時，如果它被覆蓋或與易燃物接觸，包括電線、窗簾、牆紙、櫃等，可能會引起火災或觸電。
18. 麵包可能會烤焦。因此，本產品不得靠近或位於窗簾和其他易燃材料（例如窗簾）下方。

2. 清潔和儲存

1. 清潔前必須先拔除電源插頭，待產品冷卻後才可進行清潔。
2. 每次清潔前，先卸下碎屑盤倒掉麵包屑，建議每週清潔碎屑托盤一次。
3. 切勿將電源線、插頭或主機浸在水中清潔或在水龍頭下沖洗。為防止產品損壞，不要讓水滲入產品內部零件。
4. 切勿使用粗糙的潔具(如鋼絲刷)、有毒或含腐蝕性的清潔劑進行清潔。
5. 使用乾軟布輕輕擦拭產品表面；對於頑固污漬，可使用稀釋的中性清潔劑及微濕軟布進行擦拭；然後再用乾軟布抹乾。
6. 當烘烤槽底部粘有麵包屑時，可用筷子捲起毛巾一角伸進麵包槽內輕輕清理，小心不要碰到兩邊的發熱絲。
7. 清潔完畢後，必須待產品完全乾燥才可使用。
8. 使用溫水及中性洗潔精清洗加熱架，並用軟布抹乾。當不使用加熱架時，不要放在產品上面，用防塵蓋蓋好產品。
9. 儲存時，切勿將電源線纏繞在產品四周或壓住電源線，以免造成電源線損壞。
10. 如長時間不使用本產品，應將產品收藏回包裝盒內並放置在乾燥陰涼且安全的地方。
11. 為確保多士爐安全運行並防止火災隱患，每週至少清潔碎屑托盤一次，清潔步驟如下：

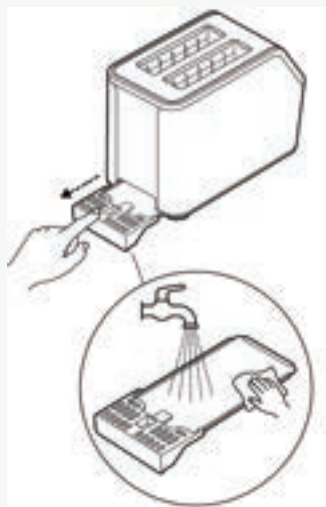


- 1.斷電冷卻：拔掉電源插頭，等待多士爐完全冷卻。
- 2.彈出托盤：輕按機身後方底部的托盤 (印有 PUSH 字樣處)。
- 3.全拉卸下：順著滑軌將可拆卸托盤完全拉出。
- 4.倒出碎屑：將托盤上的麵包屑倒入垃圾桶。
- 5.水洗清潔：此托盤可直接用水沖洗，或使用中性洗潔精擦拭。
- 6.完全晾乾：清洗後必須徹底擦乾或晾乾。
- 7.推回原位：將乾燥的托盤沿滑軌推回，聽到「咔嚓」即代表鎖定。

⚠ 安全警告：

- 切勿在托盤未裝回、未鎖定或潮濕的情況下使用多士爐。
- 切勿使用鋼絲刷或具腐蝕性的清潔劑，以免刮傷托盤表面。

 3. 產品部件

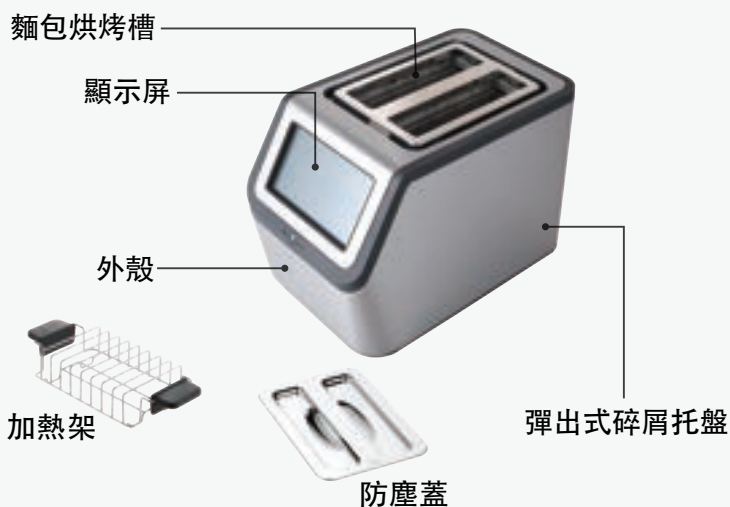

4. 加熱架使用說明

1. 安裝加熱架：

使用前，將支架的提手對準麵包槽邊緣放入。

2. 放置食物：

將需要加熱的小麵包（如牛角包、餐包、甜甜圈）水平放置在架子上（可參考圖片1）。

切勿重疊，以確保受熱均勻。若是較厚的厚片麵包，可將其夾在支架中間格檔內，垂直放入槽中（可參考圖片2）。



（圖片1）



（圖片2）

3. 智能面板設定：

通過觸控面板選擇烘烤模式或手動調節焦度檔位。

待程序結束，直接握住支架兩側的隔熱提手（黑色塑料部分）將食物連同支架一起取下。

4. 產品用途

加熱非片裝麵包：專為無法放入窄槽的不規則形狀麵包設計。

恢復口感：利用對流熱氣讓冷掉的烘焙食品恢復溫熱鬆軟。

5. 安全與保養

隔熱操作：雖然設有黑色隔熱手柄，但操作時仍需留意中間不銹鋼部分的熱度。

清潔建議：支架可獨立拆卸清洗。確保支架完全乾燥後再放入機器使用。

勿遮擋排氣：加熱時切勿在架上覆蓋毛巾或紙張，確保機器頂部通風良好。

5. 功能操作須知

1. 啟動系統介面：

接通電源後，產品將進入工作介面。如顯示屏上的麵包圖案正在閃爍，先輕觸該圖案以激活屏幕，否則無法進入操作系統。

2. 閒置狀態：

如超過30秒無任何操作，麵包圖案會再次閃爍（代表進入鎖定狀態），需再次輕觸圖案方可解除鎖定。

3. 待機與省電模式：

待機狀態：如3分鐘內無任何操作，產品會自動進入待機模式，屏幕僅顯示時間與日期。輕觸屏幕即可返回工作介面。

省電黑屏：進入待機後，如再過5分鐘仍無操作，顯示屏將會自動關閉（黑屏）。此時輕觸屏幕任何位置，即可重新啟動。

4. 連續烘烤冷卻：

完成首次烘烤後，建議先讓產品冷卻至少3分鐘才進行下一次烘烤。如未經冷卻連續使用，由於機內餘溫，第二次烘烤的時間會比標準時間短，麵包成色亦會有所偏差。

 
5. 過熱保護機制：

如產品因連續多次使用而過熱，系統將會啟動安全保護功能並強制停機，此時屏幕會顯示警告圖標。（如下圖）



6. 操作說明

系統固定模式

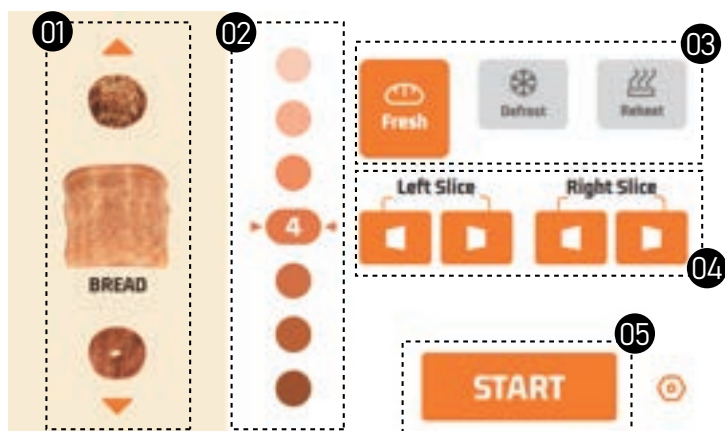

1. 麵包類型選擇 (5 種模式)

- BREAD：片裝麵包
- BAGEL：貝果
- WAFFLE：窩夫
- PASTRY：西式油酥糕點
- ENGLISH MUFFIN：英式鬆餅

2. 烘烤焦度

提供**7 段焦度**選擇，讓你精確調校烘烤深淺程度(PASTRY模式除外)。

3. 烘烤模式

- Fresh (新鮮模式)：適用於一般新鮮麵包或多士。
- Defrost (解凍模式)：專為存放於雪櫃（保鮮格）的冷凍麵包而設，系統會自動延長烘烤時間以達致最佳效果。
- Reheat (再加熱模式)：用於將已冷卻的麵包重新加熱，使其回復酥脆口感。

4. 加熱組件

採用高效能設計，2個麵包槽共4塊發熱板會同時運作，確保麵包兩面受熱均勻（BAGEL模式只是中間兩塊發熱板運作）。

5. 啟動烘烤

設定完成後，輕觸屏幕上的"START" 開始鍵即可開始烘烤。

系統操作指南



1. **接通電源**：將插頭插入插座，開啟電源。
2. **激活系統**：進入工作介面後，輕觸屏幕上閃爍的麵包圖案以解除鎖定。
3. **個人化設定**：根據個人喜好，選擇麵包種類及烘烤焦度。



 
4. 選擇烘烤模式 (橙色表示已經選擇)

- Fresh (新鮮模式)：適用於一般新鮮麵包或多士。
- Defrost (解凍模式)：專為存放於雪櫃（保鮮格）的冷凍麵包而設，系統會自動延長烘烤時間以達致最佳效果。
- Reheat (再加熱模式)：用於將已冷卻的麵包重新加熱，使其回復酥脆口感。


5. 啟動烘烤

設定完成後，輕觸屏幕上的"START" 開始鍵即可開始烘烤。

自定義烘烤模式設置

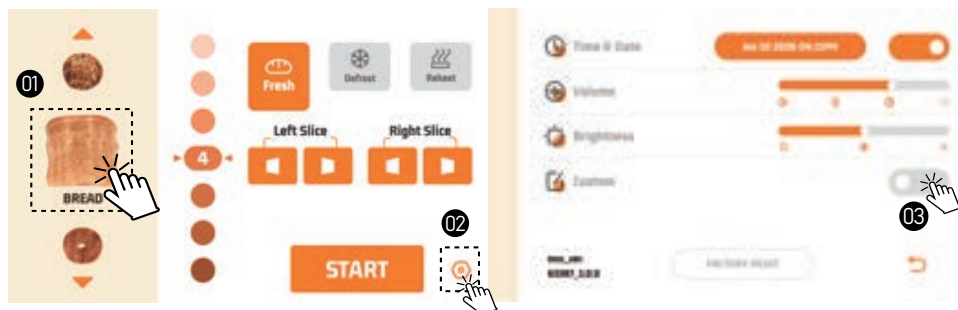

 接通電源進入主頁介面後，按01 (BREAD)閃爍圖標激活介面，按02設定圖標進入下一個頁面，再按03 (Custom)圖標即可進入下圖的自定義設置介面。

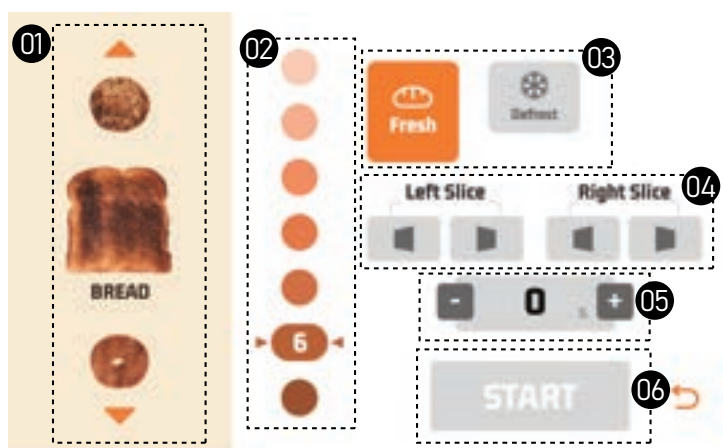

1. 麵包類型選擇 (5 種模式)

- BREAD：片裝麵包
- BAGEL：貝果
- WAFFLE：窩夫
- PASTRY：西式油酥糕點
- ENGLISH MUFFIN：英式鬆餅

2. 烘烤焦度

提供**7 段焦度**選擇，讓你精確調校烘烤深淺程度 (PASTRY模式除外)。

3. 烘烤模式

- Fresh (新鮮模式)：適用於一般新鮮麵包或多士。
- Defrost (解凍模式)：專為存放於雪櫃（保鮮格）的冷凍麵包而設，系統會自動延長烘烤時間以達致最佳效果。

4. 發熱模式

有以下3種發熱模式選擇：



1. 4個發熱板同時發熱: 適用於BREAD, WAFFLE, PASTRY & ENGLISH MUFFIN.



2. 左側板+右側板發熱: 適用於BREAD, WAFFLE, PASTRY & ENGLISH MUFFIN.



3. 左中板+右中板發熱: 適用於BREAD, BAGEL, WAFFLE, PASTRY & ENGLISH MUFFIN.

 
5. 時間調校

時間設定：手動增減烘烤時間，精確控制麵包的焦脆程度和成色。

6. 啟動烘烤

完成所有設定後，輕觸"START" 開始鍵即可開始烘烤。

烘烤過程

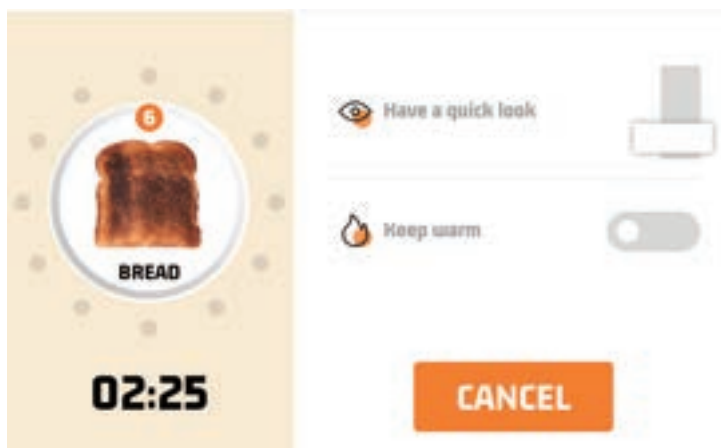

快速查看 (Have a quick look)

- 啟動此功能後，麵包槽會即時升起，方便查看烘烤進度（焦度）。
- 2 秒後麵包槽會自動下降，繼續完成烘烤程序。

 
保溫 (Keep warm)

最長保溫時間為30分鐘。啟用此功能後，麵包烘烤完畢會自動進入保溫模式 (PASTRY模式除外) 。

取消 (Cancel)

烘烤過程中，可以隨時按此按鈕“CANCEL”停止操作。

系統設置

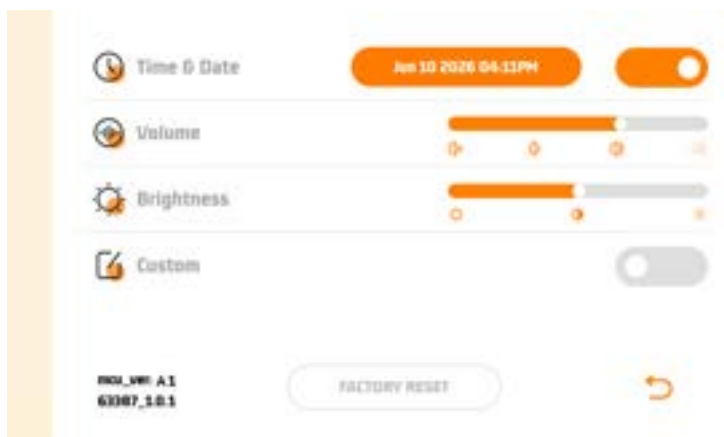

時間與日期 (Time & Date)

用戶可自行設定時間及日期。功能啟用後，當產品處於待機狀態，屏幕將會顯示目前時間與日期。

[關於日期設置提示]

因內置晶片系統限制，螢幕日期最大僅可設置到2037年。此設定僅影響日曆顯示，本機的核心烘烤功能完全獨立且不受影響，跨年後仍可正常運作。

音量控制 (Volume)

可按個人喜好，調校烘烤完畢時提示音「叮」聲的音量大小。

屏幕亮度 (Brightness)

可自行調校顯示屏的背光亮度，以配合室內環境光線。

自定義模式 (Custom)

啟動此功能後，即可進入自定義烘烤模式介面。

7. 產品規格

產品型號	RST-F12
額定電壓	220-240 伏特~ 50/60 赫茲
額定功率	1200-1400 瓦
產品尺寸 (闊 x 深 x 高)	176 x 284 x 198 毫米
淨重 (約)	2.71 公斤

8. 故障排除

故障情況	可能原因	解決方法
顯示屏沒有反應	未激活程序：顯示屏上的麵包圖案正在閃爍	先輕觸該圖案以激活系統，方可進行下一步操作
	系統過載：系統反應緩慢或停滯	拔掉電源插頭。待產品完全冷卻後，重新接通電源並啟動
烘烤時產品冒煙	模式設定錯誤：所選的烘烤模式不合適或溫度過高	按下「CANCEL」取消按鈕，重新選擇合適的設定進行烘烤
	碎屑積聚：麵包槽內或表面殘留食物碎屑	清理乾淨後再重新啟動
	碎屑盤已滿：碎屑托盤內積存過多碎屑	清理碎屑托盤後再重新啟動
	成分影響：麵包含油量或含糖量過高，容易引起冒煙	選用合適的麵包，或選擇較溫和的烘烤模式

麵包槽無法自動升起	麵包卡住：麵包尺寸過大導致卡在槽內	斷開電源，待產品冷卻後，使用木製或塑膠製食物鉗取出麵包
	程式故障：運作期間系統崩潰	斷開電源，待產品冷卻後取出麵包，再重新啟動
產品無法運作	零件故障：內部零件可能出現故障	聯絡信興電器服務中心有限公司

* 如使用以上方法仍未能解決故障，立即停止使用，並聯絡信興電器服務中心有限公司進行檢查及維修。

9. 特別聲明

1. 本說明書的內容經過核對，如有任何印刷錯誤或內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及規格以廠方生產資料為準。
3. 使用說明書的電子副本可以經電子郵件發送至用戶，如有需要，可致電信興電工工程有限公司：2861 2767。

10. 售後服務

信興電工工程有限公司授權信興電器服務中心有限公司(“服務中心”)提供一年保修服務並由發票/換購收據上的日期起計。服務中心保留所有更改保修條款的權利，恕不另行通知，有關保修條款詳情，可參閱本公司網站。

Table of contents

- 1.Safety Precautions
- 2.Cleaning and Storage
- 3.Product Parts
- 4.Warming Rack Instructions
- 5.Operating Instructions
- 6.Operating Guide
- 7.Product Specifications
- 8.Troubleshooting
- 9.Special Avowal
- 10.After Sales Service

1. Safety Precautions (Be sure to read carefully and follow these safety directions)

1.1 Pre-use Instructions

1. Strictly follow these precautions to prevent injury to users/others or property loss.
2. The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to play with the appliance.
3. Do not share the same mains socket with other high-power appliances or overload power strips to avoid fire hazards.
4. This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; hotels, motels, and other residential type environments.
5. Ensure the appliance is connected to a grounded (earthed) outlet. Do not use external timers or separate remote-control systems.
6. Regularly check the appliance, power cord, and plug. If damaged, stop use immediately and contact Shun Hing Electric Service Centre Ltd. to check and repair.
7. Do not move the appliance while it is connected to power.
8. Always switch off and unplug the appliance before moving, cleaning, or servicing.
9. When plugging in or unplugging the appliance, always hold the plug firmly instead of pulling the power cord. Do not place heavy objects on, pinch, modify, pull forcefully, or twist the power cord.
10. Do not run the power cord under carpeting. Do not cover the cord with throw rugs, runners, or similar coverings. Keep the cord away from high-traffic areas to avoid tripping.
11. Turn off all functions before unplugging.

12. This appliance must be placed and used horizontally. Strictly prohibited from placing it on an unstable surface (such as a slope or a soft surface) to avoid tipping over, which may cause damage or malfunction.
13. The appliance should be kept in a well-ventilated and dry place away from heat sources and corrosive gases. Do not use the appliance outdoors or in damp, high-temperature environments.
14. Maintain at least 20cm clearance above and 10cm on all sides for heat dissipation.
15. For safety reasons, always switch off the appliance when leaving it unattended to prevent accidents.
16. Always unplug the appliance if it will not be used for a long period of time. Pack the appliance properly to prevent dust from entering, and store it in a dry, well-ventilated place.
17. Do not immerse the appliance, cord, or plug in water. Avoid splashes or heat sources to prevent electric shock or fire.
18. Do not modify the appliance or use non-original parts; doing so may cause danger and void the warranty.
19. Supervise children to ensure they do not play with the appliance.
20. Ensure the crumb tray is correctly positioned before use.
21. Initial Use: Run 1-2 heating cycles empty on a low setting to remove moisture and odors. Slight smoke or odor during this process is normal.
22. Do not use for purposes other than toasting specified foods.
23. Do not insert oversized food, aluminum foil, packaging or utensils into the appliances as they may cause fire or other hazards.
24. Place the warming rack over the toasting slots before toasting if required.
25. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

26. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
27. Keep the appliance and its cord out of reach of children less than 8 years.

1.2 Operating Instructions

 
1. Do not touch hot surfaces. Avoid pressing on the toasting slots to prevent burns.
2. Do not move the bread while toasting is in progress.
3. Do not add toppings to the bread, otherwise melted or dripping toppings may affect the safety of the product.
4. Do not toast shredded bread.
5. Do not place buttered bread or food with packaging / wrappers into the appliance.
6. Do not toast steamed buns (Mantou), mini French baguettes, or similar items.
7. Do not toast bread slices exceeding 2.5cm in thickness.
8. Do not toast bread exceeding 10cm in height.
9. Do not cover the appliance with the dust cover or any other objects during operation.
10. Do not place paper, cardboard, plastic, or cloth inside, on top of or underneath the appliance.
11. Do not insert non-food items into the appliance.
12. Do not use this appliance to toast foods other than those recommended.
It is designed for Bread, Bagel, Waffle, Pastry, and English Muffin.
Toasting other food types may cause fire or damage the appliance.
13. Do not use the warming rack while the toasting slots are occupied.
Never heat two types of food simultaneously.

14. Do not touch the warming rack during use to avoid burns.
15. Ensure food is placed within the surface area of the warming rack for even heating.
16. Do not move food by hand while using the warming rack. If necessary, use food tongs or chopsticks to move food carefully to avoid burns.
17. A fire or electric shock may occur if the appliance is covered or comes into contact with flammable materials (including power cords, curtains, wallpaper, or cabinets) during operation.
18. Bread may burn. Therefore the appliance must not be used near or below curtains and other combustible materials, such as curtains.

2. Cleaning and Storage

1. Unplug and allow the appliance to cool completely before cleaning.
2. Remove and empty the crumb tray before every cleaning; weekly cleaning of the tray is recommended.
3. Do not wash the appliance, cord or plug under running water or immerse them. Prevent water from entering internal parts to prevent damage to the appliance.
4. Do not use abrasive tools (e.g., steel wool), toxic, or corrosive cleaners.
5. Wipe the exterior with a soft dry cloth. For stubborn dirt, use a slightly damp cloth with diluted neutral detergent, then wipe dry.
6. To clean crumbs at the bottom of the slots, use a towel-wrapped chopstick to gently wipe; avoid touching the heating elements.
7. After cleaning, ensure the appliance is completely dry before reuse.
8. Wash the warming rack with warm water and neutral dishwashing liquid, then wipe it dry with a soft cloth. When the warming rack is not in use, do not leave it on the appliance; cover the appliance with the dust cover.
9. Do not wrap the cord around the appliance or crush it during storage, as this may cause damage to the cord.

10. Store in the original box in a cool, dry, and safe place for long-term storage.
11. To ensure the safe operation of the toaster and prevent fire hazards, please clean the crumb tray at least once a week. The cleaning steps are as follows:

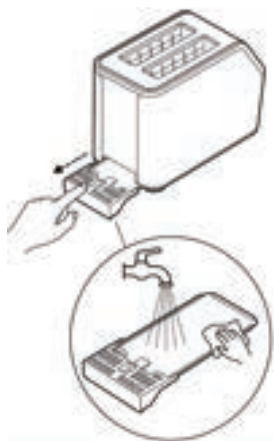


1. Power off and cool down: Unplug the power plug and wait for the toaster to cool down completely.
2. Eject the tray: Lightly press the tray at the bottom rear of the body (where "PUSH" is printed).
3. Full slide-out: Completely pull out the detachable tray along the guide rails.
4. Pour out crumbs: Pour the bread crumbs on the tray into a rubbish bin.
5. Wash and clean: This tray can be directly rinsed with water or wiped with a neutral detergent.
6. Dry completely: After washing, the tray must be thoroughly wiped dry or air-dried.
7. Push back in place: Push the dry tray back along the guide rails until you hear a "click" sound, which indicates it is locked.

Safety Warning:

- Never use the toaster if the crumb tray is not installed, not locked, or damp.
- Do not use steel wool or corrosive cleaners to avoid scratching the surface of the tray.

 3. Product Parts

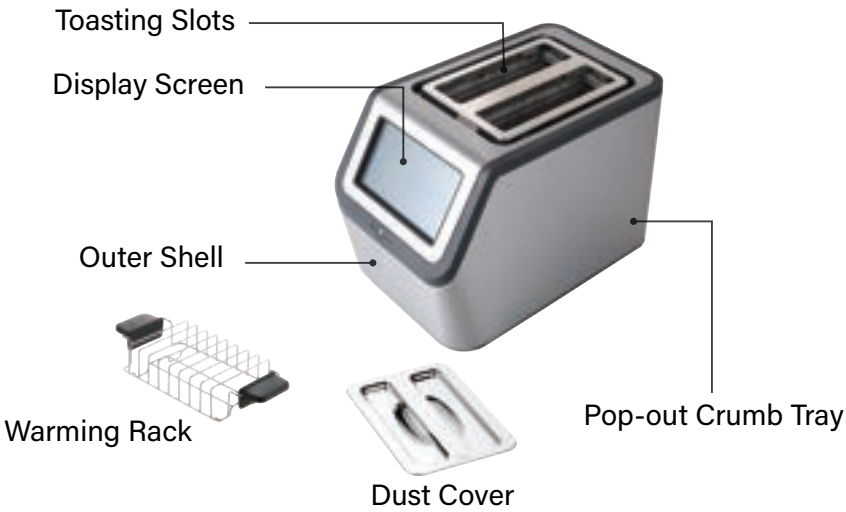

4. Warming Rack Instructions

1.Installation: Align the rack handles with the slot edges and place them down.

2.Placing Food: Place buns (croissants, dinner rolls, doughnuts) horizontally (refer to Image 1). Do not overlap for even heating. For thick slices, they can be placed vertically in the center holder (refer to Image 2).



(Image 1)



(Image 2)

3.Smart Panel Setup: Select the baking mode via the touch panel or manually adjust the browning level. Once finished, lift the rack using the insulated black plastic handles.

4.Purpose: Designed for non-sliced or irregular bread that won't fit in slots. Using convection heat to restore the warmth and softness of cooled baked food.

5.Safety and Maintenance

Heat Insulation Operation: Although a black heat-insulated handle is provided, please still be mindful of the heat of the central stainless steel section during operation.

Cleaning Recommendations: The warming rack can be disassembled and washed independently. Ensure the warming rack is completely dry before placing it into the appliance.

Do Not Obstruct Exhaust: Do not cover the warming rack with towels or paper while heating; ensure good ventilation at the top of the appliance.

5. Operating Instructions

1. System Startup:

Once connected to the power supply, the appliance will enter the working interface. If the bread icon on the display is flashing, tap the icon to activate the screen; otherwise, the operating system cannot be accessed.

2. Idle State:

If no operation is detected for over 30 seconds, the bread icon will flash again (indicating the system is locked). Tap the icon again to unlock the screen.

3. Standby & Power Saving Mode:

- **Standby Mode:** If there is no operation for 3 minutes, the appliance will automatically enter Standby Mode. The screen will only display the time and date. Tap the screen to return to the working interface.
- **Power Saving (Black Screen):** If the appliance remains idle for another 5 minutes after entering Standby Mode, the display will turn off automatically (black screen). Tap anywhere on the screen to restart.

4. Cooling Between Cycles:

After completing a toasting cycle, it is recommended to let the appliance cool down for at least 3 minutes before the next use. If used continuously without cooling, the residual heat may cause the second toasting cycle to be shorter than the standard time, leading to variations in the bread's browning level.

 
5. Overheat Protection:

If the appliance overheats due to repeated continuous use, the safety protection mechanism will trigger a forced shutdown. A warning icon will be displayed on the screen: (as shown in the picture below)



6. Operating Guide

Fixed Preset Modes

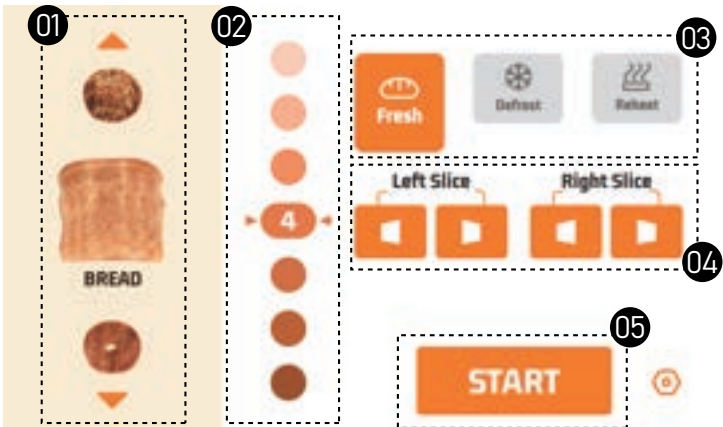

1.Bread Type Selection (5 Modes)

- BREAD: Sliced Bread
- BAGEL: Bagels
- WAFFLE: Waffles
- PASTRY: Filled Pastries
- ENGLISH MUFFIN: English muffins

2.Browning Levels

7 browning levels are available, allowing you to precisely adjust the toastiness from light to dark. (Except for PASTRY mode)

3.Toasting Modes

- Fresh: Ideal for fresh bread or toast.
- Defrost: Designed for chilled or frozen bread. The system automatically extends the toasting time to achieve the best results.
- Reheat: Quickly warms up cooled bread to restore its crispy texture.

4.Heating Elements

Equipped with a high-performance design, all 4 heating plates within the 2 toasting slots operate simultaneously to ensure even browning on both sides of the bread. (BAGEL mode only requires the two heating plates in the middle to operate)

5.Start Toasting

Once all settings are confirmed, tap the "START" button on the screen to begin toasting.

System operation Guide

1.Power On: Insert the plug into a power outlet and switch on the power.



2.Activate System: Once the interface appears, tap the flashing Bread icon to unlock the screen.

3.Personalized Settings: Select your preferred Bread Type and Browning Level.

 


4.Select Toasting Mode (Selected mode will be highlighted in Orange)


- Fresh: Ideal for standard fresh bread or toast.
- Defrost: Designed for chilled or frozen bread. The system automatically extends the toasting time to achieve the best results.
- Reheat: Quickly warms up cooled bread to restore its crispy texture.

5.Start Toasting: Once all settings are confirmed, tap the "START" button on the screen to begin toasting.

Custom Toasting Mode Setup

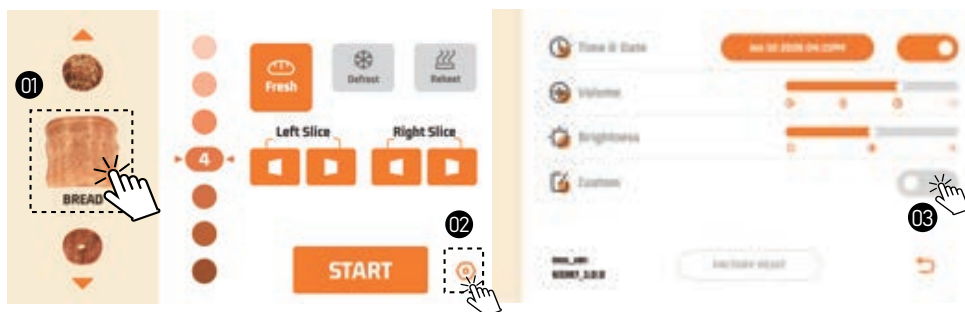

 After connecting to the power supply, enter the main page. Press 01 (BREAD) flashing icon to activate the interface, press 02 setting icon to go to the next page, then press 03 (Custom) icon to enter the custom settings interface shown below.

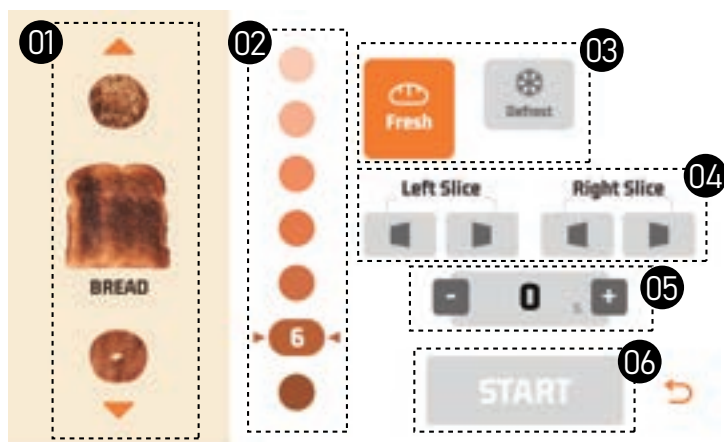

1. Bread Selection (5 Modes)

- BREAD: Sliced Bread
- BAGEL: Bagels
- WAFFLE: Waffles
- PASTRY: Filled Pastries
- ENGLISH MUFFIN: English Muffins

2. Browning Levels

7 browning levels are available, allowing you to precisely adjust the toastiness from light to dark.(Except for PASTRY mode) .

3. Toasting Modes

- Fresh: Ideal for fresh bread or standard toast.
- Defrost: Designed for chilled or frozen bread. The system automatically extends the toasting time to achieve the best results.

4. Heating Modes

The following 3 heating modes are available for selection:



1. 4 heating plates heat up simultaneously, suitable for BREAD, WAFFLE, PASTRY & ENGLISH MUFFIN.



2. Left and right side plates heat up, suitable for BREAD, WAFFLE, PASTRY & ENGLISH MUFFIN.



 
3. Left-middle and right-middle plates heat up, suitable for BREAD, BAGEL, WAFFLE, PASTRY & ENGLISH MUFFIN.

5. Time Adjustment

Time Setting: Manually increase or decrease the toasting time to fine-tune the crispness and color.

6. Start Toasting: Once all settings are confirmed, tap the "START" button to begin toasting.

In-Progress Functions

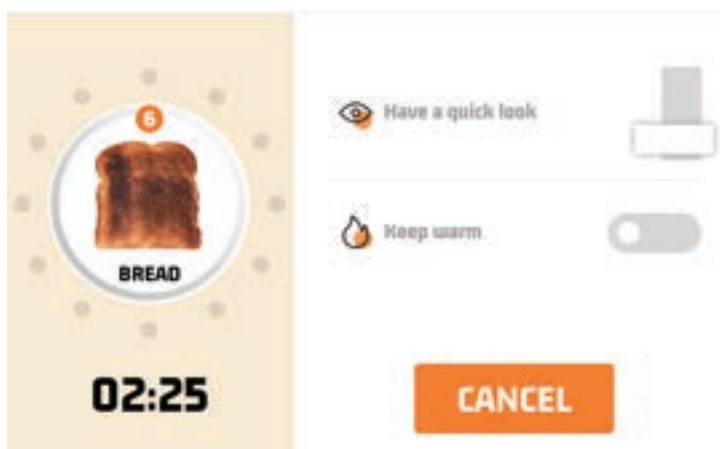

Have a quick Look

- Tap this icon to instantly raise the toasting slots to check the browning progress.
- The slots will automatically lower after 2 seconds to resume toasting.

Keep warm

Auto-Keep Warm: Once enabled, the toaster will automatically maintain warmth for up to 30 minutes after the toasting cycle finishes (Except for PASTRY mode).

Cancel

Tap the "CANCEL" icon at any time to stop the toasting process.

System Settings



Time & Date

Users can set the time and date manually. Once enabled, the screen will display the current time and date when the appliance is in stand-by mode.

[Date Setting Notice]

Due to built-in chip system limitations, the maximum date display on the screen can only be set up to the year 2037. This setting only affects the calendar display. The core baking functions of this appliance operate completely independently and will remain fully functional without any impact, even after the turn of the year.

Volume

Adjust the volume of the "ding" sound (toasting completion alert) to your preference.

Brightness

The backlight brightness of the display can be adjusted to match the ambient light in the room.

Custom

Enable this function to enter the Custom Toasting Mode interface.

7. Product Specifications

Model	RST-F12
Rated Voltage	220-240 V~ 50/60 Hz
Rated Power	1200-1400 W
Dimensions(W x D x H)	176 x 284 x 198 mm
Net Weight (Approx.)	2.71 kg

8. Troubleshooting

Problem	Possible Causes	Solutions
Screen not responding	System not activated: The bread icon is flashing on the screen.	Tap the flashing icon to activate the system before operation.
	System overload: Slow response or system freeze.	Unplug the power cord. Once the appliance has cooled down completely, reconnect and restart.
Smoke emitted during toasting	Incorrect settings: Selected unsuitable mode or browning level is too high.	Press the "CANCEL" button. Select a suitable setting and restart.
	Crumb accumulation: Food debris remains inside the slots or on the surface.	Clean the crumbs thoroughly before restarting.
	Crumb tray is full: Excess crumbs have built up in the tray.	Empty the crumb tray before restarting.
	Ingredients: Bread with high oil or sugar content tends to smoke easily.	Use suitable bread or choose a lighter browning level.

Toasting slots fail to rise automatically	Bread jammed: Bread is too large or stuck in the slot.	Disconnect power. Once cooled, use wooden or plastic tongs to remove the bread.
	System error: System crashed during operation.	Disconnect power. Once cooled, remove the bread and restart the system.
Appliance fails to operate	Component failure: Internal components may be damaged.	Contact Shun Hing Electric Service Centre Ltd.

* If the above solutions cannot fix the problem, stop using immediately and contact Shun Hing Electric Service Centre Ltd. to check and repair.

9. Special Avowal

1. The information above has been checked; our company reserves the hermeneutic power to any print errors or misunderstanding on the content.
2. Please note that any technology improvement will be added to the new versions of operation manual without any prior notices. The appliance appearance and specification are subject to the actual appliance.
3. E-copy of operation manual can be sent by e-mail on request, please call Shun Hing Electric Works and Engineering Co., Ltd at 2861 2767.

10. After Sales Service

Shun Hing Electric Works & Engineering Co., Ltd. authorizes Shun Hing Electric Service Centre Ltd. ("SHESC") to offer one year warranty service to the appliance commencing from the date of purchase invoice or redemption voucher. SHESC reserves the right to change the warranty terms without prior notice. For details of the warranty terms, you can refer to our website.



Rasonic 樂信牌

信興電工工程有限公司

SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓

電話：2861 2767 圖文傳真：2865 6706

網址：<http://www.shew.com.hk>

電郵：shew@shunhinggroup.com

Office: 9/F, Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, H.K.

Tel: 2861 2767 Fax: 2865 6706

Website: <http://www.shew.com.hk> E-mail: shew@shunhinggroup.com

保養及維修 Maintenance and Repair Service:

信興電器服務中心有限公司

SHUN HING ELECTRIC SERVICE CENTRE LTD.

香港新界葵涌勝耀街2號信興中心11樓

電話：2406 5666 圖文傳真：2408 0316

網址：<http://www.shesc.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. H.K.

Tel: 2406 5666 Fax: 2408 0316

Website: <http://www.shesc.com/en>

客戶服務中心

香港新界葵涌勝耀街2號信興中心1樓

九龍尖沙咀東部麼地道67號半島中心B座9樓

澳門慕拉士大馬路149號激成工業大廈(第一期)2樓F座

Customer Service Centre

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

9/F, Block B, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon

Avenida de Venceslau de Morais, No. 149, 2 andar - F, Edif. Industrial Keck

Seng (Bloco 1), Macau

有關最新之香港及澳門客戶服務中心資料，參閱信興服務中心網址：

<http://www.shesc.com/zh>

For the latest information of Hong Kong and Macau service centre,
please visit <http://www.shesc.com/en>

RST-F0626