



Installation Instruction

Air conditioner

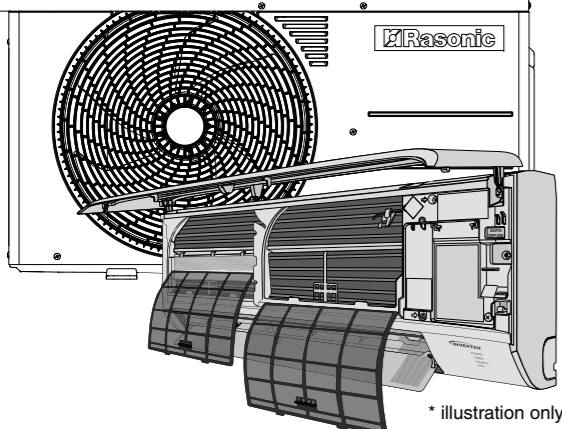


illustration only

MODEL NO : RS/RU-LU9** (1.0HP)
RS/RU-LU12** (1.5HP)

CAUTION

R32 REFRIGERANT

This Air Conditioner contains and operates with refrigerant R32.

THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL.

Refer to National, State, Territory and local legislation, regulations, codes, installation & operation manuals, before the installation, maintenance and/or service of this product.

Explanation of symbols displayed on the indoor unit or outdoor unit.

	WARNING	This symbol shows that this equipment uses a mildly flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.
	CAUTION	This symbol shows that the Installation Manual should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the Installation Manual.
	CAUTION	This symbol shows that there is information included in the Operation Manual and/or Installation Manual.

SAFETY PRECAUTIONS

- Read the following "SAFETY PRECAUTIONS" carefully before installation.
- Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the model to be installed.
- The caution items stated here must not be followed because these important contents are related to safety. The meaning of each indication used is as below. Incorrect installation due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications.

	WARNING	This indication shows the possibility of causing death or serious injury.	The items to be followed are classified by symbols:		Symbol with white background denotes item that is PROHIBITED.
	CAUTION	This indication shows the possibility of causing injury or damage to properties only.			Symbol with dark background denotes item that must be carried out.

Carry out test running to confirm that no abnormality occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

If the equipment is transferred to a new user or delivered to a recycling plant, be sure also to hand over the manual.

WARNING

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unit method or using incompatible material may cause product damage, burst and serious injury.
- Do not install outdoor unit near handrail of veranda. When installing air-conditioner unit on veranda of a high rise building, child may climb up to outdoor unit and cross over the handrail causing an accident.
- Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.
- Do not tie up the power supply cord into a bundle by hand.
- Abnormal temperature rise on power supply cord may happen.
- Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.
- Do not sit or step on the unit, you may fall down accidentally.
- Keep plastic bags (packaging material) away from children, it may cling to nose and mouth and prevent breathing.
- When installing or relocating air conditioner, do not let any substance other than the specified refrigerant, eg. air etc. mix into refrigeration cycle (piping). Mixing of air etc. will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.
- Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.

- For R32/R410A model, use piping, flare nut and tools which is specified for R32/R410A refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigeration cycle (piping), and possibly result in explosion and injury.
- For R32 and R410A, the same flare nut on the outdoor unit side and pipe can be used.
- Since with the working pressure for R32/R410A is higher than that of refrigerant R22 model, replacing conventional piping and flare nuts on the outdoor unit side are recommended.
- If reuse piping is unavoidable, refer to instruction "IN CASE OF REUSING EXISTING REFRIGERANT PIPING"
- Thickness of copper pipes used with R32/R410A must be more than 0.8 mm. Never use copper pipes thinner than 0.8 mm.
- It is desirable that the amount of residual oil less than 40 mg/10 m.
- Engage authorized dealer or specialist for installation.
- If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.
- For refrigeration system work, install according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.
- Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.
- Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not properly done, the set will drop and cause injury.
- For electrical work, follow the national regulation, legislation and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in the electrical work, it will cause electrical shock or fire.
- Do not use joint cable for indoor / outdoor connection cable. Use the specified indoor/outdoor connection cable, refer to instruction 5 "CONNECT THE CABLE TO THE INDOOR UNIT and connect tightly for indoor/outdoor connection. Clamp the cable so that no external force will have impact on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.
- Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock.
- This equipment is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD), with a rating of 30 mA at 1 sec or less. Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.
- During installation, install the refrigerant piping properly before running the compressor. Operation of compressor without fixing refrigeration piping and valves at opened position will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- During pump down operation, stop the compressor before removing the refrigeration piping. Removal of refrigeration piping while compressor is operating and valves are opened will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.
- After completion of installation, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant contacts with fire.
- Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant contacts with fire.
- Be aware that refrigerants may not contain an odour.

CAUTION

- This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown.
- Do not install the unit in a place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.
- Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form suffocating atmospheres.
- Do not release refrigerant during piping work for installation, re-installation and during repairing refrigeration parts. Take care of the liquid refrigerant, it may cause frostbite.
- Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.
- Do not touch the sharp aluminium fin, sharp parts may cause injury.
- Carry out drainage piping as mentioned in installation instructions.
- If drainage is not perfect, water may enter the room and damage the furniture.
- Select an installation location which is easy for maintenance. Incorrect installation, service or repair of this air conditioner may increase the risk of rupture and this may result in loss damage or injury and/or property.
- Power supply connection to the room air conditioner.
 - Use power supply cord 3 x 1.5 mm² (1.0 - 1.5HP), type designation 60245 IEC 57 or heavier cord.
 - Connect the power supply cord to the mains using one of the following method.
 - Power supply point should be in easily accessible place for power disconnection in case of emergency.
- In some countries, permanent connection of this air conditioner to the power supply is prohibited.
 - Power supply connection to the receptacle using power plug.
 - Use an approved 15/16 A (1.0 - 1.5HP) power plug with earth pin for the connection to the socket.
 - Power supply connection to a circuit breaker for the permanent connection.
 - Use an approved 16 A (1.0 - 1.5HP) circuit breaker for the permanent connection. It must be a double pole switch with a minimum 3.0 mm contact gap.
- Installation work. It may need two people to carry out the installation work.
- Keep any required ventilation openings clear of obstruction.

PRECAUTION FOR USING R32 REFRIGERANT

- Pay careful attention to the following points and the installation work procedures.

WARNING

- The appliance shall be stored, installed and operated in a well ventilated room with indoor floor area larger than A_{min} [refer Table A] and without any continuously operating ignition source. Keep away from open flames, any operating gas appliances or any operating electric heater. Else, it may explode and cause injury or death.
- The mixing of different refrigerants within a system is prohibited. Models that use refrigerant R32 and R410A have a different charging port thread diameter to prevent erroneous charging with refrigerant R22 and for safety.
- Therefore, check beforehand. [The charging port thread diameter for R32 and R410A is 12.7 mm (1/2 inch).]
- Ensure that foreign matter (oil, water, etc.) does not enter the piping.
- Also, when storing the piping, securely seal the opening by pinching, taping, etc. (Handling of R32 is similar to R410A.)
- Operation, maintenance, repairing and refrigerant recovery should be carried out by trained and certified personnel in the use of flammable refrigerants and as recommended by the manufacturer. Any personnel conducting an operation, servicing or maintenance on a system or associated parts of the equipment should be trained and certified.
- Any part of refrigerating circuit (evaporators, air coolers, AHU, condensers or liquid receivers) or piping should not be located in the proximity of heat sources, open flames, operating gas appliance or an operating electric heater.
- The user/owner or their authorized representative shall regularly check the alarms, mechanical ventilation and detectors, at least once a year, where as required by national regulations, to ensure their correct functioning.
- A logbook shall be maintained. The results of these checks shall be recorded in the logbook.
- In case of ventilations in occupied spaces shall be checked to confirm no obstruction.
- Before a new refrigerating system is put into service, the person responsible for placing the system in operation should ensure that trained and certified operating personnel are instructed on the basis of the instruction manual about the construction, supervision, operation and maintenance of the refrigerating system, as well as the safety measures to be observed, and the properties and handling of the refrigerant used.
- The general requirement of trained and certified personnel are indicated as below:
 - Knowledge of legislation, regulations and standards relating to flammable refrigerants; and,
 - Detailed knowledge of and skills in handling flammable refrigerants, personal protective equipment, refrigerant leakage prevention, handling of cylinders, charging, leak detection, recovery and disposal; and,
 - Able to understand and to apply in practice the requirements in the national legislation, regulations and Standards; and,
 - Continuously undergo regular and further training to maintain this expertise.
- Air-conditioner piping in the occupied space shall be installed in such a way to protect against accidental damage in operation and service.
- Precautions shall be taken to avoid excessive vibration or pulsation to refrigerating piping.
- Ensure protection devices, refrigerating piping and fittings are well protected against adverse environmental effects (such as the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris).
- Expansion and contraction of long runs piping in refrigerating systems shall be designed and installed securely (mounted and guarded) to minimize the likelihood hydraulic shock damaging the system.
- Protect the refrigerating system from accidental rupture due to moving furniture or reconstruction activities.
- To ensure no leaking, field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure (>1.04MPa, max 4.15MPa). No leak shall be detected.

2-10. Checks to electrical devices

- Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.
- Initial safety checks shall include but not limit to:-
 - That capacitors are discharged; this shall be done in a safe manner to avoid possibility of sparking.
 - That there is no live electrical components and wires are exposed while charging, recovering or purging the system.
 - That there is continuity of earth bonding.
- At all times the manufacturer's maintenance and service guidelines shall be followed.
- If in doubt consult the manufacturer's technical department for assistance.
- If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with.
- If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used.
- The owner of the equipment must be informed or reported so all parties are advised thereinafter.

3. Repairs to sealed components

- During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.
- It is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
- Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connectors, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
- Ensure that apparatus is mounted securely.
- Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres.
- Replacement parts shall be in accordance with the manufacturer's specifications.

NOTE: - The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment. Intrinsically safe components do not have to be isolated prior to working on them.

4. Repair to intrinsically safe components

- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.
- Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere.
- The test apparatus shall be at the correct rating.
- Replace components only with parts specified by the manufacturer. Unspecified parts by manufacturer may result ignition of refrigerant in the atmosphere from a leak.

5. Cabling

- Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects.
- The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

6. Detection of flammable refrigerants

- Under no circumstances shall potential sources of ignition be used in the searching or detection of refrigerant leaks.
- A halide torch (or any other detector using a naked flame) shall not be used.
- The following leak detection methods are considered acceptable for all refrigerant systems.
 - No leaks shall be detected when using detection equipment with a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure (>1.04MPa, max 4.15MPa) for example, a universal sniffer.
 - Electronic leak detectors may be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)
- Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.
- Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.
- Leak detection fluids are also suitable for use with most refrigerants, for example, bubble method and fluorescent method pipes-work. The use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
- If a leak is suspected, all naked flames shall be removed/extinguished.
- If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. The precautions in #7 must be followed to remove the refrigerant.

7. Removal and evacuation

- When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:
 - remove refrigerant -> purge the circuit with inert gas -> evacuate -> purge with inert gas -> open the circuit by cutting or brazing
- The refrigerant charge shall be recovered into the correct recovery cylinders.
- The system shall be purged with OFN to render the appliance safe. (remark: OFN = oxygen free nitrogen, type of inert gas) This process may need to be repeated several times.
- Compressed air or oxygen shall not be used for this task.
- Purging shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.
- This process shall be repeated until no refrigerant is within the system.
- When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.
- This operation is absolutely vital if brazing operations on the pipe work are to take place.
- Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and there is ventilation available.

8. Charging procedures

- In addition to conventional charging procedures, the following requirements shall be followed.
 - Ensure that contamination of different refrigerants does not occur when using charging equipment.
 - Hoses or lines shall be as short as possible to minimize the amount of refrigerant contained in them.
 - Cylinders shall be kept in an appropriate position according to the instructions.
 - Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
 - Label the system when charging is complete (if not already).
 - Extreme care shall be taken not to over fill the refrigerating system.
- Prior to recharging the system it shall be pressure tested with OFN (refer to #7).
- The system shall be leak tested on completion of charging and prior to commissioning.
- A follow up leak test shall be carried out prior to leaving the site.
- Electrostatic charge may accumulate and create a hazardous condition when charging and discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.

9. Decommissioning

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details.
- It is recommended good practice that all refrigerants are recovered safely.
- Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant.
- It is essential that electrical power is available before the task is commenced.
 - Become familiar with the equipment and its operation.
 - Isolate system electrically.
- Before attempting the procedure ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.
- Pump down refrigerant system, if possible.
- If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- Make sure that cylinder is situated on the scales before recovery takes place.
- Start the recovery machine and operate in accordance with instructions.
- Do not over fill cylinders. (No more than 80 % volume liquid charge).
- Do not exceed the maximum working pressure of the cylinder, even temporarily.
- When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- Recovered refrigerant shall not be charged into another refrigerating system unless it has been cleaned and checked.
- Electrostatic charge may accumulate and create a hazardous condition when charging or discharging the refrigerant. To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.

10. Labelling

- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.
- The label shall be dated and signed.
- Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

11. Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge are available.
- All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).
- Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.
- Recovery cylinders are evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerants.
- In addition, a set of calibrated weighing scales shall be available and in good working order.
- Hoses shall be complete with leak-free disconnect couplings and in good condition.
- Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.
- Consult manufacturer if in doubt.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.
- Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
- The evacuation process shall be carried out prior to returning the compressor to the suppliers.
- Only electric heating to the compressor body shall be employed to accelerate this process.
- When oil is drained from a system, it shall be carried out safely.

Required tools for Installation Works

1 Phillips screw driver	6 Pipe cutter	11 Thermometer	16 Torque wrench
2 Level gauge	7 Reamer	12 Megameter	18 Nmm (1.8 kgf*cm)
3 Electric drill, hole core drill (ø70 mm)	8 Knife	13 Multimeter	42 Nmm (4.3 kgf*cm)
4 Hexagonal wrench (4 mm)	9 Gas leak detector	14 Vacuum pump	55 Nmm (5.6 kgf*cm)
5 Spanner	10 Measuring tape	15 Gauge manifold	65 Nmm (6.6 kgf*cm)
			100 Nmm (10.2 kgf*cm)

Attached accessories

No.	Accessories part	Qty.	No.	Accessories part	Qty.
1	Installation plate	1	6	Remote control holder fixing screw	2
2	Installation plate fixing screw	5	7	Drain pan	1
3	Remote Control	1	8	Drain elbow	1
4	Battery	2			
5	Remote control holder	1			

Applicable piping kit	Piping size	
	Gas	Liquid
CZ-3F5, 7BP	9.52 mm (3/8")	6.35 mm (1/4")
CZ-4F5, 7, 10BP	12.7 mm (1/2")	6.35 mm (1/4")

Accessories: Flaring piping kit CZ-4F5, 7, 10AN

SELECT THE BEST LOCATION

INDOOR UNIT

- Do not install the unit in excessive oil fume area such as kitchen, workshop and etc.
- There should not be any heat source or steam near the unit.
- There should not be any obstacles blocking the air circulation.
- A place where air circulation in the room is good.
- A place where drainage can be easily done.
- A place where noise prevention is taken into consideration.
- Do not install the unit near the door way.
- Ensure the spaces indicated by arrows from the wall, ceiling, fence or other obstacles.
- Indoor unit of this air conditioner shall be installed in a height of at least 1.8 m.

OUTDOOR UNIT

- If an awning is built over the unit to prevent direct sunlight or rain, be careful that heat radiation from the condenser is not obstructed.
- There should not be any animal or plant which could be affected by hot air discharged.
- Keep the spaces indicated by arrows from wall, ceiling, fence or other obstacles.
- Do not place any obstacles which may cause a short circuit of the discharged air.
- If piping length is over the [piping length for additional gas], additional refrigerant should be added as shown in the (Table A).

Table A

Model	Capacity W (HP)	Piping size		Std. Length (m)	Max. Elevation (m)	Min. Piping Length (m)	Max. Piping Length (m)	Additional Refrigerant (g/m)	Piping Length for add. gas (m)	Max. Refrigerant Charge (kg)	A _{min} (m ²)
		Gas	Liquid								
LU9**	1.0HP	9.52 mm (3/8")	6.35 mm (1/4")	5	1	15	10	7.5	0.60		Not applicable (*)
LU12**	1.5HP	12.7 mm (1/2")	6.35 mm (1/4")	5	1	15	15	7.5	0.73		Not applicable (*)

Example: For LU9**
If the unit is installed at 10 m distance, the quantity of additional refrigerant should be => 10 m (distance) - 7.5 m (piping length for additional gas) => 2.5 m x 10 g/m (additional Refrigerant) => [25 g]

$A_{min} = (m_r / ((2.5 \times (LFL)^{0.67} \times h_r)))^2$ ** not less than safety factor margin

m_r = Refrigerant minimum room area, in m²
 LFL = Refrigerant charge in appliance, in kg
 h_r = Installation height of the appliance (1.8 m for wall mounted)
 SF = Safety factor with a value of 0.75

** The required minimum room area, shall also be governed by the safety factor margin formula below:
 $A_{min} = m_r / (SF \times LFL \times h_r)$ The higher value shall be taken when determining the room area.

(*)=> Systems with total refrigerant charge, m_r lower than 1.84 kg are not subjected to any room area requirements.

It is advisable to avoid more than 2 blockage directions for better ventilation.
 For installation with 3 wall blockage (top, left & right), ensure the distance to unit for either left side or top side must be 200 mm or more.

CAUTION

1. General

- Must ensure the installation of pipe-work shall be kept to a minimum. Avoid use dented pipe and do not allow acute bending.
- Must ensure mechanical connections be accessible for maintenance purposes.
- Must comply with national gas regulations, state municipal rules and legislation.
- Notify relevant authorities in accordance with all applicable regulations.
- Must ensure mechanical connections be accessible for maintenance purposes.
- In cases that require mechanical ventilation, ventilation openings shall be kept clear of obstruction.
- When disposal of the product, do follow to the precautions in #11 and comply with national regulations.
- In case of field charge, the effect on refrigerant charge caused by the different pipe length has to be quantified, measured and labelled. Always contact local municipal offices for proper handling.
- Ensure the actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed.
- Ensure refrigerant charge not to leak.
- Wear appropriate protective equipment, including respiratory protection, as conditions warrant.
- Keep all sources of ignition and hot metal surfaces away.

2. Servicing

2-1. Qualification of workers

- Any qualified person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized certification, ventilation specification.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
- Servicing shall be performed only as recommended by the manufacturer.
- The system is inspected, regularly supervised and maintained by a trained and certified service personnel who is employed by the person user or party responsible.

2-2. Checks to the area

- Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized.
- For repair to the refrigerating system, the precautions in #2-3 to #2-7 must be followed before conducting work on the system.

2-3. Work procedure

- Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.

2-4. General work area

- All maintenance staff and others working in the local area shall be instructed and supervised on the nature of work being carried out.
- Avoid working in confined spaces. Always ensure away from source, at least 2 meter of safety distance, or zoning of free space area of at least 2 meter in radius.

2-5. Checking for presence of refrigerant

- The area shall be checked with an appropriate refrigerant detector prior to start of work, to ensure the technician is aware of potentially flammable atmospheres.
- Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non sparking, adequately sealed or intrinsically safe.
- In case of leakage/spillage happened, immediately ventilate area and stay upwind and away from spill/release.
- In case of leakage/spillage happened, do notify persons down wind of the leaking/spill, isolate immediate hazard area and keep unauthorized personnel out.

2-6. Presence of fire extinguisher

- If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available at hand.
- Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.

2-7. No ignition sources

- No person carrying out work in relation to a refrigerating system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. He/She must not be smoking when carrying out such work.
- All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation.
- When repairing and disconnecting flammable refrigerant can possibly be released to the surrounding space.
- Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.
- "No Smoking" signs shall be displayed.

2-8. Ventilated area

- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work.
- A degree of ventilation shall continue during the period that the work is carried out.
- The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.

2-9. Checks to the refrigerating equipment

- Where electrical components are being changed, they shall be fit for the purpose and to the correct specification.
- At all times the manufacturer's maintenance and service guidelines shall be followed.
- If in doubt consult the manufacturer's technical department for assistance.
- The following checks shall be applied to installations using flammable refrigerants.
 - The actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed.
 - The ventilation machinery and outlets are operating adequately and are not obstructed.
 - If an indirect refrigerant circuit is being used, the secondary circuit shall be checked for the presence of refrigerant.
 - Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.
 - Refrigerating pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corroded refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are properly protected against being so corroded.

Indoor/Outdoor Unit Installation Diagram

Length of power supply cord: About 650 mm (Left), About 1550 mm (Right)

Piping direction: Right (Front side), Right Rear, Right bottom, Left Rear, Left bottom

Attention not to bend up drain hose

(+) Holder at the rear of chassis (Refer clause "4 Indoor Unit Installation") need to be used to prop up the unit, this distance shall be 65 mm or more.

Installation parts you should purchase (X):

- Installation plate
- Sleeve (X)
- Bushing-Sleeve (X)
- Putty (X) (Gum Type Sealer)
- Bend the pipe as closely on the wall as possible, but be careful that it doesn't break.
- Power supply cord (X)
- Vinyl tape (wide) (X)
- Apply after carrying out a drainage test.
- To carry out the drainage test, remove the air filters and pour water into the heat exchanger.
- Saddle (X)

Attaching the remote control holder to the wall: Remote control holder fixing screws

Remote control holder

Remote control

Window partition

Drain pan

Insulation of piping connections: Carry out insulation after checking for gas leaks and secure with vinyl tape. X Vinyl tape

CAUTION: After install pipes and wire connection please be sure that install the Drain pan. Drain pan improper installation may cause leakage. Unscrew the 2 screws on the cabinet side plate and use it to fix the Drain pan.

This illustration is for explanation purposes only.

Additional drain hose (X)

Opening at partition (sealed with silicon glue, etc.)

Additional drain hose (X)

View A: Drain pan fixing screw, Liquid piping, Apply silicon (X), Band (X), Insulators

Gas side piping (X)

Gas piping

1 SELECT THE BEST LOCATION (Refer to "Select the best location" section)

2 HOW TO FIX INSTALLATION PLATE

The mounting wall shall be strong and solid enough to prevent it from vibration.

Dimension					
1	2	3	4	5	6
465 mm	70 mm (+)	365 mm	415 mm	10 mm	70 mm

• The center of installation plate should be at more than ① at right and left of the wall.
 • The distance from installation plate edge to ceiling should be more than ②.
 • From installation plate center to unit's left side is ③.
 • From installation plate center to unit's right side is ④.

⑤ For left side piping, piping connection for liquid should be about ⑤ from this line.
 ⑥ For left side piping, piping connection for gas should be about ⑥ from this line.

3 TO DRILL A HOLE IN THE WALL AND INSTALL A SLEEVE OF PIPING

1. Insert the piping sleeve to the hole.
 2. Fix the bushing to the sleeve.
 3. Cut the sleeve until it extrudes about 15 mm from the wall.
 4. Finish by sealing the sleeve with putty or caulking compound at the final stage.

CAUTION
 When the wall is hollow, please be sure to use the sleeve for tube assembly to prevent dangers caused by mice biting the connection cable.

4 INDOOR UNIT INSTALLATION

Do not turn over the unit without shock absorber during pull out the piping. It may cause intake grille damage.
 Use shock absorber during pull out the piping to protect the intake grille from damage.

1. FOR THE RIGHT REAR PIPING

- Pull out the Indoor piping
- Install the Indoor Unit
- Secure the Indoor Unit
- Insert the connection cable

2. FOR THE RIGHT AND RIGHT BOTTOM PIPING

- Pull out the Indoor piping
- Install the Indoor Unit
- Insert the connection cable
- Secure the Indoor Unit

Secure the Indoor Unit

1. Power supply cord arrangement
 Excess length of power supply cord should be arranged behind the chassis at piping keeping area as shown in the diagram without tying up in a bundle. Ensure that the power supply cord is not clamped in between unit's hook (2 position) and installation plate. Ensure that the power supply cord is not stretched between chassis back and installation plate. It may create squeak sound.

2. Press the lower left and right side of the unit against the installation plate until hooks engage with their slot (sound click).

To take out the unit, push the ∇ marking at the bottom unit, and pull it slightly towards you to disengage the hooks from the unit.

Insert the connection cable

Guide surface

Connection cable

Gas side piping

Liquid side piping

Drain hose

3. FOR THE EMBEDDED PIPING

- Change the drain hose position
- Bend the embedded piping
- Pull the connection cable into Indoor Unit
- Cut and flare the embedded piping
- Install the Indoor Unit
- Connect the piping
- Insulate and finish the piping
- Secure the Indoor Unit

Change the drain hose position

Adjust the piping slightly downwards.

In case of left piping how to insert the connection cable and drain hose.
 (For the right piping, follow the same procedure)

How to pull the piping and drain hose out, in case of the embedded piping.

Apply putty or caulking material to seal the wall opening.

5 CONNECT THE CABLE TO THE INDOOR UNIT

The indoor and outdoor unit connection cable can be connected without removing the front grille.

- Install the indoor unit on the installing holder that mounted on the wall.
- Open the front panel and grille door by loosening the screw.
- Connection cable between indoor unit and outdoor unit shall be approved polychloroprene sheathed. 4 x 1.5 mm² (1.0 - 1.5HP) flexible cord, type designation 60245 IEC 57 or heavier cord. Do not use joint connection cable. Replace the wire if the existing wire (from concealed wiring, or otherwise) is too short.
- Bind all the indoor and outdoor Connection cable with tape and route the connection cable via the right side escapement.

WARNING
 This equipment must be properly earthed.

5 REMOVE THE TAPES AND CONNECT THE CONNECTION CABLE BETWEEN INDOOR UNIT AND OUTDOOR UNIT ACCORDING TO THE DIAGRAM BELOW.

Terminals on the indoor unit
 Colour of wires (connection cable)
 Terminals on the outdoor unit

④ Connection cable

Terminal Board

Earth Wire longer than others AC wires for safety reason

Control Board

Indoor & outdoor connection cable

Outdoor Unit

WARNING
 This equipment must be properly earthed.

6 Secure firmly the connecting cable onto the control board with the holder. Do not overtighten holder screw, as this may damage the holder.

7 Close grille door by tighten with screw and close the front panel.

Note:
 • Isolating Devices (Disconnecting means) should have minimum 3.0 mm contact gap.
 • Ensure the colour of wires of outdoor unit and the terminal Nos. are the same to the indoor's respectively.
 • Earth wire shall be Yellow/Green (Y/G) in colour and longer than other AC wires as shown in the figure for the electrical safety in case of the slipping out of the cord from the anchorage.

WIRE STRIPPING, CONNECTING REQUIREMENT

Wire stripping

No loose strand when inserted

Indoor/outdoor connection terminal board

5 mm or more (gap between wires)

Conductor fully inserted

Conductor over inserted

Conductor not fully inserted

ACCEPT

PROHIBITED

PROHIBITED

WARNING
 RISK OF FIRE
 JOINING OF WIRES MAY CAUSE OVERHEATING AND FIRE.

Do not joint wires

Use complete wire without joining.

Use approved socket and plug with earth pin.

Wire connection in this area must follow to national wiring rules.

1 SELECT THE BEST LOCATION (Refer to "Select the best location" section)

2 INSTALL THE OUTDOOR UNIT

After selecting the best location, start installation according to Indoor/Outdoor Unit Installation Diagram.
 Please mount the outdoor unit on stable ground to prevent vibration and increase of noise level.
 Decide the location for piping after sorting out the different types of pipe available.

1. Fix the unit on concrete or rigid frame firmly and horizontally by bolt nut (ø8 mm).
 2. When installing at roof, please consider strong wind and earthquake.

CONDENSED WATER DISPOSAL OF OUTDOOR UNIT

Please fasten the installation stand firmly with bolt or nails.
 There is hole on the base of outdoor unit for condensed water to exhaust.
 When connecting the drain hose, it must be below the horizontal line and the drain hose keep smooth, in order to flow condensed water to the drain elbow.

Base foot secure with bolt nut

CAUTION
 Install the outdoor unit horizontally or keep the air outlet side higher than the horizontal plane 0 - 2° and make sure that condensate drains away.

3 CONNECTING THE PIPING

Connecting Piping to Indoor

For connection joint of all models
 Please make flare after inserting flare nut (locate at joint portion of tube assembly) onto the copper pipe. (In case of using long piping)
 Connect the piping

Align the center of piping and sufficiently tighten the flare nut with fingers.
 Further tighten the flare nut with torque wrench in specified torque as stated in the table.

Additional Precautions For R32 Models when connecting by flaring at indoor side

Ensure to do re-flaring of pipes before connecting to units to avoid leaking

Seal sufficiently the flare nut (both gas and liquid sides) with neutral cure (Alkoxy type) & ammonia-free silicone sealant and insulation material to avoid the gas leak caused by freezing.

Neutral cure (Alkoxy type) & ammonia-free silicone sealant is only to be applied after pressure testing and clearing up by following instructions of sealant, only to the outside of the connection. The aim is to prevent moisture from entering the connection joint and possible occurrence of freezing. During sealant will take some time. Make sure sealant will not peel off when wrapping the insulation.

Apply neutral cure (Alkoxy type) and ammonia-free silicone sealant along the circumference

Piping size	Torque
6.35 mm (1/4")	118 Nm (1.8 kgf·m)
9.52 mm (3/8")	142 Nm (2.3 kgf·m)
12.7 mm (1/2")	155 Nm (2.6 kgf·m)
15.88 mm (5/8")	165 Nm (2.6 kgf·m)
19.05 mm (3/4")	100 Nm (1.2 kgf·m)

Do not overtighten, overtightening may cause gas leakage.

CUTTING AND FLARING THE PIPING

1. Please cut using pipe cutter and then remove the burrs.
 2. Remove the burrs by using reamer. If burrs is not removed, gas leakage may be caused. Turn the piping end down to avoid the metal powder entering the pipe.
 3. Please make flare after inserting the flare nut onto the copper pipes.

Improper flaring

Inclined Surface Cracks, Uneven thickness

When properly flared, the internal surface of the flare will evenly shine and be of even thickness. Since the flare part comes into contact with the connections, carefully check the flare finish.

AIR PURGING METHOD IS PROHIBITED FOR R32 SYSTEM

4 AIR TIGHTNESS TEST ON THE REFRIGERATING SYSTEM

Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation.

There is no extra refrigerant in the outdoor unit for air purging.

Before system is charged with refrigerant and before the refrigerating system is put into operation, below site test procedure and acceptance criteria shall be verified by the certified technicians, and/or the installer.
 Be sure to check whole system for gas leakage.

Preparation (Step 1-2)

- Connect a charging hose with a push pin to the Low side of a charging set and the service port of the 3-way valve. During extremely cold winter, material contraction might happened, try to further tighten the 2-way, 3-way valve to ensure they are fully closed.
- Attach the gauge manifold set correctly and tightly. Make sure that both valves of the manifold gauge (low pressure and high pressure) is in close position.

Evacuation (Step 3-4)

- Connect the center hose of the manifold gauge to a vacuum pump.
- Turn on the power switch of the vacuum pump, then turn open the low side manifold gauge valve and make sure that the needle in the gauge moves from 0cmHg (0 MPa) to -76 cmHg (-0.1 MPa) or vacuum until 500 microns is achieved. This process continues for approximately ten minutes. Then close the low side manifold gauge valve.

Tightness Test with Inert Gas (Step 5-7)

- Remove the vacuum pump from the centre hose and connect the center hose to cylinder of any applicable inert gas as test gas.
- Charge test gas into the system and wait until the pressure within the system to reach min. 1.04MPa (10.4bar).
- Wait and monitor the pressure reading on the gauges. Check if there is any pressure drop. Waiting time depends on the size of the system.
- If there is any pressure drop, perform step 9-12. If there is no pressure drop, perform step 13.

Recovery of Test Gas (Step 13)

- Use Gas Leak Detector to check for leaks. There is use the detection equipment with a sensitivity of 5 grams per year of test gas or better.
- Move the probe along the air conditioning system to check for leaks, and mark for repair.
 - Any leak detected and marked shall be repaired.
 - After repair, repeat evacuation steps 3-4 and tightness test steps 5-7. Check the pressure drop as in step 8.

Evacuation (Step 3-4)

- Disconnect the charging hose from the service port of the 3-way valve.
- Tighten the service port caps of the 3-way valve at a torque of 6 Nm with a torque wrench.
- Remove the valve caps of both of the 2-way valve and 3-way valve.
- Open both of the valves, using a hexagonal wrench (4 mm).
- It is recommended to allow refrigerant slowly flow into the refrigerant system to prevent refrigerant freezing. Slightly open 2-way valve for 5 seconds then close the valve. Repeat this action for 3 cycles then fully open the valve.
- Mount back the valve caps onto the 2-way valve and the 3-way valve to complete this process.

Notes: Recommended use of any of the following leak detector,
 I) Universal Sniffer Leak detector
 II) Electronic halogen leak detector
 III) Ultrasonic Leak Detector

5 CONNECT THE CABLE TO THE OUTDOOR UNIT

Remove the control board cover from the unit by loosening the screws.
 Connection cable between indoor unit and outdoor unit shall be approved polychloroprene sheathed 4 x 1.5 mm² flexible cord, type designation 60245 IEC 57 or heavier cord. Do not use joint connection cable. Replace the wire if the existing wire (from concealed wiring, or otherwise) is too short.

Secure the cable onto the control board with the holder (clammer).
 Attach the control board cover to the original position with the screws.
 For wire stripping and connection requirement, refer to instruction ⑤ of indoor unit.
 Earth wire shall be Yellow/ Green (Y/G) in color and longer than other AC wires for safety reason.

6 PIPING INSULATION

Please carry out insulation at pipe connection portion as mentioned in Indoor/Outdoor Unit Installation Diagram. Please wrap the insulated piping end to prevent water from going inside the piping.
 If drain hose or connecting piping is in the room (where dew may form), please increase the insulation by using POLY-E FOAM with thickness 6 mm or above.

HOW TO TAKE OUT FRONT GRILLE

Please follow the steps below to take out front grille if necessary such as when installing or servicing.

- Open front panel.
- Remove the 3 mounting screws on the front grille as shown in the illustration below.
- Slide the 3 lock knobs on the upside of front grille to unlock position.
- Pull the front grille towards you to remove the front grille.

AUTO SWITCH OPERATION

The below operations will be performed by pressing the "AUTO" switch.

- AUTO OPERATION MODE**
 The Auto Switch will be activated immediately once the Auto Switch is pressed and release within 5 sec..
- TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE)**
 The Test Run operation will be activated if the Auto Switch is pressed continuously for more than 5 sec. to below 8 sec. A "peep" sound will occur at the fifth sec., in order to identify the starting of Test Run operation.
- REMOTE CONTROLLER RECEIVING SOUND ON/OFF**
 The ON/OFF of Remote controller receiving sound can be change over by the following steps:
 a) Press "AUTO" switch continuously for more than 16 sec. to below 21 sec. A "peep", "peep", "peep", "peep" sound will occur at the sixteenth sec..
 b) Press the "AC Reset" button once, "peep" sound will occur indicates that Remote controller receiving sound setting mode is activated.
 c) Press "AUTO" switch again. Everytime "AUTO" switch is pressed (within 60 sec. interval), Remote controller receiving sound status will be reversed between ON and OFF. Long "peep" sound indicates that Remote controller receiving sound is ON. Short "peep" sound indicates that Remote controller receiving sound is OFF.

CHECK THE DRAINAGE

Open front panel and remove air filters. (Drainage checking can be carried out without removing the front grille.)
 Pour a glass of water into the drain tray-styrofoam.
 Ensure that water flows out from drain hose of the indoor unit.

EVALUATION OF THE PERFORMANCE

Operate the unit at cooling/heating operation mode for fifteen minutes or more.
 Measure the temperature of the intake and discharge air.
 Ensure the difference between the intake temperature and the discharge is more than 8 °C during Cooling operation or more than 14 °C during Heating operation.

Note:
 During winter, turn on the power supply and standby the unit for at least 15 minutes before test run. Allow sufficient time to warm up refrigerant and prevent wrong error code judgement.

IN CASE OF REUSING EXISTING REFRIGERANT PIPING

Observe the followings to decide reusing the existing refrigerant piping.
 Poor refrigerant piping could result in product failure.

- In the circumstances listed below, do not reuse any refrigerant piping. Instead, make sure to install a new piping.
 - Heat insulation is not provided for either liquid-side or gas-side piping or both.
 - The existing refrigerant pipe has been left in an open condition.
 - The diameter and thickness of the existing refrigerant piping does not meet the requirement.
 - The piping length and elevation does not meet the requirement.
- Perform proper pump down before reuse piping.
- In the circumstances listed below, clean it thoroughly before reuse.
 - Pump down operation cannot be performed for the existing air-conditioner.
 - The compressor has a failure history.
 - Oil color is darken. (ASTM 4.0 and above).
 - The existing air-conditioner is gas/oil heat pump type.
- Do not reuse the flare to prevent gas leak. Make sure to install a new flare.
- If there is a welded part on the existing refrigerant piping, conduct a gas leak check on the welded part.
- Replace deteriorated heat insulating material with a new one. Heat insulating material is required for both liquid-side and gas-side piping.

Proper Pump Down Method

- Operate air conditioner on cooling mode for 10 - 15 minutes.
- After 10 - 15 minutes of pre operation, close 2 way valve. After 3 minutes, close 3 way valve.
- Take out air conditioner unit.
- Install New Refrigerant air conditioner.

Most Important Process Purpose: To make the oil & refrigerant mix together. They are in separated condition when air conditioner is stopped.

Mixed refrigerant & oil will be collected into outdoor unit.

Only very small amount of oil remain inside piping, which is acceptable.


CHECK ITEMS

Is there any gas leakage at flare nut connections?
 Has the heat insulation been carried out at flare nut connection?
 Is the connection cable being fixed to terminal board firmly?
 Is the connection cable being clamped firmly?
 Is the drainage ok? (Refer to "Check the drainage" section)
 Is the earth wire connection properly done?

Is the indoor unit properly hooked to the installation plate?
 Is the power supply voltage complied with rated value?
 Is there any abnormal sound?
 Is the cooling/heating operation normal?
 Is the thermostat operation normal?
 Is the remote control's LCD operation normal?

1 選擇最佳位置 (參考“選擇最佳位置”之頁)

2 如何固定安裝板

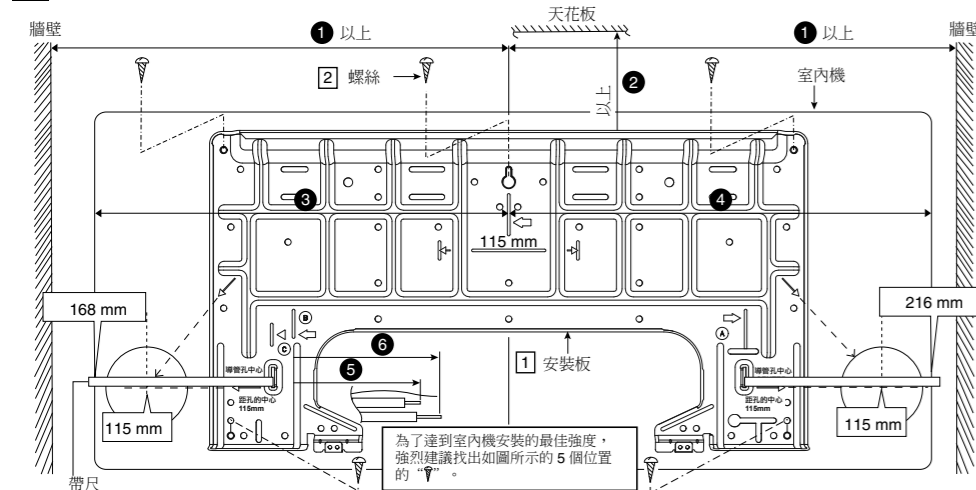


尺寸	1	2	3	4	5	6
安裝板中心到左及右邊牆的距離應大於①。	465 mm	70 mm (+)	365 mm	415 mm	10 mm	70 mm

- 安裝板的中心點到左及右邊牆的距離應大於①。
- 從安裝板邊緣到天花板的距離應大於②。
- 從安裝板中心到本機的左側為③。
- 從安裝板中心到本機的右側為④。
- 至於左邊導管，從這條線起至液體導管連接的距離應約為⑤。
- 至於右邊導管，從這條線起至氣體導管連接的距離應約為⑥。

- 用5枚或以上的螺絲(至少5枚螺絲)，將安裝板安裝到牆面上。(如果將機組安裝到混凝土牆面上，可考慮使用固定螺絲)
- 務必使用水平儀及細線標記一道劃線，並通過對準該道劃線，以水平方向安裝安裝板。
- 用φ70mm的空心鑽管穿孔。
- 將安裝板的左側和右側形成一條線，延長線的交匯點是孔的中心。另一個方法是將卷尺放在上圖所示的位置。
- 測孔的左右兩側距離應為115mm時即可取得測孔的中心點。
- 右側或左側鑽一個導管孔，該孔應稍偏向室外側傾斜。


3 在牆上鑽孔及安裝導管套管

- 將導管套管插入孔中。
- 為套管裝上機套。
- 切斷套管，讓牆外側留下約15mm長的套管。

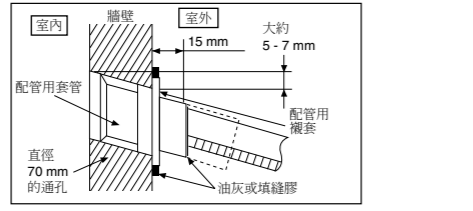


- 當牆壁為空心結構時，務請使用配管套管，以防止老鼠咬壞連接電纜而導致的危險。
- 最後請用油灰或堵窩劑加密封(在最後階段進行)。


4 室內機的安裝

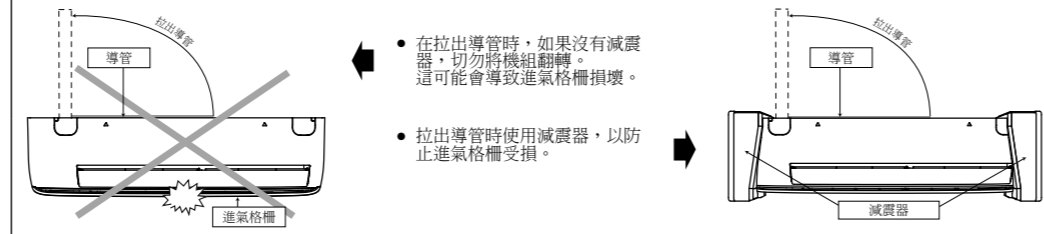

- 右後導管的安裝
 - 拉出室內導管
 - 安裝室內機
 - 固定室內機
 - 插入連接電纜

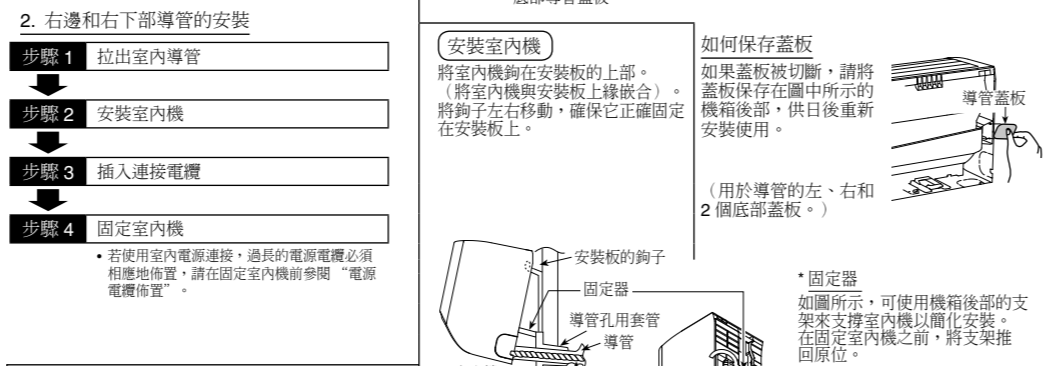


- 右邊和右下部導管的安裝
 - 拉出室內導管
 - 安裝室內機
 - 插入連接電纜
 - 固定室內機

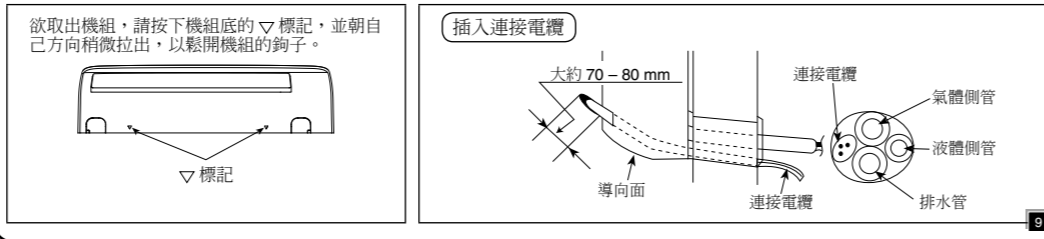

3. 嵌入式配管的處理

- 更改排水管的位置
- 將嵌入式導管弄彎
- 引導連接電纜進入室內機
- 切割和擴大嵌入式導管
- 安裝室內機
- 連接管子
- 為導管進行隔熱及成型處理
- 固定室內機

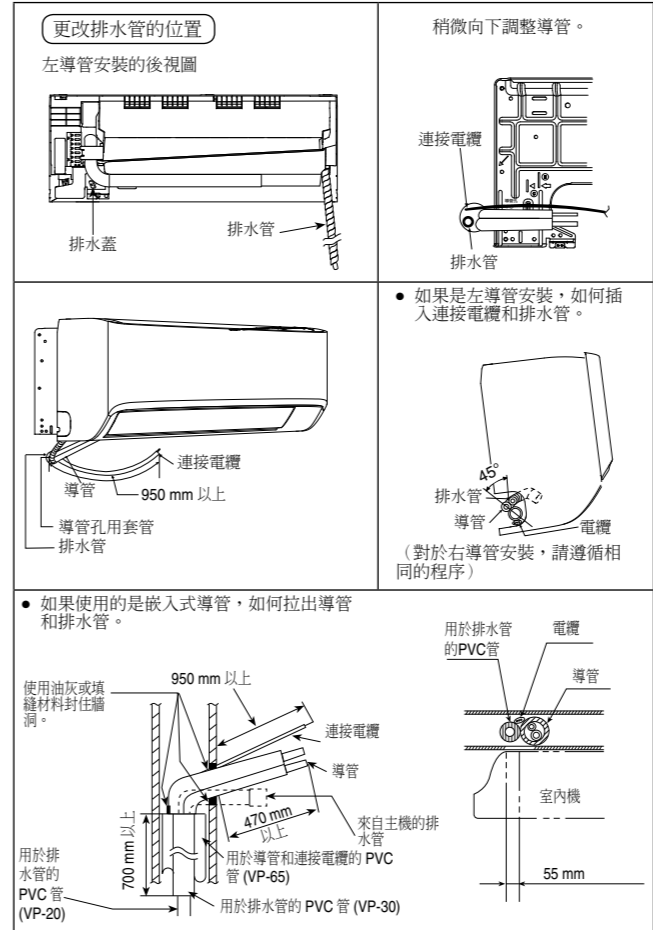

5 將電纜連接至室內機


- 將室內機安裝在裝在牆壁上的安裝支架。
- 鬆開螺絲然後打開前面板及格柵門。
- 室內和室外的連接電纜應採用被批准的聚氯丁二烯雙絞線。4 x 1.5 mm² (1.0 - 1.5HP) 電線(編號 60245 IEC 57) 或負荷更高的電線。切勿使用接駁連接電纜。若現有(隱藏配線或其它)電纜太短，請更換之。
- 用膠帶綁起所有室內機和室外機的連接電纜，並將連接電纜繞至左邊出口。



1 選擇最佳位置 (參考“選擇最佳位置”之頁)

2 裝置室外機


- 選定最佳位置後，依照室內/室外機安裝圖進行安裝。
- 請將室外機安裝在平穩的地面，以防震動及噪聲級別增加。
- 在挑選出可用的不同的管線後，決定管位位置。
- 1. 用螺絲(φ8mm)將室外機穩實打穩地裝在牆上或板壁上。
- 2. 若裝在屋頂，請考慮到強風和地震。

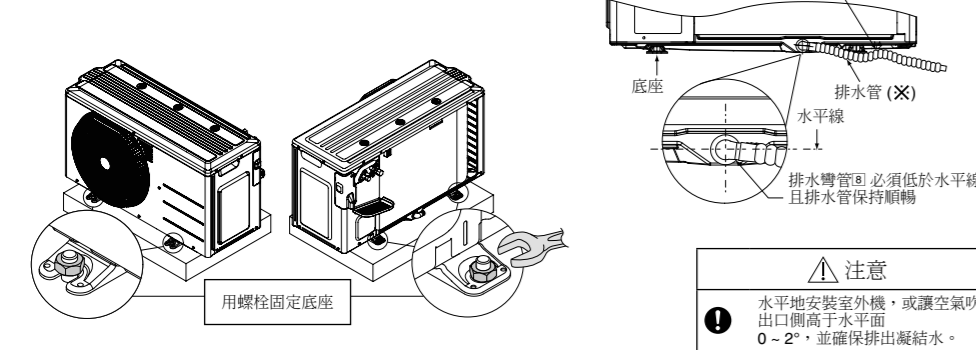

3 連接管子

- 連接配管至室內
- 連接配管至室外


配管尺寸	轉矩
6.35 mm (1/4")	18 Nm (1.8 kgf·m)
9.52 mm (3/8")	142 Nm (14.2 kgf·m)
12.7 mm (1/2")	155 Nm (15.5 kgf·m)
15.88 mm (5/8")	152 Nm (15.2 kgf·m)
19.05 mm (3/4")	100 Nm (10.2 kgf·m)

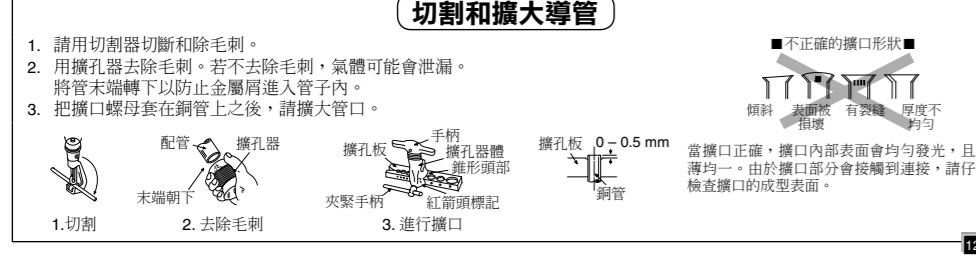

此空氣淨化方式禁止使用於 R32 系統

4 製冷系統氣密測試

- 切勿使用冷媒排除系統內的空氣，而應使用真空泵為裝置抽真空。
- 室外機內不存在額外冷劑用於排除空氣。
- 在為系統安裝冷劑之前以及製冷系統投入工作之前，應由經認證的技術人員和/或安裝工對現場測試程序和驗收標準予以核實。
- 請務必檢查整個系統是否存在氣密洩漏。

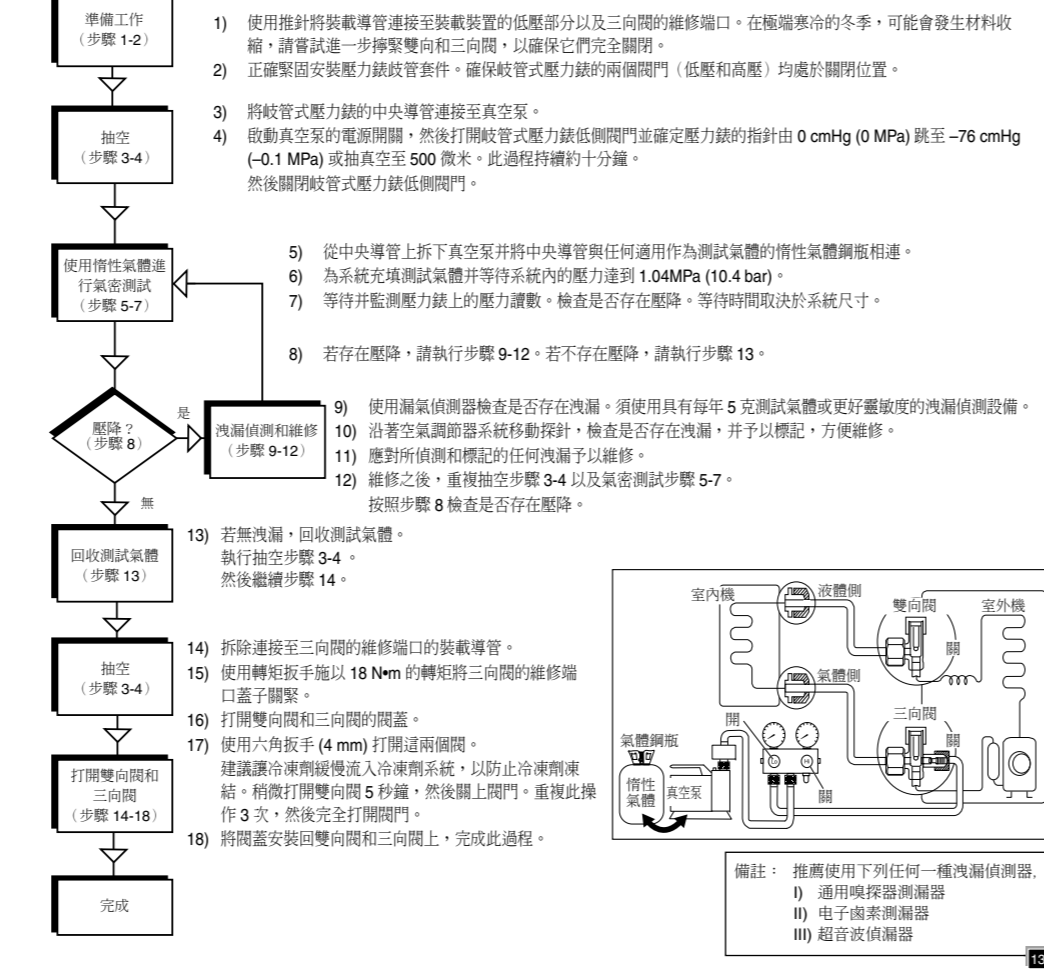


5 將電線連接至室外機

- 旋松螺絲以取下控制板蓋。
- 室內和室外的連接電纜應採用合格的 4 x 1.5 mm² 聚氯丁稀雙絞電纜(編號 60245 IEC 57)，或負荷更高的電纜。切勿使用接駁連接電纜。若現有(隱藏配線或其它)電纜太短，請更換之。
- 用固定零件(夾扣)把電纜牢牢地固定在控制板上。
- 以螺絲將控制板蓋安裝回原來的位。
- 欲瞭解線路和連接要求，請參閱室內機的說明書。
- 基於安全理由，地線應該是黃色/綠色(Y/G)以及較其他交流電線長。



如何取出前格柵



- 打開前面板。
- 將前格柵上的3枚安裝螺絲。
- 旋轉螺絲。
- 將前格柵朝自己方向拉出，以取出前格柵。

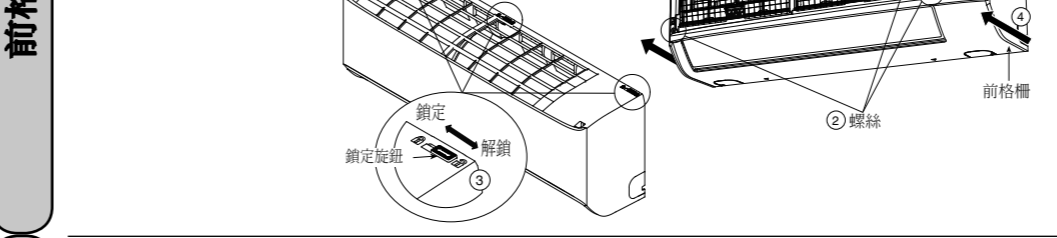

自動開關操作

- 自動開關模式：一旦按下“自動開關”按鈕並在5秒之內鬆開，自動操作將立即生效。
- 試運轉操作(用於抽油/檢修目的)：如果持續按自動按鈕5至8秒鐘，試運轉操作將被激活。“嗚”聲在5秒時將會響起，以顯示測試已開始操作。
- 遙控器接收聲的開關：遙控器接收聲的開關可按下列步驟更改：
 - 持續按“AUTO”按鈕16至21秒鐘，在第十六秒鐘時會發出“嗚”、“嗚”、“嗚”、“嗚”聲響。
 - 按下“AC Reset”鍵一次，您將會聽到“嗚”聲，表示遙控器接收聲設定模式已被開啟。
 - 再按“AUTO”按鈕。每次(在60秒的期間內)按“AUTO”鍵，遙控器的接收聲狀態會在開和關之間轉換。較長的“嗚”聲表示遙控器的接收聲設定已被開啟。較短的“嗚”聲表示遙控器的接收聲設定已被關閉。

5 如下圖所示，移除膠帶及連接室內機和室外機之間的連接電纜。

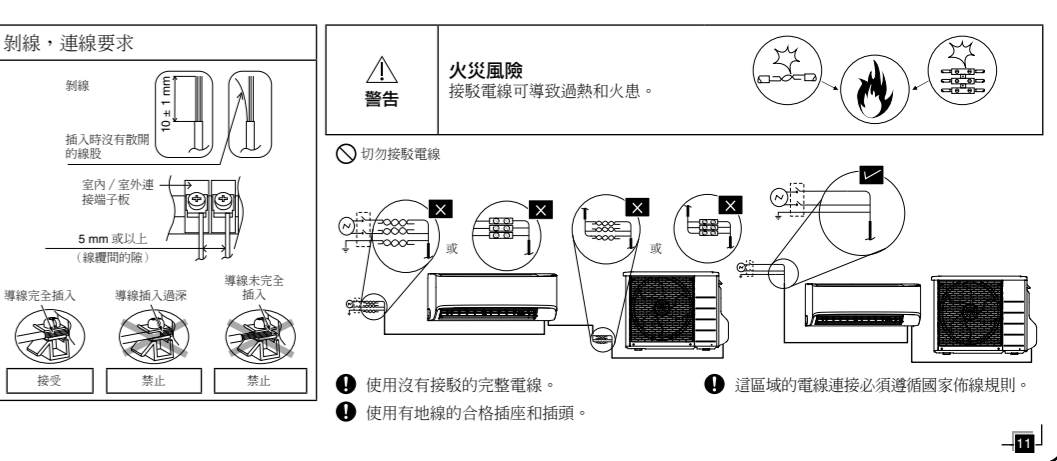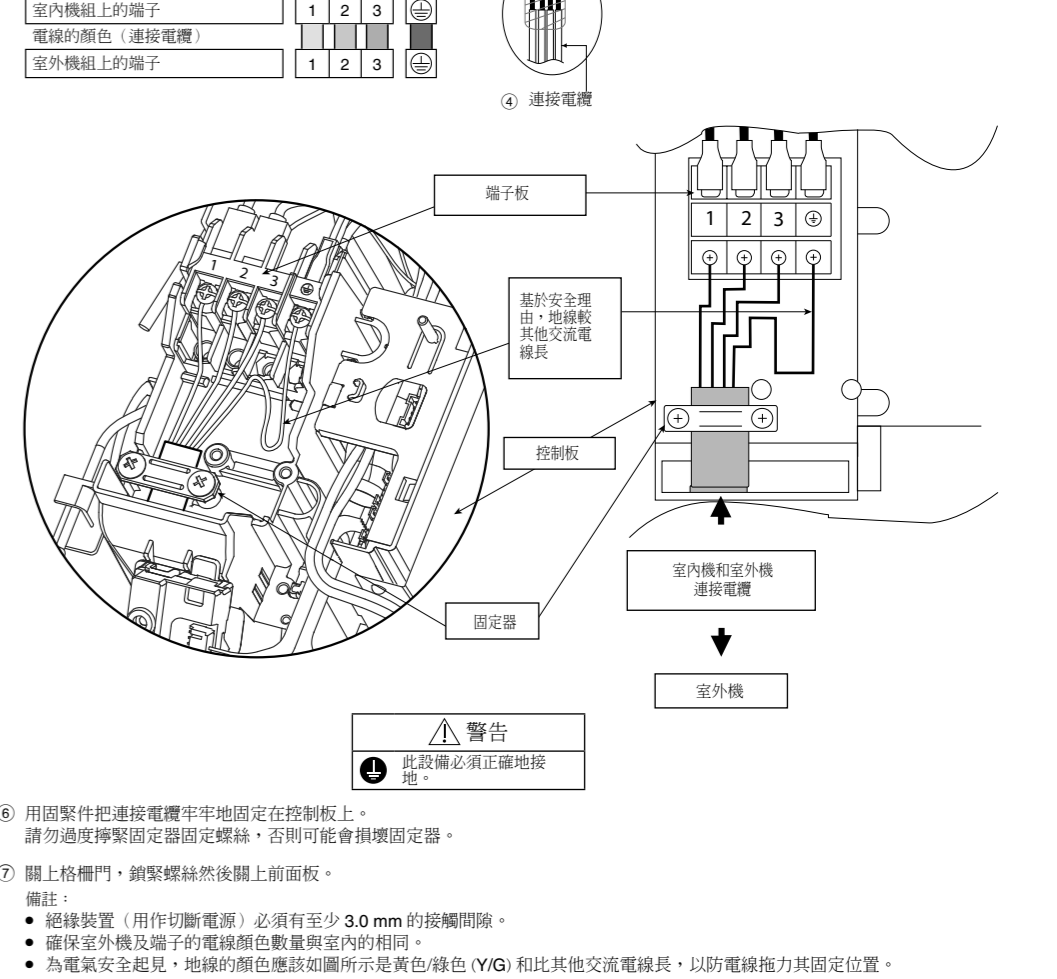


檢查排水

- 打開前面板，然後取下空氣過濾器。(排水檢查可在不卸下前格柵的情況下進行。)
- 往排水托盤的發泡膠倒入一杯水。
- 確保水從室內的排水管流出。

性能評估

- 在製冷/制暖操作模式下運轉機組十五分鐘或更長的時間。
- 測量進氣和排氣溫度。
- 確保進氣和排氣之間的溫差在制冷操作模式下超過8°C，而在制暖操作模式下則是超過14°C。

正確的抽氣方法

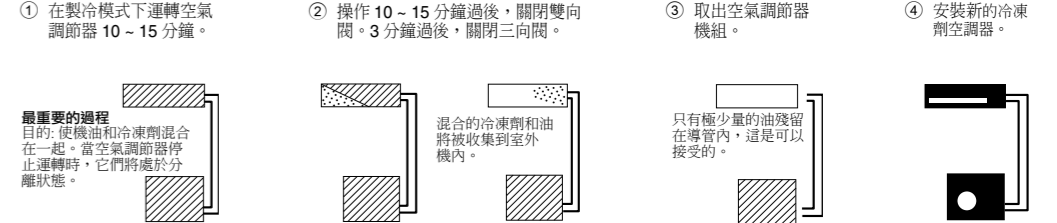

檢查項目

- 擴口螺母連接是否有任何氣體洩漏?
- 擴口螺母連接是否已進行了隔熱處理?
- 連接電纜是否已穩固地接到端子板?
- 連接電纜的尾端是否已穩當鎖好?
- 排水是否良好?
- 地線是否已連接妥當?
- 室內機是否正確地鉤到安裝板?
- 電源電壓是否符合額定值?
- 是否有任何異常聲?
- 製冷/制暖操作是否正常?
- 遙控器LCD操作是否正常?