




RB-X4UV

Travel UV Sterilizer (Universal)

旅行 UV 烘乾機 (國際版)

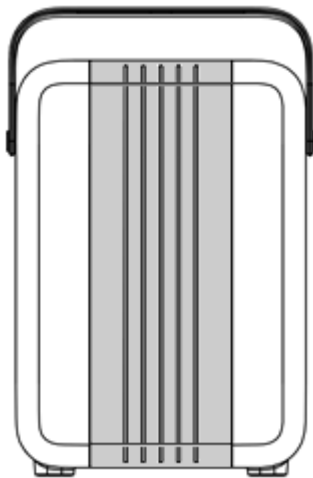

僅供家庭使用

For household use only

使用說明書

OPERATION MANUAL

在使用本產品前，請仔細閱讀此說明書，閱讀後小心保存，以備日後查閱。

Read the operation manual carefully before using and well keep it in a safe place for future reference.

本說明書中的圖示可能與實物有不同的地方，僅供參考。

Some figures in the manual may not match with the real object, just for reference only.

非常感謝您選購樂信牌產品，在使用前請先詳細閱讀此說明書，並保存以備日後參考。

目錄

1. 安全注意事項
2. 產品規格
3. 清潔及儲存
4. 產品說明
5. 使用方法
6. 故障排除
7. 特別聲明
8. 售後服務

1. 安全注意事項

使用本產品時，必須遵守下列安全措施：

下圖表示由於錯誤操作而引起不同程度的危險等級。

 警告 此標誌表示可能造成傷亡。	 注意 此標誌表示可能造成傷害或財產損失。
---	--

以下不同標誌區分各種必須遵守的指示。

 此標誌表示禁止。	 此標誌表示必須遵守。
---	---

 警告	
	為免危險，產品只適用於本說明書所註明的用途。切勿將產品或任何部份在室外使用或作其他用途使用。如錯誤操作，可造成傷害。

	切勿讓兒童清潔及保養產品，除非兒童是年齡在 8 歲以上及監督的情況下。預防兒童將本產品當作玩具。將產品及其電源線放於 8 歲以下兒童不能接觸的地方。
	本產品不宜供肢體、感官或精神上有殘疾或缺乏經驗和知識的人士（包括兒童）使用，必須有監護人從旁監督及指導使用本產品，並且對使用者的安全承擔責任。
	使用前，確保電源線已插穩在電源插座上。
	為達到更好的消毒及烘乾效果，物品放入本產品前需先抹乾，使用前亦必須清理機內所有包裝物料，以免造成危險。
	切勿以其他物品代替原裝塑膠層架，以免造成危險。
	切勿把產品、電源線或插頭浸入水中；或被水濺濕，以免造成觸電及火災。
	手濕時切勿接觸、插入或拔除插頭，否則可構成觸電的危險。
	使用時或剛使用後，切勿將臉或手靠近機身，以免造成燙傷；切勿觸摸剛使用後的加熱部件表面，因仍有餘熱。
	此產品只可作家庭使用及類似環境使用，如商店內部、辦事處和其他工作環境的員工廚房區域；旅館、汽車旅館和其他住宿類型的環境。

	切勿將產品放置在氣體爐、氣體熱水爐旁使用。
	切勿擅自改裝本產品或使用非生產商提供的零件進行修理，否則可造成危險及維修保養無效。
	使用本產品前，確保當地的電壓與本產品上所標明的額定電壓相符。
	切勿將物品放置在機體上。
	經常檢查本產品、電源線及插頭，如有損壞，或打開機門後 UV 燈仍然亮起，為避免危險，立即停止使用，並聯絡信興電器服務中心有限公司安排檢查及維修。

注意

	切勿使用任何物件遮蓋產品表面、吸氣口及排氣口，以免造成產品故障。
	切勿在門打開的情況下強行開啟 UV 燈，UV 光會導致眼睛受損。如發現 UV 燈損壞，聯絡信興電器服務中心有限公司安排檢查及維修。
	切勿在吸氣口、排氣口或隙縫間插入任何物件，否則可能會導致觸電或因操作故障導致受傷。
	定期檢查及清潔產品、排氣口及插頭，並清除所有灰塵，以免造成產品故障。
	使用時及移動時，切勿打開機門，如意外打開會導致燙傷及造成危險。

	產品運作時，機身表面及內部會變熱。如出現異響、異味及煙霧等，立即拔除插頭，並聯絡信興電器服務中心有限公司安排檢查及維修。
	進行加熱烘乾過程時，因空氣和金屬被加熱，產品或會釋出金屬受熱的乾燥氣味，此氣味屬正常，不影響健康。
	產品背面設有排氣口及吸氣口，須在背面預留足夠空間，不要緊貼牆邊，確保產品運作正常。
	在插入或拔除插頭時，用手握穩插頭本身，不要抓住電源線。
	切勿在產品加裝定時開關或獨立的遙控系統操作。
	切勿在產品中放置重物、非受熱物品及食物 (例如非耐熱塑膠、金屬壓縮氣體罐等)，可能會導致觸電或受傷。
	使用前，確定產品外部及內部表面清潔乾爽，否則可能引致故障。
	消毒或烘乾完成後，應等候 5 分鐘讓機內溫度冷卻才打開機門，以免燙傷。
	切勿在產品運作途中拔除插頭、移動產品或打開機門，否則可能引致故障及受傷。
	切勿在電源線上放重物、夾住、改裝、用力拉扯或扭曲電源線。切勿在電源線纏結的情況下使用或將電源線懸掛在桌子、櫥櫃的邊緣或讓它接觸灼熱的表面，否則可能造成電源線的損壞。

	切勿在以下環境使用產品： - 潮濕或近水的環境； - 被陽光直接照射或靠近熱源或高溫的環境附近； - 在不平穩的表面上； - 易燃物料或不耐熱物品附近(如枱布、窗簾及毛巾等)
	切勿使用有殘缺或鬆動的插座。使用前，確保電源線及插頭已充分擦乾。
	使用後，從電源插座拔出插頭及待產品冷卻後才移動、清潔或檢查產品。

2. 產品規格


型號	RB-X4UV
額定電壓	100-240 伏特~ 50-60 赫茲
額定功率	80 瓦
容量 (約)	3.5 升
淨重 (約)	1.7 公斤
產品尺寸 (闊 x 深 x 高) (約)	211 x 156 x 286 毫米

3. 清潔及儲存

1. 清潔前，必須拔除電源插頭，並待產品完全冷卻。
2. 清潔機身外部時，須使用海綿等軟性物料及溫和清潔劑，其後再用乾布抹乾。
3. 清潔時避免有水進入不銹鋼內膽，可先用扭乾濕布清潔，再用乾布抹淨。清潔頻率因應使用情況，建議每週清潔一次。
4. 切勿使用有毒或含腐蝕性的清潔劑或粗硬的潔具(如鋼絲刷)進行清潔。
5. 定期清理機背過濾綿的灰塵及污物，清理完畢後裝回機背位置。
6. 清潔塑膠層架時，可用水沖洗及溫和清潔劑清潔，其後再用乾布抹乾。
7. 使用一段時間後，產品表面可能會變色，此乃正常現象並不會影響產品安全及使用。
8. 將本產品放在平坦的表面上，並避免陽光直射。
9. 儲存時，切勿將電源線纏繞在產品四周或壓住電源線，以免造成電源線損壞，並將產品放入紙箱並放置在乾爽的環境中。

4. 產品說明


4.1 部件名稱和配件

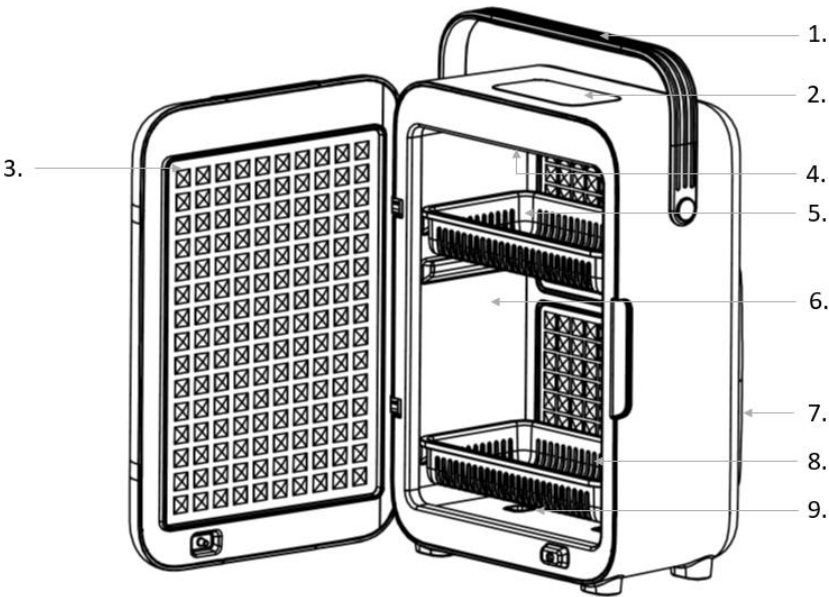

(以上產品圖僅供參考，以實物為準)

1. 提手	2. 控制面板	3. 反射板
4. LED 照明燈	5. 塑膠層架	6. 不銹鋼內膽
7. 吸氣口及過濾棉	8. 出風口	9. UV 燈

4.2 控制面板

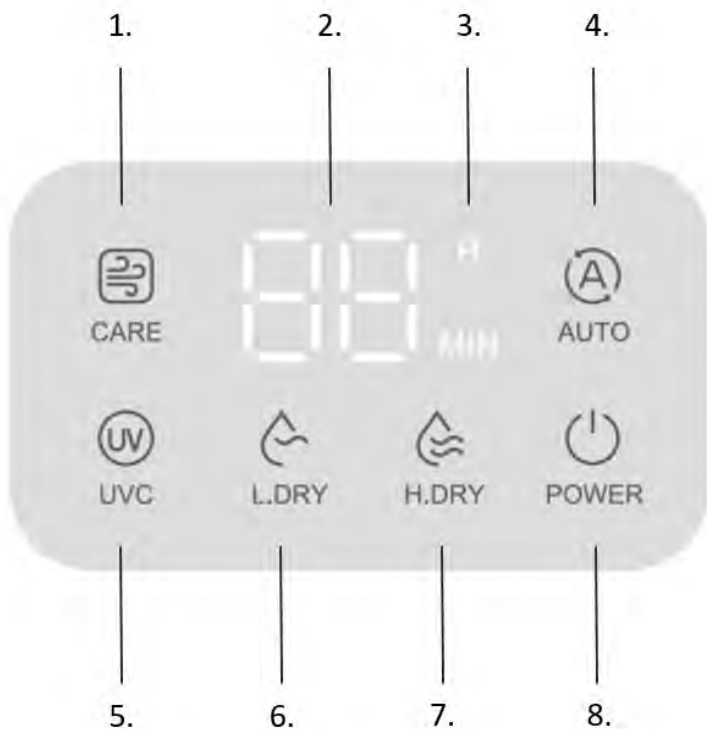

(以上產品圖僅供參考，以實物為準)

1. 儲存鍵及顯示燈	2. 時間顯示屏
3. 小時/分鐘顯示燈	4. 自動鍵及顯示燈
5. 消毒鍵及顯示燈	6. 低溫烘乾鍵及顯示燈
7. 高溫烘乾鍵及顯示燈	8. 電源鍵及顯示燈

5. 使用方法

5.1 待機狀態

1. 接上產品電源，蜂鳴器鳴響一聲，所有指示燈及按鍵閃動一下，顯示屏顯示「--」，「POWER」顯示燈閃動，產品進入待機狀態。如超過3分鐘沒有按鍵，蜂鳴器鳴響三聲，產品會返回關機狀態。
2. 待機狀態下，按「POWER」鍵，產品進入開機狀態並顯示「00」，用戶可選擇不同使用模式。
3. 長按「電源」鍵3秒可進入關機狀態，所有指示燈會關閉；按「電源」鍵一次可重新開機。

5.2 AUTO 鍵 (自動功能)

自動功能將機內物件先消毒後烘乾，用戶可按情況選擇合適的運作時間。

開機狀態下，按「AUTO」鍵，時間顯示屏閃亮顯示“60 MIN”，控制面板上的「AUTO」顯示燈閃爍和「POWER」顯示燈長亮。重複按「AUTO」鍵可切換運作時間 (40/50/60/70 分鐘，默認時間為 60 分鐘)。選定後約 3 秒，產品會開始運作，時間顯示屏會以倒數方式顯示剩餘時間，「AUTO」和「POWER」顯示燈會長亮。完成後，蜂鳴器鳴響一聲，產品自動進入儲存模式。

5.3 UVC 鍵 (消毒功能)

消毒功能利用內置 UV 燈，將放入機內的物件進行消毒。

開機狀態下，按「UVC」鍵，時間顯示屏閃亮顯示“20 MIN”，控制面板上的「UVC」顯示燈閃爍和「POWER」顯示燈長亮。

重複按「UVC」鍵可切換運作時間 (20/25/30/35 分鐘，默認時間為 20 分鐘)。選定後約 3 秒，產品會開始運作，時間顯示屏會以倒數方

式顯示剩餘時間，「UVC」和「POWER」顯示燈會長亮。完成後，蜂鳴器鳴響一聲，產品自動返回待機模式。

5.4 L.DRY 鍵 (低溫烘乾功能)

低溫烘乾功能以低溫將放入機內的物件進行烘乾，適用於非耐高溫物件 (約 47°C)。

開機狀態下，按「L.DRY」鍵，時間顯示屏閃亮顯示“70 MIN”，控制面板上的「L.DRY」顯示燈閃爍和「POWER」顯示燈長亮。重複按「L.DRY」鍵可切換運作時間 (50/70/90 分鐘，默認時間為 70 分鐘)。選定後約 3 秒，產品會開始運作，時間顯示屏會以倒數方式顯示剩餘時間，「L.DRY」和「POWER」顯示燈會長亮。完成後，蜂鳴器鳴響一聲，產品自動返回待機模式。

5.5 H.DRY 鍵 (高溫烘乾功能)

高溫烘乾功能以高溫將放入機內的物件進行烘乾，適用於耐高溫物件 (約 75°C)。

開機狀態下，按「H.DRY」鍵，時間顯示屏閃亮顯示“45 MIN”，控制面板上的「H.DRY」顯示燈閃爍和「POWER」顯示燈長亮。重複按「H.DRY」鍵可切換運作時間 (20/45/60 分鐘，默認時間為 45 分鐘)。選定後約 3 秒，產品會開始運作，時間顯示屏會以倒數方式顯示剩餘時間，「H.DRY」和「POWER」顯示燈會長亮。完成後，蜂鳴器鳴響一聲，產品自動返回待機模式。

5.6 CARE 鍵 (儲存功能)

儲存功能讓機內儲存物進行較長時間的消毒後烘乾。

開機狀態下，按「CARE」鍵，時間顯示屏閃亮顯示“72 H”，控制面板上的「CARE」顯示燈閃爍和「POWER」顯示燈長亮。重複「CARE」鍵可切換運作時間 (24/36/48/72 小時，默認時間為 72 小時)。選定後約 3 秒，產品會開始運作，時間顯示屏會以倒數方式顯示剩餘時間，「CARE」和「POWER」顯示燈會長亮。

儲存模式下，產品先會消毒 20 分鐘，然後烘乾 40 分鐘。完成後進行儲存保溫狀態，每隔 2 小時進行消毒及換氣。

5.7 靜音

開機狀態下，長按「CARE」鍵 3 秒，蜂鳴器鳴響一聲，按鍵聲響會關閉；長按「CARE」鍵 3 秒，蜂鳴器鳴響一聲，按鍵聲響會重新開啟。

注意！

1. 產品運作時，如須提早結束/取消當前運作，可輕按當前的功能鍵，產品會停止當前運作並回到開機狀態。如直接按下「POWER」鍵，產品會返回待機狀態。
2. 如運作途中打開機門，時間顯示屏會顯示“E0”及停止運作，蜂鳴器會發出鳴響。待關上機門後，產品會按當前功能繼續運行。
3. 加熱烘乾過程中須注意高溫。完成後，注意機內物件餘溫，等待 5 分鐘讓物件冷卻後才取出，以免燙傷。

6. 故障排除

故障現象	原因	解決方法
顯示屏顯示 E0	機門未關上	確保機門已關上。
	機門感應器故障	聯絡信興電器服務中心有限公司安排檢查。
產品沒有啟動	插頭尚未插好	確保插頭已插實。
	機件故障	聯絡信興電器服務中心有限公司安排檢查。
顯示屏沒有顯示	機件故障	聯絡信興電器服務中心有限公司安排檢查。
風扇沒有運作	是否進入儲存功能？	儲存功能運作期間風扇不會運作，此乃正常現象。
	風扇故障	聯絡信興電器服務中心有限公司安排檢查。

*** 如使用以上方法仍未能使產品恢復正常操作，切勿嘗試自行維修。應聯絡信興電器服務中心有限公司進行檢查及維修。

7. 特別聲明

1. 本資料上所有內容經過核對，如有任何印刷及內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及規格以廠方生產資料為準。
3. 使用說明書的電子副本可以通過電子郵件發送致客戶，如有需要，可致電信興電工工程有限公司：2861 2767。

8. 售後服務

信興電工工程有限公司授權信興電器服務中心有限公司（“服務中心”）提供一年保修服務並由發票/換購收據上的日期起計。服務中心保留所有更改保修條款的權利，恕不另行通知，有關保修條款詳情，可參閱本公司網站。

Thank you for choosing Rasonic product. Read the manual carefully before use and keep it for your future reference.

Table of Contents

1. Important Safeguards
2. Product Specifications
3. Cleaning and Storage
4. Product Descriptions
5. Operation Instructions
6. Troubleshooting
7. Special Avowal
8. After Sales Service

1. Important Safeguards

When using the appliance, follow the below safety precautions:

The following chart indicates the degree of damage caused by wrong operation.

 WARNING Indicates that may cause death or serious injury.	 CAUTION Indicates hazards that may cause human injuries or property damages.
---	--

The following symbols can distinguish the instruction types that need to be strictly followed.

 These symbols mean prohibition.	 These symbols mean requirement that must be followed.
---	---



WARNING



To avoid danger, use the appliance only as described in the operation manual. Do not use it or any part of the appliance outdoors or out of the intended purpose. Misuse can cause potential injury.



Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Children should be supervised not to play with the appliance. Keep put the appliance and its power cord out of reach of children aged less than 8 years.



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



Before use, make sure the power cord is plugged to the power socket tightly.

	To achieve better disinfection and drying effects, items must be wiped dry before being placed in appliance. All packaging materials in the cabinet must be cleared before use to avoid danger.
	Do not use other things to substitute the original plastic rack, or it will cause danger.
	Never immerse the appliance, power cord or plug in water or let them wet, it can cause electric shock or fire.
	Do not touch, plug in or remove the plug with wet hands, it can cause electric shock.
	To avoid burn, do not get your face or hands close to the body during use or right after use; never touch the heating element surface which are subject to residual heat right after use.
	The appliance is intended to be used in household and similar applications such as staff kitchen in shops, offices and other working environments; by clients in hotels, motels and other residential type environments.
	Do not place the appliance near a gas stove or gas water heater.

	Do not attempt to modify the appliance by yourself or repair with any unauthorized parts, otherwise it will cause hazards and the warranty will become invalid.
	Before using the appliance, make sure the input voltage match the rated voltage marked on the appliance.
	Do not place objects on top of the appliance.
	Always check the condition of the appliance, power cord and plug. If any damage is found, or the UV lamp is switched on when open the door, stop using the appliance immediately. Contact Shun Hing Electric Service Centre Limited to check and repair.

CAUTION

	Do not cover the appliance surface, intake vent and exhaust vent with any objects, so as not to cause appliance malfunction.
	Do not force the UV lamp to switch on with the door open, it can be harmful to the eyes. If the UV lamp is found to be damaged, contact Shun Hing Electric Service Centre Ltd. to check and repair.

	Do not insert any object in the intake vent, exhaust vent or gaps, it may cause electric shock or injury caused by malfunction.
	Regularly check and clean the appliance, intake vent, exhaust vent and plug, and keep dust away to avoid the appliance malfunction.
	When use and move the appliance, do not open the door, as it may accidentally open, resulting in a burn and cause danger.
	When the appliance is in operation, the surface and interior of the unit will become hot. If any unusual noise, odor or smoke is detected, unplug the appliance immediately and contact Shun Hing Electrical Service Centre Limited to check and repair.
	During the heating and drying process, air and metal components become hot, which may cause the appliance to emit a dry and metallic odor. This is normal and harmless to health.
	To maintain the appliance function and performance, the intake vent and exhaust vent are designed on the appliance. Sufficient space must be reserved on the back and the appliance should not be placed close to the wall.
	Grasp the plug itself when plug in or remove the plug, do not grasp the power cord.

	The appliance is not intended to be operated by means of an external timer or separate remote control system.
	Do not place heavy objects, non-heat-sensitive objects and food in the appliance (e.g. non-heat-resistant plastics, metal compressed gas cylinders, etc.), it may cause electric shock or injury.
	Make sure the outer surface of the appliance and interior are clean and dry before use, or it may cause malfunction.
	After disinfection or drying completed, wait for at least 5 minutes to cool down before opening the door to avoid burns.
	Do not unplug, move or open the door of the appliance while it is in operation. It may cause malfunction and injury.
	Do not place heavy objects on the power cord. Never clip, modify, stretch or twist the power cord. Do not operate the appliance when the power cord is tangled or hang over the edge of a table, counter-top or let it touch any hot surface, it may damage the power cord.

	Do not operate the appliance in following places: - Humid environment or near water; - Expose to sunlight, near heat sources or high temperature places; - Unstable surface; - Near flammable or non-resistant to heat objects (e.g. table cloth, curtain and towel etc.)
	Do not use deficient or loosen socket. Make sure the power cord and plug are dry before use.
	After use, remove the plug from the power socket and let the appliance cool down before moving, cleaning or checking.

2. Product Specifications


Model no.	RB-X4UV
Rated Voltage	100 – 240V~ 50-60Hz
Rated Power	80 W
Capacity (Approx.)	3.5 L
Net Weight (Approx.)	1.7 kg
Product Dimension (W x D x H) (Approx.)	211 x 156 x 286 mm

3. Cleaning and Storage

1. Before cleaning, must unplug the appliance and let it cool down completely.
2. When cleaning the appliance outer surface, use a soft material such as sponge and mild detergent, wipe them and let them dry.
3. Avoid water entering stainless steel interior, use a damp cloth to wring out the moisture before cleaning, and then wipe dry with a dry cloth. The frequency of cleaning depends on usage, but it is recommended to clean once a week.
4. Never use poisonous or corrosive detergent, or clean with harsh cleaning tools (e.g. metal-wired brush) for cleaning.
5. Clean the filter regularly. Put it back in place when cleaning finished.
6. To clean the plastic racks, rinse with water and a mild detergent, then wipe them dry.
7. The color of outer surface may change after using a period of time, however, it does not affect the product safety and function.
8. Place the appliance on flat surface and out of sunlight.
9. When store, never wrap the power cord around the appliance or clip the power cord, it is to prevent the power cord from deterioration. Put the appliance into a box and store in a dry place.

4. Product Descriptions


4.1 Product description

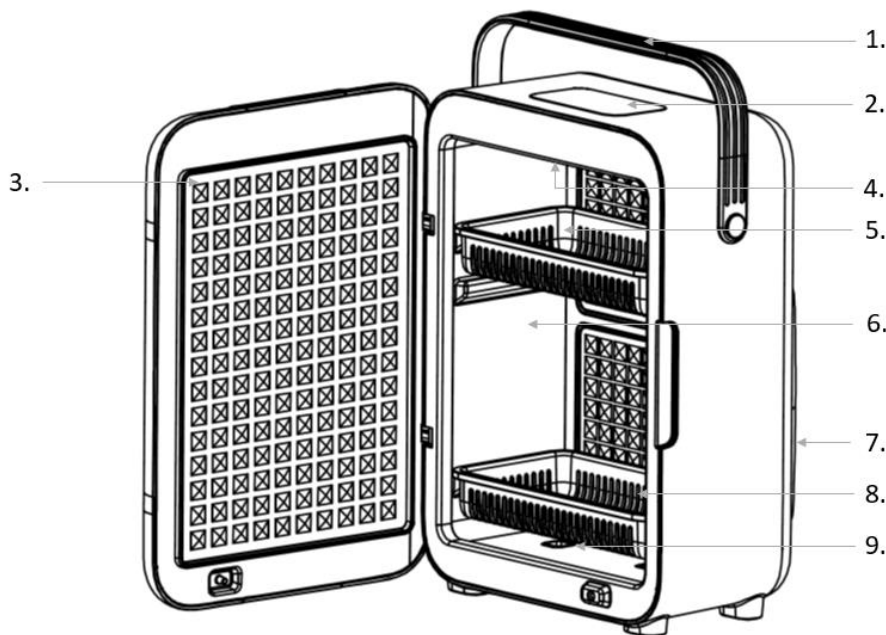

(Above product diagram is for reference only, appearance refers to actual product.)

1. Handle	2. Control Panel	3. Reflective Board
4. LED Light	5. Plastic Rack	6. Stainless Steel Interior
7. Intake vent & Filter	8. Air Vent	9. UV Lamp

4.2 Control Panel

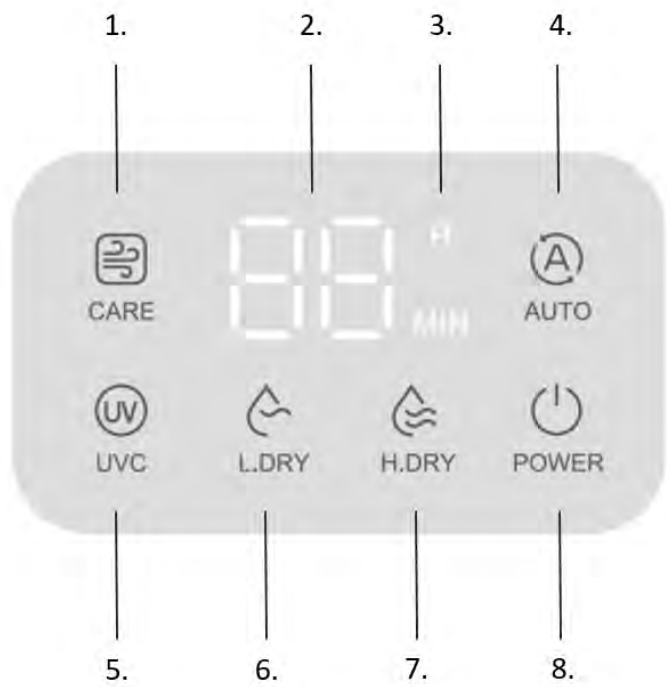

(Above product diagram is for reference only, appearance refers to actual product.)

1. CARE key & indicator	2. Time display
3. Hour/ min. indicator	4. AUTO key & indicator
5. UVC key & indicator	6. LOW DRY key & indicator
7. HIGH DRY key & indicator	8. POWER key & indicator

5. Operation Instructions

5.1 Standby Status

1. After connected the power, all the indicators will blink once, the appliance will have a beep sound, time display shows “- -” and 「POWER」 indicator will blink, known as standby status. If no key is pressed for more than 3 minutes, the buzzer will sound three times, and the appliance will return to power-off state.
2. Press the 「POWER」 key, the display shows “00” and the appliance is in start status, user can select different operation mode accordingly.
3. Press and hold the 「POWER」 key for 3 seconds to enter the power-off state, and all indicators will turn off; press the 「POWER」 key once to switch on.

5.2 AUTO Key (AUTO mode)

The auto mode disinfects and dries the items inside the cabinet; select the appropriate operating time accordingly.

In start status, press 「AUTO」 key, time display will flashes “60 MIN”, the 「AUTO」 indicator will blink and 「POWER」 indicator will light up. Press the 「AUTO」 key repeatedly to switch the operation time (40/50/60/70 minutes, the default time is 60 minutes). Wait for 3 seconds to confirm, the appliance starts to operate, the remaining operation time will show as countdown, and the 「AUTO」 and 「POWER」 indicators will light up. After completion, the buzzer sounds once and the appliance automatically enters the 「CARE」 mode.

5.3 UVC Key (UVC mode)

The UVC mode uses a built-in UV lamp to disinfect the items placed inside the cabinet.

In start status, press 「UVC」 key, time display will flashes “20 MIN”, the 「UVC」 indicator will blink and 「POWER」 indicator will light up. Press the 「UVC」 key repeatedly to switch the operation time (20/25/30/35 minutes, the default time is 20 minutes). Wait for 3 seconds to confirm, the appliance starts to operate, the remaining operation time will show as countdown, and the 「UVC」 and 「POWER」 indicators will light up. After completion, the buzzer sounds once and the appliance automatically return to standby status.

5.4 L.DRY Key (LOW Temperature Mode)

The low-temperature drying mode dries the items inside the cabinet at a low temperature, suitable for non-heat-resistant items (approx. 47°C).

In start status, press 「L.DRY」 key, time display will flashes “70 MIN”, the 「L.DRY」 indicator will blink and 「POWER」 indicator will light up. Press the 「L.DRY」 key repeatedly to switch the operation time (50/70/90 minutes, the default time is 70 minutes). Wait for 3 seconds to confirm, the appliance starts to operate, the remaining operation time will show as countdown, and the 「L.DRY」 and 「POWER」 indicators will light up. After completion, the buzzer sounds once and the appliance automatically return to standby status.

5.5 H.DRY Key (HIGH Temperature Mode)

The high-temperature drying mode dries the items inside the cabinet at a high temperature, suitable for heat-resistant items (approx. 75°C).

In start status, press 「H.DRY」 key, time display will flashes “45 MIN”, the 「H.DRY」 indicator will blink and 「POWER」 indicator will light up. Press the 「H.DRY」 key repeatedly to switch the operation time (20/45/60 minutes, the default time is 45 minutes). Wait for 3 seconds to confirm, the appliance starts to operate, the remaining operation time will show as countdown, and the 「H.DRY」 and 「POWER」 indicators will light up. After completion, the buzzer sounds once and the appliance automatically return to standby status.

5.6 CARE Key (CARE Mode)

The care function allows stored items to undergo a longer disinfection and drying process.

In start status, press 「CARE」 key, time display will flashes “72 H”, the 「CARE」 indicator will blink and 「POWER」 indicator will light up. Press the 「CARE」 key repeatedly to switch the operation time (24/36/48/72 hours, the default time is 72 hours). Wait for 3 seconds to confirm, the display will start 72 hours save mode. Time display will show the remaining time in countdown mode with the 「CARE」 and 「POWER」 indicators light up.

In care mode, the stored items will be disinfected with UVC mode for 20 minutes, then start drying for 40 minutes. After completion, the appliance will disinfect and ventilate every 2 hours.

5.7 Mute

In start status, long press 「CARE」 key for 3 seconds, the buzzer sounds once and the appliance key sounds will be turned off; long press 「CARE」 key 3 seconds, the buzzer sounds once and the appliance key sounds will be turned on.

CAUTION!

1. When the appliance is in operation, press the same operation mode key once to cancel the current operation mode. Operation will stop and the appliance will return to start status. If 「POWER」 key is pressed, the appliance will return to standby status directly.
2. If the door is opened while the appliance is operating, time display will show "E0". The operation will stop while the buzzer will sound. After closing the door, the appliance will continue to operate in the current mode.
3. If the appliance is undergoing a heating and drying process, be aware of the high temperature. After completion, pay attention to the residual heat of items inside, wait for at least 5 minutes to cool down before opening the door to avoid burns.

6. Troubleshooting

Problem	Reason	Solution
Display show “E0”	Appliance door not close yet	Make sure to close the appliance door.
	Door sensor failure	Contact Shun Hing Electrical Service Centre Ltd to check.
No operation	The power plug is not plugged in properly	Reinsert the power plug in place.
	Appliance malfunction	Contact Shun Hing Electrical Service Centre Ltd to check.
Display does not work	Appliance malfunction	Contact Shun Hing Electrical Service Centre Ltd to check.
Ventilation fan do not work	Is the appliance entered care mode?	The ventilation fan will not run during care mode; this is normal.
	Fan failure	Contact Shun Hing Electrical Service Centre Ltd to check.

*** If the above solutions cannot fix the problem, do not attempt to modify the appliance by yourself and contact Shun Hing Electric Service Centre Ltd. to check and repair.

7. Special Avowal

1. The information above has been checked; our company reserves the hermeneutic power to any print errors or misunderstanding on the content.
2. Please note that any technology improvement will be added to the new versions of operation manual without any prior notices. The product appearance and specification are subject to the actual appliance.
3. E-copy of operation manual can be sent by e-mail on request, please call Shun Hing Electric Works and Engineering Co., Ltd at 2861 2767.

8. After Sales Service

Shun Hing Electric Works & Engineering Co., Ltd. authorizes Shun Hing Electric Service Centre Ltd. (“SHESC”) to offer one year warranty service to the product commencing from the date of purchase invoice or redemption voucher. SHESC reserves the right to change the warranty terms without prior notice. For details of the warranty terms, you can refer to our website.

備忘錄 Note



信興電工工程有限公司

SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓

電話：2861 2767

圖文傳真：2865 6706

網址：<https://www.shew.com.hk>

電郵：shew@shunhinggroup.com

Office: 9/F, Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, H.K.

Tel: 2861 2767

Fax: 2865 6706

Website: <https://www.shew.com.hk>

E-mail: shew@shunhinggroup.com

保養及維修 Maintenance and Repair Service:

信興電器服務中心有限公司

SHUN HING ELECTRIC SERVICE CENTRE LTD.

香港新界葵涌勝耀街2號信興中心11樓

電話：2406 5666

圖文傳真：2408 0316

網址：<http://www.shesc.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. H.K.

Tel: 2406 5666

Fax: 2408 0316

Website: <http://www.shesc.com/en>

客戶服務中心

香港新界葵涌勝耀街2號信興中心1樓

九龍尖沙咀東部麼地道67號半島中心B座9樓

澳門慕拉士大馬路149 號激成工業大廈(第一期) 2樓F座

Customer Service Centre

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

9/F, Block B, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon

Avenida de Venceslau de Morais, No. 149, 2 andar - F, Edf, Industrial Keck Seng
(Bloco 1), Macau

有關最新之香港及澳門客戶服務中心資料，請參閱信興服務中心網址：

<http://www.shesc.com/zh>

For the latest information of Hong Kong and Macau service center, please visit

<http://www.shesc.com/en>

RB-X0326