

**Rasonic**  
樂信牌

## RCC-GT22B 輕便電陶爐 Compact Ceramic Cooker



僅適用於家庭使用  
For household use only

# 使用說明書 OPERATION MANUAL

- 在使用本產品前，請仔細閱讀本說明書，並妥善保存以備用戶日後查詢。
- Please read the operation manual carefully before using and well keep it in a safe place for future reference.
- 本說明書中的圖示可能有與實物不同的地方，僅供參考。
- Some figures in this manual may not match with the real object, just for reference only.



非常感謝您選購樂信牌輕便電陶爐，在使用前請先詳細閱讀本說明書，並保存以備日後參考。

## 目錄

1. 安全注意事項
2. 保存及日常清潔
3. 鍋具的選擇
4. 產品規格及結構
5. 控制面板及操作說明
6. 故障排除
7. 特別聲明
8. 售後服務


# Rasonic 樂信牌

## 1. 安全注意事項

使用本產品時，請遵守下列安全注意事項，不遵循或忽視這些安全注意事項會導致傷亡或機件損壞。

### 1.1 為了防止火災、灼傷和觸電

#### 面板餘溫處理

1. 面板上的  符號表示，使用時及剛使用後面板會變熱，切勿觸摸，以免造成高溫燙傷。
2. 待完全冷卻後才清潔本產品。

#### 使用前

1. 確保當地使用的電壓與本產品上所標明的額定電壓相符。
2. 使用獨立電源插頭。切勿使用電線拖板，以免因電力負荷過度而導致火警或危險。
3. 應把產品平穩放置於乾燥的地方，並須與牆壁保持至少10厘米的距離作散熱用途。

#### 使用時

1. 切勿過度加熱。(應使用低火力段預熱。)
2. 切勿乾燒空鍋，否則容易造成過熱、工作異常及面板變色等問題。
3. **警告！**切勿讓產品置於無人看管的狀態下運作，特別是使用油脂在爐灶進行烹飪時，可能會造成危險或導致火災。
4. **注意！**烹飪過程必須受到監督。短期烹飪過程亦必須持續監督。

#### 使用後

1. 按電源鍵關掉產品，關掉電源及拔出電源插頭，避免因長時間通電導致內部電子組件損毀，甚至引起火警。
2. 如機體尚有餘溫，待散熱風扇完全停止運作後才可拔掉電源插頭。
3. 剛完成烹調後，爐面尚有高溫，切勿直接接觸加熱區，以免造成燙傷。

#### 面板注意事項

1. 切勿將物品存放在加熱區，或將攜帶式氣體爐、石油氣罐等置於面板上，以防止它們被錯誤加熱而造成爆炸。
2. 切勿讓面板受到外來的猛烈撞擊。(例如重物墜於面板上，可能導致面板暗處產生裂紋。在沒有接受信興電器服務中心有限公司詳細檢查期間強行運作，可能促使面板爆裂，產生危險。)

**\*\*\*警告：**如面板受到外來的猛烈撞擊或因重物墜落造成破裂，切勿觸摸。應立即停止使用並關掉電源及拔出電源插頭，立即聯絡信興電器服務中心有限公司進行檢查及維修，以免造成電擊、短路或火災等危險。

### 鍋具注意事項

1. 必須使用說明書內建議的合適鍋具，並確保鍋具整潔及底部平穩地置於面板上。
2. 放置鍋具前，請確認鍋具底部及面板上沒有水漬、油漬或其他粘附物。如有，應完成清潔後才使用本產品。
3. 切勿用鍋底摩擦面板，面板可能會損壞或褪色。

### 避免油炸烹飪

1. 本產品不帶油溫控制系統。油炸時，或會因油溫過高而導致火災或損壞內部電子組件，故油炸時應緩慢加熱，並留意加熱情況。
2. 若煮食物或油脂加熱時起火，應立即關掉電源。切勿用水滅火，應使用合適的滅火器或使用滅火毯。

### 爐頭注意事項

1. 切勿將易燃材料、噴霧劑及煙霧劑等置於產品附近，否則可能導致火災或爆炸。
2. 切勿加熱密封包裝的食物(如：罐頭、錫紙包裝食物等)，以免發生爆炸。
3. 切勿讓不習慣操作本產品的人獨自使用本產品。
4. 本產品並不為體質、感覺或智力有障礙人士或缺乏經驗(包括小孩)或相關知識的人士使用，除非他們曾經接受負責安全人士的監督或指示。
5. 時常留意烹調情況，避免過熱或乾燒。否則，溫度過高會使安全保護功能自動啟動並停止運作，影響烹調效果。
6. 若有孩童在旁，須加倍小心使用及看管小孩，以確保他們不會把此產品當作玩具。切勿讓小孩單獨使用或將本產品及其電線放於小孩能觸及的地方。
7. 切勿讓嬰兒靠近。
8. 切勿使用外置計時器或遙控系統來操作本產品。
9. 煮食時，鍋具必須放置於煮食區的中央位置上面。避免大幅度移動鍋具，或將鍋具移近至玻璃邊緣，令面板底部的膠殼因鍋具底部的高溫而造成損毀。

# Rasonic

## 樂信牌

### 1.2 防止火災或意外發生

為了避免發生意外，請注意下列事項

1. **注意！**加熱時偶爾會噴濺出食材或液體，這種現象被稱為溢瀉。特別是用於炊煮時，應使用低火力烹調及時刻留意食物烹調情況。
2. 保持鍋具平穩。(如鍋具掉下，可能會導致損傷或灼傷。)
3. 鍋具與面板中間不應夾雜紙品或其他物件，讓鍋具直接受熱。(物件或會因高溫而燃燒。)
4. 遠離大量熱氣、蒸氣或濕熱地方；切勿將產品安裝於靠近水源的地方，防止機身進水。
5. 切勿試圖拆卸、維修或改裝本產品，以免釀成意外。如須檢查或維修，請與信興電器服務中心有限公司聯絡。
6. 小心使用電源線，切勿在電源線上放重物或夾住電源線；切勿改裝、用力拉扯或扭曲電線。在拔出或插入插頭時，要用手握穩插頭，並確保將插頭插穩。如發現電源線有破損，必須聯絡信興電器服務中心有限公司更換，以免發生危險。
7. 切勿將電源線懸掛在桌子、櫥櫃的邊緣或令它接觸發熱的表面。切勿在電源線纏結的情況下使用本產品，否則會加快電源線的損耗。
8. 切勿於同一時間按兩個或以上的功能鍵，亦不要讓熱的物件置於控制面板，因為這會令產品出現錯誤的反應。
9. 切勿以濕手操作產品、插入或拔除插頭。
10. 切勿將本產品用於烹飪以外的其他用途。(用於烹飪以外或會發生故障。)
11. 本產品是家用或在類似環境使用，如：商店內部、辦事處以及其他類似工作環境的廚房區域；客戶在旅館、汽車旅館和其他住宅類型的環境。
12. 本產品只可作家庭使用，切勿在室外使用或用於說明書建議以外的其他用途。使用不當，或作(半)商業用途，或未依照使用說明書操作，維修保養將無效，本公司將不會承擔任何損壞的維修及賠償。
13. 當產品機身或零件出現故障，或不能正常操作，切勿自行使用或更換其他非生產商授權的零件或配件，以免發生危險，否則維修保養無效。
14. 遵從安全守則及避免釀成意外，如需檢查或維修產品，請聯絡信興電器服務中心有限公司（地址印於本說明書的背頁或致電2406 5666），並確保在檢查或維修時可出示產品記錄保修卡（印於本產品的外箱）及收據。

## 1.3 重要事項

### 保持進風口／出風口暢通

(進風口／出風口被堵塞會造成過熱，導致產品自動關閉或引致其他災害。)

1. 進風口及出風口分別位於機底的前方及後方。
2. 切勿將本產品放置在地毯、塑膠檯布、紙品或墊子等軟物件上使用，以免堵塞進風口。如果進風口／出風口堵塞，可能造成故障。
3. 切勿將金屬物件(如針或金屬線等)插入產品的進風口／出風口。

### 1.4 高火力加熱注意事項

1. 由於輸出功率大，如油量過少，鍋具會快速受熱，油溫會因迅速上升而產生意外。
2. 高熱力輸出會造成鍋具底部彎曲變形。如使用的油量少或鍋具底部較薄，應使用較低的火力預熱。
3. 煲水時，水一旦沸騰，請立即降低火力。(水有可能會煮沸溢出或噴濺。)

## 2. 保存及日常清潔

1. 清潔前，請先按電源鍵關上本產品及拔出插頭。
2. 面板的清潔：用扭乾的濕布擦拭。如污漬擦不掉時，用稀釋的中性廚房去污粉或清潔劑清潔後，再用濕布擦拭即可。
3. 機身的清潔：用扭乾的濕布擦拭。如有油污難以清除時，用稀釋的中性廚房洗潔劑清洗後，再用濕布擦拭即可。
4. 切勿使用蒸氣清潔工具、用水直接沖洗或將產品及其電源線浸入水中清洗。如產品內部零件受潮，可能造成故障或其他災害。
5. 如有果酸食物(例如：醋、果醬、帶有檸檬汁及梅子等食品)黏在面板或邊框上，應立即清潔，否則可能引致褪色。
6. 如有任何塑膠物料、廚房用錫紙、糖類或含有糖的食品不小心融化於發熱的面板上，必須在面板仍是溫熱時用柔軟濕布擦拭，否則冷卻後才清潔或會損壞面板。
7. 切勿使用堅硬刷子或百潔布刷洗爐面。
8. 切勿使用有機溶劑或苯等化學藥品擦拭產品及其面板／控制面板，以免產生化學反應。
9. 經過長時間使用，進風口或出風口會積聚一些灰塵或油脂，並可能影響產品運作。建議使用棉花棒進行定期清潔。
10. 注意防塵、防潮及防蟲的保護，避免蟑螂等昆蟲進入電陶爐內部造成電路板短路。
11. 長期不使用時，請拔下電源插頭，進行清潔後套上塑膠袋並收藏於乾燥的環境。切勿將電源線纏繞在產品四周或壓住電源線，避免令電源線破損。
12. 面板可能會因使用不當(如使用不潔淨底部的鍋具加熱或加熱食材外溢且未及時擦淨)而產生發黃、發黑或劃痕等現象。經常清潔鍋具底部及產品面板，按說明書操作並做好日常保養，可避免或減少此類現象發生。

# Rasonic

## 樂信牌

### 3. 鍋具的選擇


1. 材質：大部分鍋具材質均適用，如鐵、鋁、銅、陶瓷、砂鍋耐高溫玻璃等。(不建議使用搪瓷鍋具)。
2. 形狀：底部直徑必須在12-24厘米範圍內的鍋具，並與面板均勻接觸。
3. 鍋具重量(連盛載食物)不能超過10公斤。

### 4. 產品規格及結構

#### 4.1 產品規格

型號	RCC-GT22B
額定功率	2,200瓦
額定電壓	220-240伏特~ 50/60赫茲
產品尺寸(闊 x 深 x 高)(毫米)	280 x 360 x 62
淨重(公斤)(約)	2.4
建議鍋具尺寸(毫米)	鍋具底部直徑120-240


#### 4.2 產品結構

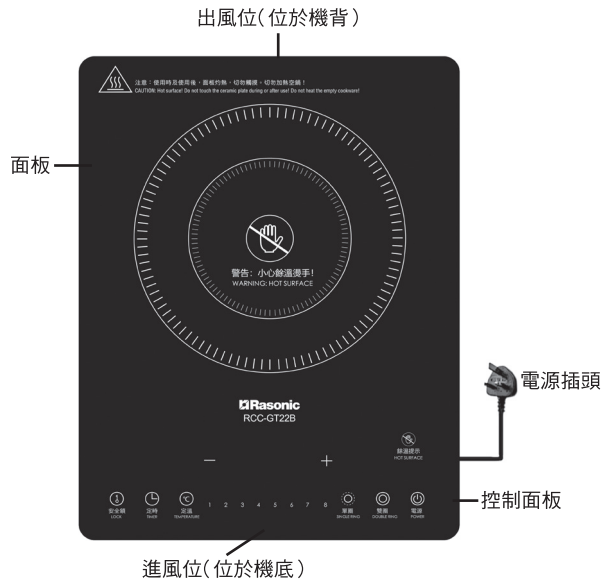

註：產品結構以實物為準，以上圖片只供參考。

## 5. 控制面板及操作說明

### 5.1 控制面板

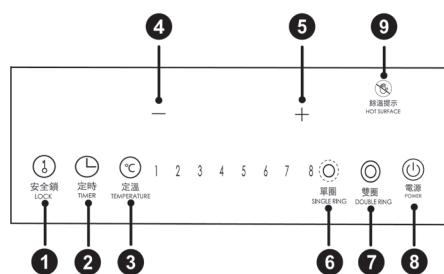

按鍵／指示燈	名稱	圖示	功能
1	安全鎖鍵	🔒	啟動／解除安全鎖功能
2	定時鍵	🕒	啟動定時功能
3	定溫鍵	°C	切換至定溫烹調功能
4	減少鍵	—	減少火力、溫度或時間
5	增加鍵	+	增加火力、溫度或時間
6	單圈	🔥	啟動較低火的火力烹調模式
7	雙圈	🔥	啟動較高火的火力烹調模式
8	電源鍵	🔌	切換至備用／選擇模式
9	餘溫提示燈	🔥	爐面過熱時，指示燈會亮起提示用戶

\*\*\* 保持控制面板清潔乾爽，否則控制按鍵的電子感應功能可能會失效或錯誤運作。

### 火力／溫度顯示圖

加熱功能	段數							
	1	2	3	4	5	6	7	8
單圈(低火力)	300W	500W	600W	700W	800W	900W	1,000W	1,100W
雙圈(高火力)	600W	1,000W	1,200W	1,400W	1,600W	1,800W	2,000W	2,200W
定溫(溫度調節)	100°C	200°C	250°C	300°C	350°C	400°C	500°C	600°C

### 5.2 產品操作說明

接上電源後，電陶爐發出“嗶”一聲，所有指示燈會全部亮起後熄滅，[電源]燈保持閃爍，表示產品進入備用狀態。將合適的鍋具放置於面板加熱範圍中央，按[電源]鍵一次，[電源]燈長亮，散熱風扇開始運作，顯示屏顯示[---]，表示產品進入選擇模式，按對應加熱功能鍵使用本產品。如1分鐘內未有選定加熱功能，產品會返回備用狀態。完成烹調後，可按[電源]鍵停止加熱，產品會回復備用狀態。

#### 火力烹調功能說明

**單圈：**於選擇模式下，按[單圈]鍵一次，[單圈]指示燈亮起，產品發出一聲[嗶]聲，顯示屏顯示[1100]，表示單圈烹調功能的預設火力為1,100W，對應火力指示燈由左至右亮起至對應位置，表示本產品已進入第8段單圈火力烹調。用戶可按[增加]或[減少]鍵自行調校合適的火力段數，共有8段火力可供選擇。

**雙圈：**於選擇模式下，按[雙圈]鍵一次，[雙圈]指示燈亮起，產品發出一聲[嗶]聲，顯示屏顯示[2200]，表示雙圈烹調功能的預設火力為2,200W，對應火力指示燈由左至右亮起至對應位置，表示本產品已進入第8段雙圈火力烹調。用戶可按[增加]或[減少]鍵自行調校合適的火力段數，共有8段火力可供選擇。

#### 定溫烹調功能說明

於選擇模式下，按[定溫]鍵一次，[定溫]指示燈亮起，產品發出一聲[嗶]聲，顯示屏顯示[300]，表示定溫烹調功能的預設溫度為300°C，對應溫度指示燈於對應段數亮起，表示本產品已進入第4段定溫烹調。用戶可按[增加]或[減少]鍵自行調校合適的火力段數，共有8段火力可供選擇。

#### 定時功能

若用戶需要設定烹煮時間，於選取所需的煮食模式後，按[定時]鍵一次，[定時]指示燈亮起，顯示屏會出現預設定時時間[00:00]。用戶可按[增加]或[減少]鍵調整設定時間；按[減少]鍵設定小時，按[增加]鍵設定分鐘（長按3秒可作快速調節）。設定時間範圍由1分鐘至2小時59分鐘。

用戶可按[定時]鍵一次確認或等待顯示屏數字停止閃動。完成後，設定時間會以倒數的方式與烹調的火力交替顯示。當倒數結束，產品會發出“嗶”聲後返回備用狀態。

如需變更設定時間，可按[定時]鍵一次，剩餘時間會閃動，用戶可按需要重新設定。如烹調期間需取消定時功能，用戶可長按[定時]鍵3秒取消。

### 安全鎖功能

為防止兒童觸碰或因其他意外觸碰而啟動或更改操作模式，可啟動安全鎖以鎖定所有功能鍵。在備用狀態下，安全鎖處於解鎖狀態。

接通電源，按[電源]鍵進入選擇模式，於選擇加熱功能後按[安全鎖]鍵一次，以鎖定所有功能鍵([電源]鍵除外)，使之不能更改功能、時間及火力。在安全鎖啟動狀態下，[安全鎖]鍵指示燈會亮起。如須解鎖，長按[安全鎖]鍵3秒即可。

若同時啟動定時功能及安全鎖功能，顯示窗仍會顯示所設定的時間及火力，但所有按鍵均會被鎖定([電源]鍵除外)。當倒數結束，產品會發出“嗶”聲然後自動返回備用狀態。

### 餘溫顯示燈

關機後，如爐面溫度處於約50°C或以上，餘溫顯示燈會閃動，表示爐面尚有餘溫，切勿觸摸。

## 5.9 附設功能說明

### 自動恆溫系統

不同加熱功能均有預設溫度值，當產品到達預設的溫度後，恆溫功能將會自動啟動，並停止加熱以穩定溫度(此時，所選取的加熱功能指示燈會由長亮轉為閃動)，直至溫度下降至原有的設定值後才會重新起動加熱。因此，本產品或會出現斷斷續續的加熱情況，此乃電陶爐的恆溫系統正在運作。

### 自動關機功能

啟動產品加熱後，如120分鐘內沒有任何按鍵操作指示，產品會發出5次“嗶”聲提示用戶，然後自動停止運作以確保安全。如用戶需要烹調超過120分鐘，請使用定時功能。

### 散熱風扇延時轉動

完成烹調後，用戶可按[電源]鍵停止加熱，[電源]鍵指示燈會由長亮轉為閃動，即表示產品已轉回備用狀態。**注意！**此時散熱風扇仍會持續轉動，以排除機內的熱氣。待風扇停止運作後，才將電源插頭拔出，以免對產品造成損壞或產生危險。

### 注意事項

如使用本產品加熱嬰兒食物，建議餵哺嬰兒前自行測試奶溫，確保奶溫適合才餵哺嬰兒，避免因直接餵哺而燙傷嬰兒喉部。另外，如使用本產品煲粥，用戶須不時攪動鍋內食材，避免食材焦著在鍋具底部；由於暖粥很快會變成糊狀，建議盡快享用，以免影響烹調食物的味道。

### 故障代碼

使用不當或發生問題時，對應故障代碼會顯示於數碼顯示屏上。當產品發生E0至E7故障時，產品會停止加熱同時蜂鳴聲斷續響起。(詳情請參考**標題6.故障排除**的檢查要點及解決方法)

### 6. 故障排除

使用時，如發現產品操作上有問題，在維修前請先對照下表進行檢查及處理。

故障現象	檢查要點	處理方法
接通電源後，按[電源]鍵後產品沒有反應。	是否停電？	待電力恢復後使用。
	保險絲是否斷路？	小心檢查原因。若有需要，請聯絡信興電器服務中心有限公司進行檢查及維修。
	電源線插頭是否鬆脫？	
開啟電陶爐後，電源指示燈亮起，產品不工作。	控制面板是否正常運作？	聯絡信興電器服務中心有限公司進行檢查及維修。
	鍋具及食物有否被加熱？	
在烹調期間產品停止運作。	是否使用環境溫度過高？	移離高溫環境再重新開啟本產品。若有需要，請聯絡信興電器服務中心有限公司進行檢查及維修。
	進風口或出風口是否被阻塞或堆積了髒物？	清除堵塞在進風口／出風口處的污物，並請保持通風口暢通。
	是否已超過2小時沒有進行操作指示？	正常情況。可重新輸入所需的烹調指示或選用定時功能。
故障代碼。	E0 散熱風扇短路 E1 散熱風扇開路 E2 產品內部溫度過高 E3 電壓過高 E4 電壓過低 E5 爐面感測器開路或短路 E6 產品內部感測器開路或短路 E7 爐面溫度過高	聯絡信興電器服務中心有限公司進行檢查及維修。

如按照以上處理方法／操作仍然無法恢復正常使用，即時關閉電源，聯絡信興電器服務中心有限公司(電話：2406 5666)進行檢查及維修，並將故障代碼告知信興電器服務中心有限公司。切勿自行拆卸及修理產品，避免產生意外及對產品造成損害。

## 7. 特別聲明

1. 本說明書的內容經過核對，如有任何印刷錯誤及內容上的誤解，本公司將保留解釋權。
2. 本產品若有技術改進，會編進新版說明書中，恕不另行通知；產品外觀及規格以廠方生產資料為準。
3. 使用說明書的電子副本可以經電子郵件發送至用戶，如有需要，可致電信興電工工程有限公司：2861 2767。

## 8. 售後服務

信興電工工程有限公司(“本公司”)授權信興電器服務中心有限公司(“服務中心”)提供一年保修服務並由發票/換購收據上的日期起計。(“服務中心”)保留所有更改保修條款的權利，恕不另行通知，有關保修條款詳情，可參閱本公司網站。

# Rasonic 樂信牌

---

Thank you for purchasing Rasonic ceramic cooker. Please read the operation manual carefully before using and well keep it for your future reference.

## Table of Contents


1. Important Safeguards
2. Maintenance and Daily Care
3. Cookware Selection
4. Product Specifications and Configuration
5. Control Panel and Operation Instruction
6. Troubleshooting and Treatment
7. Special Avowal
8. After Sales Service

## 1. Important Safeguards

When using the appliance, follow the basic safety precautions. Failure or negligence in observing these safety precautions could cause injury or appliance damage caused by improper usage :

### 1.1 To prevent fire, burn or electric shocks

#### Treatment for residual heat

1. The symbol  on the top plate represents that top plate is hot during and just after cooking. Do not touch to avoid burning.
2. Clean the appliance after it has cooled down.

#### Before using the ceramic cooker

1. Make sure the input voltage match the rated voltage marked on the appliance before operation.
2. Use an independent socket for the appliance. Do not use extension cords to avoid overload and risk of fire.
3. Place the appliance on a dry area steadily and at least 10cm away from the wall for heat dissipation.

#### When using the ceramic cooker

1. Do not overheat. (Use lower power levels for preheating.)
2. Never heat the empty cookware. Otherwise the appliance may overheat, malfunction and top plate discolor.
3. **WARNING!** Do not leave the appliance unattended. Especially when cooking on a pot with fat or oil can be dangerous and may result in a fire.
4. **CAUTION!** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

### After using the ceramic cooker

1. After operation, shut down and unplug the appliance to avoid damaging the electronic elements or even causing fire due to long-term connect to the electricity.
2. Switch off the appliance when not in use. After the operation of the cooling fan prolong function, unplug the appliance from the socket.
3. After operation, do not touch the cooking zone directly to avoid of hazard of burning.

### For the top plate

1. Do not store item on the cooking zone or place portable gas burners or petroleum gas cylinders on the top plate. They may explode if they are mistakenly heated.
2. Do not subject the appliance to a crash. (e.g. Dropping heavy object on the appliance may cause invisible cracks under the top plate. Without checked by Shun Hing Electric Service Centre Limited and kept using the appliance may cause further cracks and dangers.)

\*\*\***WARNING:** If the top plate is cracked, stop using immediately, switch off and unplug the appliance. To avoid the possibility of electric shock, short circuit or fire, contact Shun Hing Electric Service Centre Limited for checking and repairing immediately.

### For the cookware

1. Use cookware with a flat and clean bottom as mentioned in the manual, and ensure it is steadily placed on the top plate. Otherwise, the sensor of the appliance may be malfunction and cause abnormal heating.
2. Before placing cookware on the top plate, make sure there is no water, oil or other attachment in between. If so, clean it before using the appliance.
3. Do not rub the top plate against the bottom of cookware. The top plate may be scratched or discolored.

### Avoid deep-frying cooking

1. The appliance does not equip with oil temperature control system. Overheated oil may catch fire or damage the internal electric elements if deep frying. Always heat fat bit by bit and keep watching as it heats up.
2. If any oil or fat catches fire, switch off the appliance immediately. Do not put out the flames with water. Use suitable fire extinguisher or fire blanket instead.

### For the ceramic cooker cooking

1. Keep all combustible materials, spray canisters and aerosols away. It may possibly cause fire or explosion.
2. Do not heat sealed food (e.g. cans or food packed with silver foil) to avoid possibility of explosion.
3. Do not allow unaccustomed people to use the appliance without supervision.
4. The appliance is not intended to use by person (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by the person responsible for their safety.

5. Pay attention to the cooking status and temperature to avoid overheating or empty heating. Otherwise, the overheat protection will be activated and the appliance will be shut off automatically when the temperature is too high. It may affect the cooking result.
6. Great care is necessary in using the appliance, especially near children. Children should be supervised to ensure that they do not play with the appliance. Also, children without adult supervision should not operate the appliance and keep them away from the appliance.
7. Keep it out of reach for infants.
8. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
9. Always place the cookware at the center of the cooking zone during operation. Avoid moving the cookware to the edge of the appliance as the heated cookware may damage the plastic enclosure under the top plate.

## 1.2 To prevent ignition or accidents

### Beware of the following in order to avoid accidents

1. **Attention!** Ingredients or hot water may spout infrequently when heating. This phenomenon is called bumping. Check the condition carefully and stir the ingredients occasionally by using low power levels, especially when stewing.
2. The cookware must be placed on the top plate steadily. (If the cookware felt off, it may cause injuries or burns.)
3. Heat the bottom of the cookware directly. Never place paper or other objects between the cookware and the top plate. (Objects may possibly get burnt due to high temperature.)
4. Keep the appliance away from the place of massive hot gas, steam, damp and heat place or water source so as to prevent water penetrating inside the appliance.

5. Do not attempt to disassemble, repair or modify the appliance. For repairing, please contact Shun Hing Electric Service Centre Limited.
6. Handle the power cord with care, do not place heavy object on it or clamp it. Any modification is prohibited to the power cord. Do not stretch or twist the power cord. Always hold the plug tightly when unplugging or plugging into the socket. If the power cord is damaged, it must be replaced by Shun Hing Electric Service Centre Limited to avoid hazarding.
7. Do not hang the power cord over the edge of table, counter-top or contact with the hot surfaces. Do not use the appliance when the power cord is tangled, it may let the power cord be frayed and damaged.
8. Make sure to press one function key at a time only. Do not place hot objects or cookware on the control panel as the appliance may function improperly.
9. Do not touch the appliance, plug or unplug the appliance by wet hand.
10. Do not use the appliance for purposes other than cooking. (Using the appliance other than cooking may cause malfunction.)
11. The appliance is intended to be used in household or similar applications such as: staff kitchen area in shops, offices and other working environments; or clients in hotels, motels and other residential type environments.
12. The appliance is for household or similar environment use only. Do not use it outdoors and any other uses that are not recommended in the manual. If the appliance is used improperly or for commercial (or semi-commercial) purpose or if it is not used according to the instruction in the manual, the maintenance guarantee will become invalid and we refuse any liability for damage caused.

13. To prevent hazards occur, when the appliance or parts were malfunction, do not replace with any parts or accessories which is produced without authorization. Otherwise, the maintenance guarantee will become invalid.
14. In order to comply with safety regulations and to avoid hazards, if the appliance needs to be checked or repaired, contact Shun Hing Electric Service Centre Limited (hotline at 2406 5666 or refer to the address found at the back page of the manual), and be reminded that the official invoice and product warranty card (printed on the gift box) must be presented for checking or repairing service.

### 1.3 Important notice

#### **Do not clog up the intake/exhaust air vent**

(When the intake/ exhaust air vent is clogged, the appliance may turn off automatically and overheat may cause other hazards.)

1. The intake vent and exhaust vent are located at the bottom and at the back of the appliance.
2. Do not place the appliance on top of carpet, tablecloth, paper sheet or mat etc. (If the air intake / exhaust vent is clogged, it may cause malfunction.)
3. Do not insert metallic object (such as pins or wire etc.) into the air intake vent and exhaust vent.

### 1.4 When using high power levels

1. The appliance is with strong heating power. If high power level is used in small portion of oil, the cookware will be heated excessively. Oil temperature will rise rapidly and may cause accident.
2. If the bottom of the cookware is thin, overheat may result in cookware deformation. Preheat the cookware with low power levels when using bottom thin cookware or cooking with less oil.
3. When boiling water, trim down the power level as soon as the water was boiled. (Water may boil over or splash around.)

## 2. Maintenance and Daily Care

1. Switch off the appliance by pressing power key and unplug before cleaning.
2. Top plate cleaning: use a wretched damp cloth to wipe. If object can not be wiped off, use some mild decontamination powder or detergent to wipe, then using a damp cloth to wipe.
3. Main body cleaning: wipe it with a soft damp cloth. If the greasiness is hard to wipe off, use mild detergent to clean and wipe it with a damp cloth.
4. Do not use steam cleaner, rinse directly with water, or immerse the appliance and its power cord in water. If the water penetrates the electrical parts built into the unit, it may cause malfunction or other hazards.
5. If acidic food (e.g. Vinegar, jam or food containing lemon juice or plum, etc.) sticks to the top plate or top frame, wipe it off immediately. Otherwise, the top plate or top frame may be discolored.
6. Materials including plastic, aluminum foil, sugar or any foodstuff contain sugar are already burnt on or melted on the cooking zone unintentionally. It must be removed or cleaned immediately with soft damp cloth when the top plate is still warm. Otherwise, it may damage the top plate when cool down.
7. Do not use hard brush or scouring pad to clean the top plate.
8. Do not use any chemicals such as organic solvent or benzene to wipe the top plate / control panel, so as not to make chemical reaction.

# Rasonic

## 樂信牌

9. After using a long time, dust and grease may accumulate on the air intake / exhaust air vent which may affect the cooker's operation. Clean the appliance regularly and make use of cotton stick.
10. Pay attention to pest control, dust and moisture protection. Protect the appliance against cockroaches and other insects from entering the interior of the appliance to avoid short circuit.
11. Disconnect the power plug when the appliance not in use for long time. Store in a dry place, and clean it before packing it in a plastic bag. Never wrap the power cord tightly around the appliance or put any pressure on the power cord when the appliance is stored as it could cause the power cord to fray and damage.
12. Top plate may suffer from damages such as color changes to yellow, black or scratched for improper using (e.g. cook with dirty bottom cookware or do not clean immediately after the overflow of soup etc.). User can avoid or reduce such phenomena if user operate according to the manual and do daily maintenance.

### 3. Cookware Selection


1. Material: Cookware which is made of iron, aluminum, copper, ceramic, casserole, heat-resistant glass, etc. can be used. (Material like enamel is not recommended)
2. Shape: Flat bottom base cookware with the diameter in between 12-24 cm and can contact evenly with the top plate.
3. Weight: The maximum weight (including ingredients) must not exceed 10 kg.

## 4. Product Specifications and Configuration

### 4.1 Product Specifications

Model	RCC-GT22B
Rated Power	2,200W
Rated Voltage	220-240V~ 50/60Hz
Unit Dimensions (W x D x H) (mm)	280 x 360 x 62
Net Weight (kg)	2.4
Required cookware size (mm)	Cookware base diameter in between 120-240

### 4.2 Product Configuration

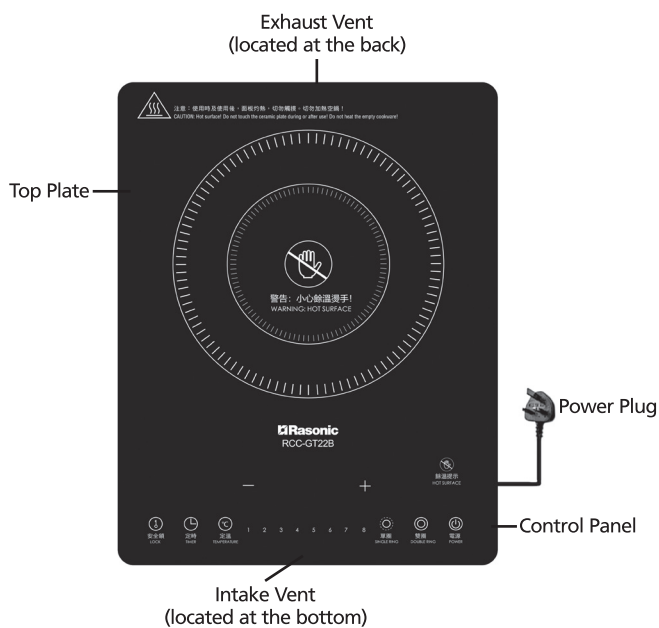


Remark: The product appearance and color are subject to the actual appliance. Above picture is for reference only.

輕便型陶瓷爐 Compact Ceramic Cooker

# Rasonic 樂信牌

## 5. Control Panel and Operation Instruction

### 5.1 Control Panel

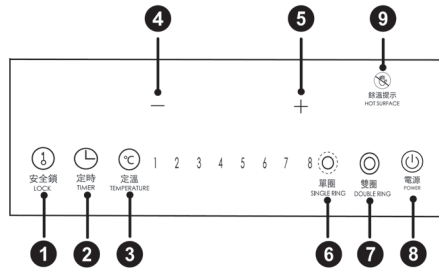

Key/Indicator	Name	Icon	Description
1	Lock		Activate/deactivate safety lock function
2	Timer		Activate timer function
3	Temperature		Switch to temperature adjustment cooking mode
4	Decrease	—	Decrease the power, temperature or time settings
5	Increase	+	Increase the power, temperature or time settings
6	Single Ring		Activate lower heat power cooking mode
7	Double Ring		Activate higher heat power cooking mode
8	Power		Switch between "Standby" or "Selection" modes
9	HOT CAUTION		Light on when hot surface detect on top plate

\*\*\* Keep the control panel clean and dry. Otherwise, the electronic sensor of keys will be program fault or malfunction.

**Power/ Temperature levels**

Cooking Function	Level							
	1	2	3	4	5	6	7	8
Single Ring (Low heat)	300W	500W	600W	700W	800W	900W	1,000W	1,100W
Double Ring (High heat)	600W	1,000W	1,200W	1,400W	1,600W	1,800W	2,000W	2,200W
Temperature (temperature adjustment)	100°C	200°C	250°C	300°C	350°C	400°C	500°C	600°C

**5.2 Operation Instructions**

After inserting the plug into the socket, a “Beep” will emit and all indicators will twinkle at the same time, indicating the unit in connection with a power source, known as standby mode, [Power] indicator will keep flashing. Place a suitable cookware on the centre of the cooking zone. The appliance will go to selection mode when the [⏻] key is pressed. Display will show [----], [Power] indicator will light up and cooling fan will start working. Press corresponding function keys to start operation. If no cooking function is chosen, the appliance will change to standby mode automatically. Return to standby mode by pressing [⏻] key after cooking.

**Power Cooking Function**

**Single Ring:** Under selection mode, press the [Single Ring] key once until a “beep” sound emitted. [Single Ring] indicator will light up, and display will show [1100] representing that the default power is 1,100W. Corresponding power indicators will light up from left to right. There are 8 power levels for selection, user can change the power levels by pressing [Increase] or [Decrease] keys accordingly.

**Double Ring:** Under selection mode, press the [Double Ring] key once until a “beep” sound emitted. [Double Ring] indicator will light up, and display will show [2200] representing that the default power is 2,200W. Corresponding power indicators will light up from left to right. There are 8 power levels for selection, user can change the power levels by pressing [Increase] or [Decrease] keys accordingly.

**Temperature Cooking Function**

Under selection mode, press the [Temperature] key once until a “beep” sound emitted. [Temperature] indicator will light up, and display will show [300°] representing that the default temperature is 300°C. Corresponding power indicators will light up. There are 8 temperature levels for selection, user can change the temperature levels by pressing [Increase] or [Decrease] keys accordingly.

**Timer Function**

User can set the cooking time when specific cooking mode is selected. Press the [Timer] key once to access the function, [Timer] indicator will light up. Display will show the default time [00: 00]. User can press [Increase] or [Decrease] key to set the desired time: [Decrease] to set hour and [Increase] key to set minute (press and hold for 3 seconds to access quick adjustment), the time can be adjusted from 1 minute to 2 hours and 59 minutes.

Press [Timer] key once to confirm or wait until the display stop flashing. After the setting, the appliance will start to countdown by showing the remaining time and cooking power on the display alternately. When the countdown is finished, the operation will stop and switch to standby mode after a “Beep”.

To change the timer setting, press [Timer] key once during countdown. The remaining time will twinkle on the display and which can be set again. To cancel the function during operation, user can either long press the [Timer] key 3 seconds or press the [Power] key returning to standby mode.


### Lock Function

To prevent children operating the appliance accidentally or changing the function mode, press [Lock] key to lock all the function keys. The safety lock function is deactivated under standby mode.

Connect the electricity, press [Power] key to enter selection mode. Press the [Lock] key once to lock all the function keys (except [Power] key) meaning that no change of function, time and power is allowed. The safety lock indicator will light up during the activation of the safety lock. To deactivate the lock, press and hold the [Lock] key for 3 seconds.

If both [Timer] and [Lock] are activated at the same time, display will show the desired time setting and power but all the function keys are locked (except [Power] key). When the countdown is finished, a "Beep" will emit and the appliance will return to standby mode.

### HOT CAUTION Indicator

After finishing the operation, if the temperature of the top plate reaches 50°C or above, the hot caution indicator  will twinkle, representing that the top plate still get hot remained. Do not touch it.

## 5.9 Additional Function for Ceramic Cooker

### Auto temperature constant system

Cooking modes have a default temperature value. When the appliance reaches the default temperature, the temperature constant system will operate automatically. The appliance will stop heating as to stabilize the temperature. Indicator light of the selected mode will change from lighting to flashing. The appliance will resume to heat until the temperature decreases to certain value. Therefore, intermittent heating conditions may occur.

### Auto Switch Off Function

When about 120 minutes elapses without any button being pressed while heating, 5 times of "Beep" will be heard, and then the appliance will be switched off automatically. Use the timer function if heating time longer than 120 minutes.

### Cooling Fan Prolong Function

After using the appliance, user can press the [Power] key to stop the operation. The appliance will change to standby mode and the [Power] indicator will change from lighting to flashing. **Attention!** It is reminded that the cooling fan will continue to operate in order to suppress the temperature rise inside the cooker. The fan will be automatically turned off when the cooling function is finished. To avoid hazarding or accident from happening, unplug the appliance after the cooling fan is stopped.

### Important Notice

When warming milk for infant, test the milk temperature before feeding, which is the way to ensure that the temperature is suitable for feeding and to avoid burning the infant's throat. Besides, when making Congee, stir the ingredients occasionally to avoid scorching at the bottom of cookware; it is suggested that enjoy the congee rapidly before it becomes pasted such that the taste of the congee will not be affected.

### Error Codes

When there are some problems or using the appliance incorrectly, the respective error code will be shown on the digital panel display. Operation will stop and generate discrete warning sound while error code E0 to E7 is shown on display. (Please refer to the check points and remedy shown on **Chapter 6 Troubleshooting and Treatment.**)

## 6. Troubleshooting and Treatment

During operations, if any error occurred, please check the following table before calling for service. Below are common errors and the checks to perform.

Symptoms	Check points	Remedy
After connecting the power and pressing the [Power] key, the appliance has no response.	Is the electricity in suspension?	Use after resuming the electricity.
	Is the fuse broken down?	Check the root causes carefully. If the problem cannot be fixed, please contact Shun Hing Electric Service Centre Ltd. for checking and repairing.
	Is the plug connected firmly?	
Heating being interrupted in normal use and a "Beep" will be heard with power indicator lighted up.	Is the control panel function normal?	Contact Shun Hing Electric Service Centre Ltd. for checking and repairing.
	Is the cookware and ingredients not being heated?	
No heating being in use.	Is the ambient temperature too high?	Restart the appliance, or contact Shun Hing Electric Service Centre Ltd. for checking and repairing if necessary.
	Is the air intake / exhaust air vent clogged or dirt has accumulated?	To ensure good ventilation, remove the dirt clogging the air intake / exhaust vent.
	Is the cooker working over 2 hours without change of instruction?	This is normal phenomenon. Reset cooking modes or use timer function.
Error codes occur.	E0 Ventilation fan short circuit E1 Ventilation fan open circuit E2 Internal overheat E3 Over-voltage E4 Under-voltage E5 Top plate sensor open/ short circuit E6 Internal sensor open/ short circuit E7 Top plate overheat	Contact Shun Hing Electric Service Centre Ltd. for checking and repairing.

If the above remedies/solutions cannot fix the problem, unplug the appliance immediately, note the error code and report it to Shun Hing Electric Service Centre Ltd. (Tel: 2406 5666) for checking and repairing. To avoid any danger and damage to the appliance, **DO NOT** disassemble or repair it by yourself.

## 7. Special Avowal

1. The information above has been checked; our company reserves the hermeneutic power to any print errors or misunderstanding on the content.
2. Please note that any technology improvement will be added to the new versions of operation manual without any prior notices. The product appearance and color are subject to the actual appliance.
3. E-copy of operation manual can be sent by e-mail on request, please call Shun Hing Electric Works and Engineering Co., Ltd at 2861 2767.

## 8. After Sales Service

Shun Hing Electric Works & Engineering Co., Ltd. ("The Company") authorizes Shun Hing Electric Service Centre Ltd. ("SHESC") to offer one year warranty service to the product commencing from the date of purchase invoice or redemption voucher. SHESC reserves the right to change the warranty terms without prior notice. For details of the warranty terms, you can refer to our website.

# 備忘錄

---

# 備忘錄

---





**Rasonic 樂信牌**

## 信興電工工程有限公司

**SHUN HING ELECTRIC WORKS AND ENGINEERING CO., LTD.**

辦公室：香港九龍尖沙咀東部麼地道67號半島中心9樓

電話：2861 2767

圖文傳真：2865 6706

網址：<http://www.rasonic.hk>

電郵：[shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

Office: 9/F, Peninsula Centre, 67 Mody Road, Tsimshatsui East, Kowloon, H.K.

Tel: 2861 2767

Fax: 2865 6706

Website: <http://www.rasonic.hk>

E-mail: [shew@shunhinggroup.com](mailto:shew@shunhinggroup.com)

## 信興電器服務中心有限公司

**SHUN HING ELECTRIC SERVICE CENTRE LTD.**

香港新界葵涌勝耀街2號信興中心11樓

服務熱線: 2406 5666

傳真號碼: 2408 0316

網址：<http://www.shesc.com/zh>

11/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T. HK

Service Hotline: 2406 5666

Fax No.: 2408 0316

Website: <http://www.shesc.com/en>

客戶服務中心:

香港新界葵涌勝耀街2號信興中心1樓

九龍尖沙咀東部麼地道67號半島中心B座9樓

澳門慕拉士大馬路193-199號南嶺工業大廈5樓I座

Customer Service Centre

1/F, Shun Hing Centre, 2 Shing Yiu Street, Kwai Chung, N.T.

9/F, Block B, Peninsula Centre, 67 Mody Road, Tsim Sha Tsui East, Kowloon

Avenida de Venceslau de Morais, No. 193-199, 5 andar - 1, Edf. Industrial Nam Leng, Macau

有關最新之香港及澳門客戶服務中心資料，請參閱信興服務中心網址：<http://www.shesc.com/zh>

For the latest information of Hong Kong and Macau service center, Please visit <http://www.shesc.com/en>

RCC - G0325