




Refrigerator

User Manual

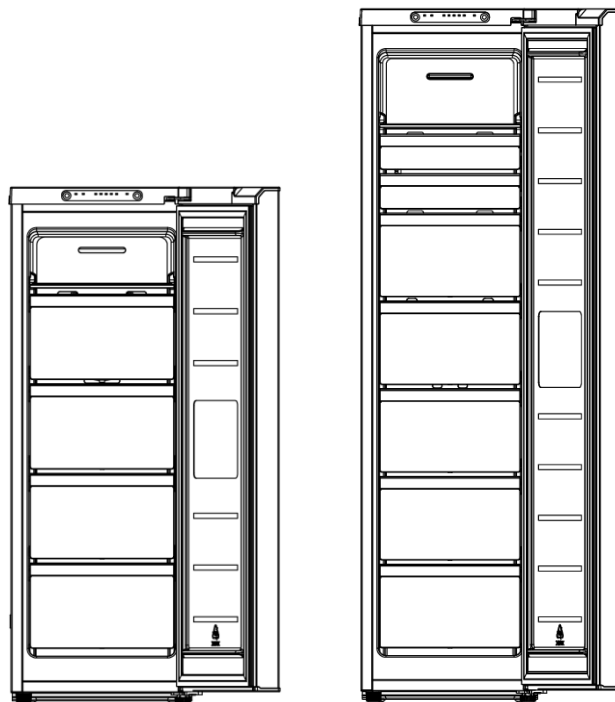

Model: RF-U1J80, RF-U1J12

Before operating the appliance, please read this manual and all the safety instructions thoroughly and retain it for future reference.

This appliance is intended to be used in household and similar applications.

Table of contents

Table of contents.....	1
Environment Impact Statement.....	2
Safety precautions	2
Refrigerator Parts and Usage	5
Packing list.....	6
Precautions for installation	6
Precautions for operation	8
Operating your refrigerator.....	9
Routine maintenance and care instructions.....	10
Storage of food in the refrigerator	11
Troubleshooting	12
Disusing	14
Waste disposal warning	14
General hints.....	14
Specification, Special Avowal and After Sales Service	15

Safety Instructions:

The appliance is designed for the use in a household or similar, for instance:

- Kitchen in shops, offices or other working center;
- Farm, hotel, vehicle hotel or other living area;
- Family hotel;
- Restaurant or similar non-retail area.

Symbols used in the Manual and their definitions:

 Not allowed This symbol means that the behavior as described is not allowed, failing which may give rise to product damages or personal injuries.	 WARNING This symbol means that the safe operation of the product and the personal safety of the operator are concerned, and that the operation must be performed in strict compliance with the requirements as specified, failing which may give rise to the product damages or personal injuries.	 CAUTION This symbol means that the operator must pay attention to the information as described, failing which may give rise to the product damages or other losses due to the improper operation.
--	---	--

Environment Impact Statement

Protect the environment and avoid any pollution. This product may cause environment impacts during the operation.

Pay attention to the following:

The carton, plastics and recyclable wastes must be put into the classified waste bin as designated. The improper disposal of other hazardous wastes may cause serious environmental pollution; therefore, they must be stored in the waste recycling bin.

Safety precautions

- ① This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction. Children being supervised not to be play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- ① Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
- ① Children should be supervised to ensure that the refrigerator is used properly.
- ① If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ① WARNING: Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- ① WARNING: Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- ① WARNING: Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.
- ① For appliances which use flammable insulation blowing gases, the instructions shall include information regarding disposal of the appliance. Only the service agent or similarly qualified persons can disposal flammable insulation blowing gases of appliance.
- ① Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- ① WARNING: To avoid a hazard due to instability of the appliance, it must be fixed in accordance with the instructions.
- ① **This refrigerating appliance is not intended to be used as a built-in appliance. Ensure that the power source complies with the requirements as indicated on the parameter nameplate**
An independent socket, at least 10A and complete with earthing device, shall be used, and it is not allowed to use the transformer and extension socket for power supply.
 - In all cases, the socket must be connected to an earthing line and it is not allowed to modify the power line and plug.
 - The power line plug shall keep in solid contact with the socket; otherwise it may give rise to any fire.
 - After the refrigerator is installed in place, the plug shall be easily accessible to facilitate the removal of the refrigerator plug in case of any accident.

- ⊘ **Never damage the power line**
 - Never pull out the refrigerator plug by dragging the power line. To remove the plug, hold it and pull it out of the socket.
 - Avoid crushing of power line by the refrigerator body or trampling by anybody.
 - Take much care when handling the refrigerator. Bundle up the power line, but never roll it.
- ⊘ **In case of damages of power line**
 - When the power line is damaged or the plug is worn out, do not further use it. In such a case, the power line or plug must be replaced at the repair workshop designated by the manufacturer, or replaced by the competent professional.
- ⓘ **In case of leakage of flammable gas**
 - Firstly, close the valve with gas leakage, and then open the doors and windows for ventilation. Never insert or remove the power socket of the refrigerator.
- ⓘ **Never store or use the gasoline or other flammable substances in the immediate area of the refrigerator to avoid fires.**
- ⓘ **Never place flammable and explosive substances and highly corrosive acid and alkaline etc. in the refrigerator.**
 - **WARNING:** Do not damage the refrigerant circuit.
 - Do not use any electric device in the closet of this refrigerator.
 - Do not use any mechanical equipment or other methods to accelerate the defrosting process.
 - Do not allow any sharp objects to come into contact with the refrigeration system behind and inside the refrigerator.
- ⓘ **Please take good care of children**
 - Prevent the children from playing inside the refrigerator.
 - Prevent the children hanging from the door body to avoid injuries due to inclination of door body or turnover of the refrigerator.
 - Prevent the children from putting their hands or feet into various types of punched holes and side edges of the mechanical compartment, back plate or other metal protection parts of the refrigerator, to avoid injuries.
 - Prevent the children from climbing or seating on the shelf in the refrigerator, for this may damage the refrigerator and the shelf.
- ⓘ **Prevent water ingress**
 - Never sprinkle or flush the refrigerator using water, nor place the refrigerator in an area exposed to moisture or water sprinkling, let alone filling the refrigerator with water, so as to avoid impairment of the electric insulativity of the refrigerator. Furthermore, failing to follow such requirements may lead to electric shock and fire, or other accidents.
- ⓘ **Avoid cold injuries**
 - After the refrigerator is put into operation, never touch its inner surface, especially when your hand is wet; otherwise the skin may stick onto the inner surface to get injured.
- ⊘ **Never modify the refrigerator without approval**
 - It is not allowed to remove or modify the refrigerator without approval, nor to cause man-made damages of the refrigerating circuit.
 - The refrigerator must be repaired by the competent professional.
- ⓘ **Do not store liquid bottled food in freezer chamber. The cans and the bottles may explode.**
- ⓘ **Do not put frozen products, taken out directly from the freezer (lollies, ice cubes, etc.) into your mouth, their low temperature may cause severe frostbite.**

- ① **When the refrigerator is to be rejected**
 - Keep the cabinet far away from the source of ignition to avoid any accident. Remove the door of the refrigerator, to avoid any accident of children when they are playing inside it.
 - Deliver the refrigerator to the designated place for disposal.
- ① **Only the technical service personnel can carry out the maintenance of the refrigerator and non-professional participation can be dangerous for users. The replacement of the power cables must also comply with this regulation.**
- ① **WARNING: When positioning the appliance, ensure the supply cord is not trapped or damaged.**
- ① **WARNING: Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.**
- ① **When disposing of the appliance do so only at an authorized waste disposal centre. Do not expose to flame.**
- ① **To avoid contamination of food, please respect the following instructions:**
 - Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
 - Clean regularly surfaces that can come in contact with food and accessible drainage systems.
 - Store raw meat and fish in suitable containers in the refrigerator, so that it is not in contact with or drip onto other food.
- ① **If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.**

Refrigerant

- ① The refrigerant isobutane (**R600a**) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable. During transportation and installation of the appliance, ensure that none of the components of the refrigerant circuit becomes damaged.

The refrigerant (R600a) is flammable.




WARNING: Risk of fire / Flammable materials


In case the refrigerant circuit is damaged:

- ① Do not use any electric appliances or fire equipment nearby, and open all windows to provide good ventilation. Please also contact Shun Hing Electric Service Centre Ltd. to follow up.

Refrigerator Parts and Usage

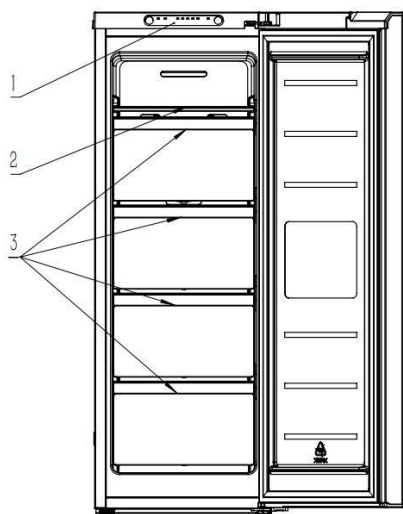

RF-U1J80

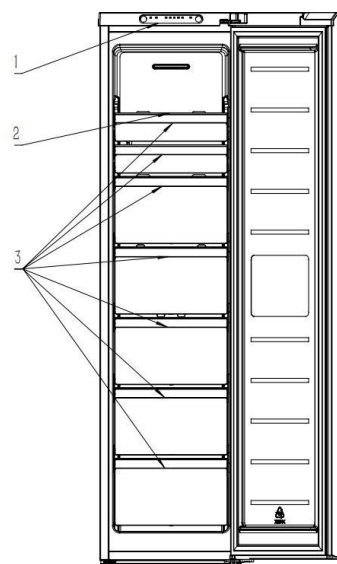

RF-U1J12

The illustrations are for reference only.

	Parts	Usage
1	Control Panel	Setting temperature
2	Glass Shelf	Storage of various food
3	Plastic Drawer	Storage of various food

- ◆ Product will be improved. The refrigerator you buy may be little difference from that listed on the manual. It will not affect its performance.
- ◆ Before using, remove the foaming and tapes which used for fixing drawers, glass shelves and other parts.
- ◆ Drawers and shelves are easily to be damaged. Use them properly.

Packing list

Description	RF-U1J80	RF-U1J12
Glass shelf	1	1
Plastic drawer (freezer)	4	7
User manual	1	1


Note: Above are basic regulations for your reference.

Precautions for installation


-  After transit where the refrigerator has been on its side or back, ensure that the refrigerator is in a level, upright position for 2 hours before connecting the appliance to a power source, this will reduce the possibility of a malfunction in the cooling system.
-  Move the refrigerator vertically. The refrigerator shall not be tilted over 45° when being handled.
-  Take the product out of the package, remove the scotch tape protecting the door and the equipment. Any remaining adhesive stains may be removed with a mild washing agent.
-  The refrigerator must be placed on a flat, firm and stable ground surface. If it needs to be elevated, a stable, solid and non-inflammable pad shall be used. Never use the packaging foam as the pad to elevate the refrigerator.
-  Make sure the appliance is placed in a horizontal position by screwing in the 2 adjustable front legs.
-  Do not place the refrigerator in the area exposed to moisture or water splash. The water splash or dirt on the refrigerator shall be timely removed using the soft cloth to prevent rusting and impairment of electric insulativity.
-  Do not place the refrigerator in an environment lower than 5°C, nor use it in the rain. The refrigerator shall be kept far away from the heat source and protected against sunshine, to avoid influencing the normal operation of the refrigerator.
-  The appliance is only applied with power supply of single phase alternating current of 220-240~, 50/60Hz. The device uses a wall socket earthed according to current recommendations.
-  If the power cable is damaged, do not proceed with its replacement but contact Shun Hing Electric Service Centre Ltd.
-  The socket must be readily accessible but out of reach of children. If unsure, contact your installer.
-  The refrigerator is designed for free standing installation. To ensure the doors open freely, and adequate ventilation from all sides, the distance between the sides of the appliance and the wall is shown on the following figures. A minimum spacing of 2 inches (5cm) to the top and 2 inches (5cm) to the side are highly recommended. The space must be not less than the instruction dimensions, otherwise the normal operation of the refrigerator may be adversely influenced.

Product dimension

unit: mm

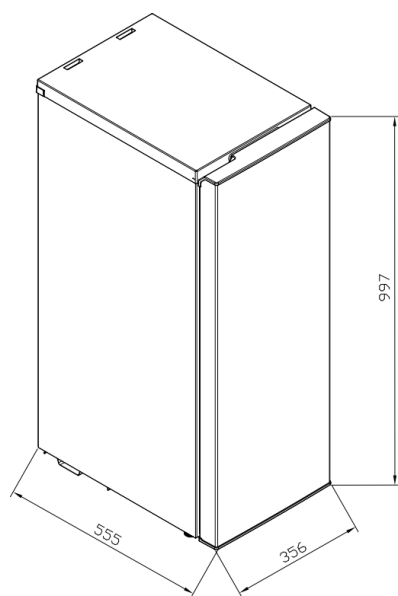


RF-U1J80

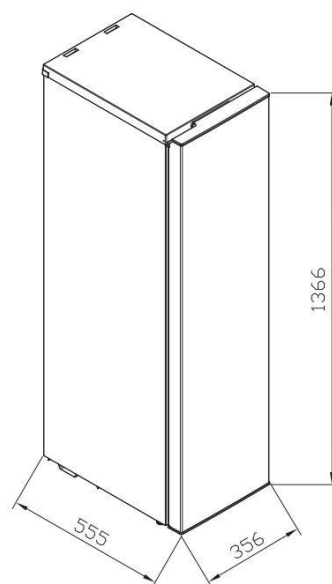

RF-U1J12

Installation space required

Unit: mm

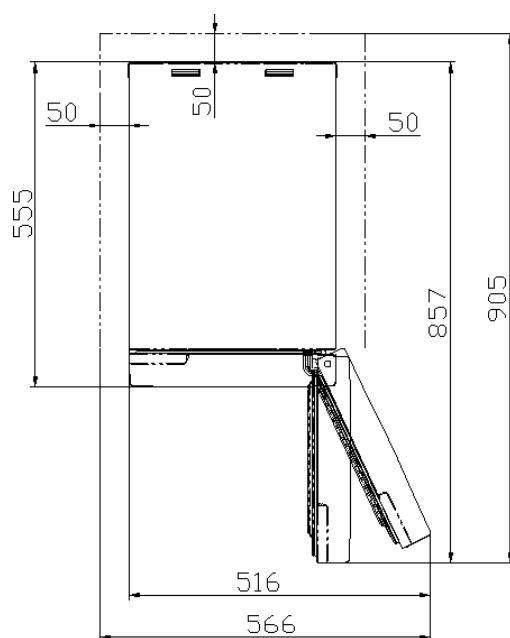

- ⚠ The rear wall of the refrigerator, in particular, the electrical parts and the elements of the cooling system must not contact other elements, which may damage them.
- ⚠ It is forbidden to readjust or modify any parts of the unit. It is crucial not to damage all the tubes visible in the compressor recess.
- ⚠ Do not block the area in the vicinity of the refrigerator.

Precautions for operation


1. Clean the refrigerator.
2. Keep the refrigerator level. After the refrigerator is leveled and cleaned, do not electrify it immediately. Keep the refrigerator stationary for more than 2 hours, and then electrify it to ensure the normal operation of the refrigerator.
3. Close the refrigerator door, and insert the power line.
4. After the power supply is switched on, the refrigerator will start to work. If the refrigerator fails to work in a long period of time, check whether the power socket and the electric circuit work normally. If, half an hour later, an abrupt reduction of temperature is detected after the refrigerator door is opened, the refrigerator works normally. After 2~3 hours, adjust the temperature and then fill food according the instruction. It is normal the compressor will work for a longer time for the initial plugging, and then works intermittently.
5. Generally, do not stop the refrigerator, to avoid influencing its normal service life. After the power line plug is removed, wait for at least 5 minutes before inserting it again, to ensure the normal operation of the refrigerator.
6. Do not switch off the power supply of the refrigerator when unnecessary, because the power interruption may cause temperature rise inside the refrigerator, thus to shorten the storage term of food.
7. A certain space shall be maintained between food containers, which will facilitate the circulation of cool air.
8. It is not allowed to flush the refrigerator body using water, nor to wipe the body using the gasoline or other organic solvents.
9. If the power cord is damaged, it must be replaced by the professional of the manufacturer, its repair department or any similar department to avoid any danger.
10. All power sockets must be reliably earthed.

Operating Your Refrigerator

This is a frost-free refrigerator which applies intelligent control system. Plug in, it will access to optimized working performance. You can also set temperature according to your requirement.

Setting and function tips

- I LED lights will turn off with no operation for 1 minute. Press any key to wake up the control panel.
- II Alarm function: The refrigerator has door-open alarm function. When the door keeps open for one minute, the alarm will sound and the LED light on the panel will be fully on. If the door still keeps open, after 1 minutes. The alarm will sound again. If it is not closed normally for more than three minutes, the alarm will sound until the door is closed normally and the operation panel will return to normal display.
- III Memory function: The setting status can be memorized even the power is failure. When power switches on again, the refrigerator will work according to the last temperature and mode settings.

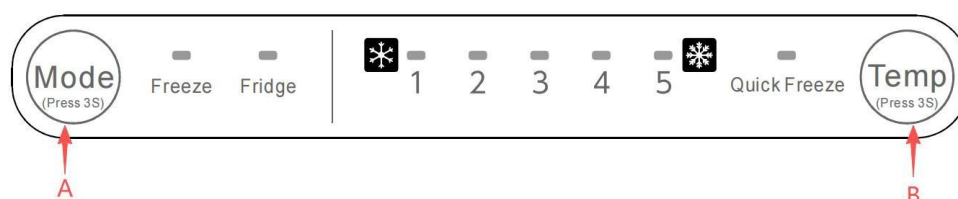

Operating Instructions

Long press “A” key for 3 seconds to switch modes, and cycle according Freeze - Fridge - Freeze. Short Press “B” key to adjust temperature settings. 1 setting for each press, and cycle according 1 →2 →3 →4 →5 →1.

Long press “B” key for 3 seconds, the “Quick Freeze” LED will be on, the freezer will automatically work at -22°C for 24 hours. This mode will exit prematurely if you press “B” key for 3 second again.

(Add: When desired temperature is selected, the number will flash 5 times to confirm.)

Setting	Fridge Temperature Range	Freezer Temperature Range
1,2	Higher than Setting 3 by 2°C - 3°C	Higher than Setting 3 by 2°C - 3°C
3	About 3°C - 5°C	About -20°C - -18°C
4,5	Lower than Setting 3 by 2°C - 3°C	Lower than Setting 3 by 2°C - 3°C

Routine maintenance and care instructions

The refrigerator has been equipped with an automatic defrosting function (no-frost). Water from defrosting will go to water tray and be evaporated.

1. To develop the best performance of this machine and prolong its service life, it shall be serviced frequently. Before maintenance, the power line plug shall be removed and it shall be confirmed that the power supply has been cut off.
2. It is not allowed to remove the power line plug from the socket by pulling the cable.
3. The refrigerator inside shall be thoroughly cleaned every year. To clean the refrigerator, the plug shall be removed and the refrigerator shall be emptied. Then the refrigerator inside shall be cleaned using the wet soft cloth or sponge dipped with clean water or mild detergent. It is not allowed to clean the refrigerator using the organic solvent, alkaline detergent, boiled water, washing powder or acid and the like.
4. Condensation on the surface of a refrigerator is normal and is usually caused by high ambient humidity. When the refrigerator door is opened, cold air escapes from the refrigerator, which condenses with water vapor in the environment, forming condensate on the surface of the refrigerator. In such a case, the surface can be dried using the dry cloth.
5. To ensure the normal operation of the refrigerator in a long period of time, the user should inspect the refrigerator on a regular basis; if any abnormality is found, contact Shun Hing Electric Service Centre Ltd. immediately.
6. During cleaning operation, it is not allowed to use the water to flush the compressor compartment of the refrigerator. After cleaning operation, the refrigerator shall be wiped using the dry cloth to prevent rusting.
7. Any juice or soup will damage the door gasket. Please be sure to keep the door gasket (seal) clean to keep the unit running efficiently.

Taking out and putting in the shelves

Slide the shelf out and in freely to change the space, but be carefully not drop the shelves.

Taking out and putting in the drawer

Make the front part higher and pull it out, then slide it in as much as possible until it is stopped.



Checking after cleaning:

- If any damage on the power cable;
- If it cannot plug in smoothly;
- If any abnormal heat on the plug.

If any of above happened, please unplug and contact your local retailer or Shun Hing Electric Service Centre Ltd.

Storage of food in the refrigerator

1. Before storage food into your refrigerator, make sure your food, especially food with water to plastic bags with proper wrapping or put in containers with proper sealing to avoid unexpected odor or drying.
2. Hot or warm food shall be put into the refrigerator after cooling for energy saving purpose.
3. The shelf of each layer can be pulled out by a certain portion to facilitate the access of the food.
4. Leave proper space between food for better air ventilation in the refrigerator.
5. Better to store food in pieces.
6. Store fruit and vegetable after cleaning.
7. Keep fresh and warm foodstuff at ambient temperature away from the products, which have already been frozen.
8. The storage time for frozen products depends on their quality before freezing when fresh, and on the storage temperature. The following storage periods are recommended when the temperature of -18°C or lower is maintained:

Products	Storage time
Beef	6-8
Veal	3-6
Giblets	1-2
Pork	3-6
Poultry	6-8
Fish	3-6

9. Fridge mode is for all delicate and perishable food e.g.:
 - Pre-packed vegetable and other fresh food with a label stating it should be kept at a temperature of approx. 4°C.
 - Fresh dough, cake mixtures.
 - Dishes or baked goods containing eggs or cream.
 - Sausage products, ready meals
 - Butter and cheese
10. Not all food is suitable for storing in the refrigerator, particularly:
 - Fruit and vegetables which are sensitive to cold, such as bananas, avocado, papaya, passion fruit, aubergines, peppers, tomatoes and cucumbers.
 - Fruit which is not yet ripe
 - Potatoes



This refrigerator is for home use which could not store any object with strict temperature requirement, such as medicine, blood, vaccine or academic stuff, etc.

Troubleshooting

If you find any abnormality during operation, immediately stop the operation, remove the power line plug, and check the machine according to the following instructions. If necessary, contact Shun Hing Electric Service Centre Ltd.

Status	Reason and solution	
The refrigerator doesn't work	The power supply is not switched on.	Switch on the power supply.
	The refrigerator is undergoing auto-frosting.	It is a normal phenomenon.
	The compressor is provided with a protection mode.	The operation interval of the compressor is 5 minutes.
	The control board is damaged.	Notify the Shun Hing Electric Service Centre Ltd. for repair.
Too high noise	The refrigerator is not level.	Level the refrigerator, for the unlevelled refrigerator may produce noise during operation.
	The refrigerator is touching furniture and / or other objects.	Place the appliance at a location that ensures proper clearances around it.
	The fan is not fixed firmly.	Notify the Shun Hing Electric Service Centre Ltd. for repair.
Heat dissipation	There is anti-condensate tube on the front frame which will send out heat during refrigerator operation.	It is a normal phenomenon.
	There is heat dissipation (condenser) on the cabinet which may cause heat.	It is a normal phenomenon.
Moisture forms on outside of refrigerator	The door is opened too frequently or the door is opened for too long time.	Do not open the door for too long time, nor open or close the door too frequently.
	The external environment is highly humid.	Dry using a piece of dry and soft cloth.
	The refrigerator temperature is set too low.	Set a proper temperature.

The door is improperly sealed and there is a leakage of cool air	The door seal may be hardened or deformed.	Notify the Shun Hing Electric Service Centre Ltd. for repair.
The compressor keeps operating for long time	If the temperature in the summer is too high, the compressor will work for long time. This is normal. If the refrigerator is not cool enough, check against the following items: If the refrigerator door is not properly sealed or the door is opened too frequently, close the door tightly, and open the door at a lower frequency. Do not place too many food in the refrigerator, and maintain a certain space between foods. If the temperature inside the refrigerator reaches too low required temperature, check the temperature setup, and set the temperature at a higher level.	
The refrigerating effect of the refrigerator is poor	The refrigerator is exposed to sunshine or any heat source is located in its immediate area. Temperature control is not set correctly. A large amount of warm or hot food was stored recently. Wait for the refrigerator to reach its selected temperature. The drinks in the refrigerator are crowded to impair the cool air circulation. The refrigerator door is frequently opened or is not properly closed.	
Food is frozen in fridge compartment	Does food be placed too close to sensor. Does food be placed too close to air outlet.	
There is any odor in the refrigerator	The new refrigerator may give off the smell of the foaming agent or plastic. That's normal, and such smell will disappear slowly in future. Check whether there is any spoiled soup inside the refrigerator. Any odorant food shall be tightly sealed using the plastic bag. The refrigerator shall be cleaned on a regular basis.	
The refrigerator produces the liquid flowing sound.	The sound is generated from the flowing of the refrigerant inside the circulating pipeline of the refrigerating system. That's normal. No further checking is required.	
The refrigerator produces abnormal sound	This is the sound generated in the startup of electric components, such as the relay and thermal protector, during start or stop of the refrigerator.	
	This is caused by the mutual fine movements of various kinds of materials due to the inconsistent thermal expansion and contraction arising out of abrupt changes of the refrigerator inside temperature when the refrigerator is being started or stopped.	
	Bubbling or gurgling sounds (like boiling water). This is the normal sound of refrigerant (used to cool refrigerator) circulating throughout the system.	

Disusing

If it is not used for a long time, turn off the refrigerator, pull out the plug and take off the safety device or break the fuse.

Do a good job in cleaning and open the cabinet door so that no smell will be produced.

Waste disposal warning

Packing materials are used to protect the electric appliance during transportation, and every part of the material is recycled material.

- Paper board/cardboard (made of waste paper)
- Polystyrene blocks (foam, non-fluorinated polystyrene)
- Plastic film, bag (polystyrene)
- Packing tape (polystyrene)
- **Do not let children play with packaging material, because the plastic film may cause suffocation!**
- Send the packing materials to the public environmental recycling station.

The outdated refrigerator in residential areas where garbage is not classified still has many valuable raw materials which shall be dealt with.

- The outdated refrigerator shall be discarded immediately; the plug shall be pulled out, and the soft power cable shall be removed. Destroy the lock to prevent children from locking themselves when they play.
- Before sending the outdated refrigerator to the public recycling station, the cold circulation system shall not be damaged to ensure the refrigerant and oil of the refrigerator will not leak.



Information about recycling dates and recycling stations can be consulted with local sanitation departments or government agencies.

	Correct disposal of this product
	This symbol on the product, or in its packaging, indicates that this product may not be treated as household waste. Instead, it should be taken to the appropriate waste collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council, your household waste disposal service, or the shop where you purchased the product.

General hints

The leak proofness of refrigerant cycle has been tested.

The manufacture of this product has been updating the products. In appearance, accessories and certain technical aspects, the refrigerator you bought may be partly different from the manual, please understand.

Specification

Model	RF-U1J80	RF-U1J12
Volume	80 L	120 L
Rated Voltage	220-240V~	
Rated Frequency	50/60Hz	
Rated Current	1.8A	1.8A
Climate Category	N/ST	
Refrigerant	R600a (36g)	R600a (37g)
Product Dimension (W x D x H)	356 x 555 x 997 mm	356 x 555 x 1366 mm
Net Weight	29 kg	36 kg

SPECIAL AVOWAL

1. The information above has been checked. Our company reserves the hermeneutic power to any printing errors or misunderstanding on the content.
2. If there are technical improvements on the appliance, the user manual will be updated without any prior notice. The product appearance and color are subject to the actual appliance.
3. The e-copy of user manual can be sent by e-mail on requested, please call Shun Hing Electric Works & Engineering Co. Ltd. hotline at 2861 2767.

AFTER SALES SERVICES

For any defect, in the judgment of technician from Shun Hing Electric Service Centre Limited, caused under normal use, we are responsible for repairing or replacing parts of the said electrical appliance free of charge within one year guarantee period commencing from the date of purchase. Any defective part which has been replaced shall become our property.

Guarantee service does not cover the repair or replacement of accessories, external cables or cabinet, etc. Additional charges shall be levied if services are required.

Please present the official invoice and the guarantee certificate with the sales point's chop or the redemption centre's chop for free maintenance. For enquiries, please call Shun Hing Electric Service Centre Limited hotline at 2406 5666.

Turn off the power and contact Shun Hing Electric Service Centre Ltd. as soon as any of the following events occur.

- The circuit breaker frequently trips or the fuse blows regularly.
- If there is abnormal sound during operation.

Free guarantee service will not be provided to the appliance if: 1) it has been explicitly or implicitly modified, tampered with, altered or repaired in any way by persons other than technicians of the Company. Or 2) it has been damaged through misuse, negligence, liquid ingress or corrosion, power interruption, natural calamities or accident or external factors. Or

3) it is not a fixed installation on land. Or 4) the normal operation is affected by improper installation. Or 5) the domestic model is used for industrial or commercial purpose. Or 6) the change of location or ownership of the appliance and did not inform Shun Hing Electric Service Centre Limited.

信興電工工程有限公司**SHUN HING ELECTRIC WORKS & ENGINEERING CO., LTD**

辦公室: 香港九龍尖沙咀東部麼地道67號半島中心9樓

OFFICE: 9/F, PENINSULA CENTRE, 67 MODY ROAD, TSIMSHATSUI EAST, KOWLOON, HONG KONG

電話 TEL: (852) 2861 2767 傳真 FAX: (852) 2865 6706

網址 WEBSITE: www.shew.com.hk 電郵 EMAIL: shew@shunhinggroup.com

保養及維修 MAINTENANCE AND REPAIR SERVICE**信興電器服務中心有限公司****SHUN HING ELECTRIC SERVICE CENTRE LTD.**

辦公室: 香港新界葵涌勝耀街2號信興中心11樓

OFFICE: 11TH FLOOR, SHUN HING CENTRE, 2 SHING YIU STREET, KWAI CHUNG, NEW TERRITORIES, HONG KONG

電話 TEL: (852) 2406 5666 傳真 FAX: (852) 2408 0316

網址 WEBSITE: www.shesc.com

消耗品/附件銷售熱線 CONSUMABLES/ ACCESSORIES SALES HOTLINE

電話 TEL: (852) 2406 5666

客戶服務中心 CUSTOMER SERVICE CENTRES

香港新界葵涌勝耀街2號信興中心1樓

1ST FLOOR, SHUN HING CENTRE, 2 SHING YIU STREET, KWAI CHUNG, NEW TERRITORIES, HONG KONG

電話 TEL: (852) 2406 5439 傳真 FAX: (852) 2408 1389

澳門慕拉士大馬路149號激成工業大廈(第一期)2樓F座

AVENIDA DE VENCESLAU DE MORAIS, NO. 149, 2 ANDAR-F, EDF. INDUSTRIAL KECK

SENG (BLOCO 1), MACAU

電話 TEL: (853) 2836 2928 傳真 FAX: (853) 2852 7354

有關最新之客戶服務中心資訊, 請參閱信興服務中心網址 www.shesc.com或致電維修服務熱線查詢。

For the latest information of customer service centres, please visit www.shesc.com or call us at our hotline.

(RF/JIN/0626)