


Installation Instruction

Air conditioner

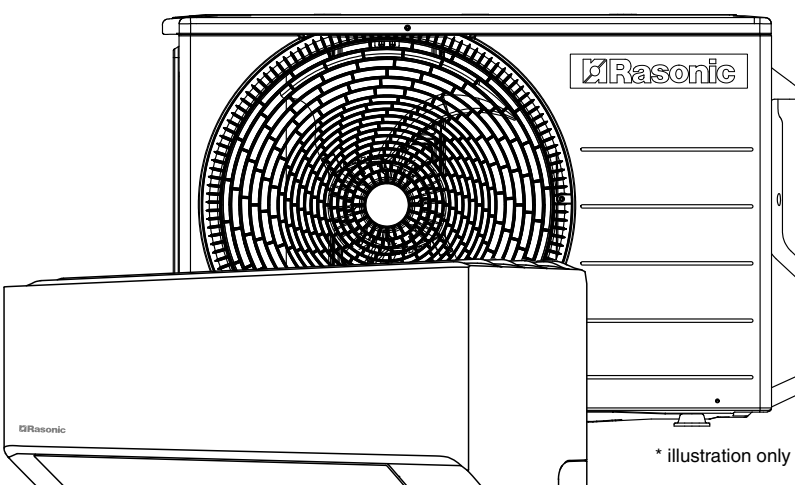

MODEL NO : RS/RU-YU9** (1.0HP)
RS/RU-YU12** (1.5HP)

CAUTION

R32 REFRIGERANT

This Air Conditioner contains and operates with refrigerant R32.

THIS PRODUCT MUST ONLY BE INSTALLED OR SERVICED BY QUALIFIED PERSONNEL.

Refer to National, State, Territory and local legislation, regulations, codes, installation & operation manuals, before the installation, maintenance and/or service of this product.

Explanation of symbols displayed on the indoor unit or outdoor unit.

	WARNING	This symbol shows that this equipment uses a mildly flammable refrigerant. If the refrigerant is leaked, together with an external ignition source, there is a possibility of ignition.
	CAUTION	This symbol shows that the Installation Manual should be read carefully.
	CAUTION	This symbol shows that a service personnel should be handling this equipment with reference to the Installation Manual.
	CAUTION	This symbol shows that there is information included in the Operation Manual and/or Installation Manual.

Rasonic will not be responsible for any incident or damage due to improper installation in anyway not described in the detailed manuals. Malfunction caused by incorrect installation is also not covered in product warranty.

SAFETY PRECAUTIONS

- Read the following "SAFETY PRECAUTIONS" carefully before installation.
- Electrical work must be installed by a licensed electrician. Be sure to use the correct rating of the power plug and main circuit for the equipment.
- The caution items stated here must be followed because these important contents are related to safety. The meaning of each indication used is as below. Incorrect installation due to ignoring of the instruction will cause harm or damage, and the seriousness is classified by the following indications.

	This indication shows the possibility of causing injury or damage to properties only.	The items to be followed are classified by symbols:		Symbol with white background denotes item that is PROHIBITED.
	This indication shows the possibility of causing injury or damage to properties only.			Symbol with dark background denotes item that must be carried out.

- Carry out test running to confirm that no abnormally occurs after the installation. Then, explain to user the operation, care and maintenance as stated in instructions. Please remind the customer to keep the operating instructions for future reference.

If the equipment is transferred to a new user or delivered to a recycling plant, be sure also to hand over the manual.

WARNING

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer. Any unit method or using incompatible material may cause product damage, burst and serious injury.
- Do not install outdoor unit rear handrail of veranda. When installing air-conditioner unit on veranda of a high rise building, child may climb up to the outdoor unit.
- Do not use unspecified cord, modified cord, joint cord or extension cord for power supply cord. Do not share the single outlet with other electrical appliances. Poor contact, poor insulation or over current will cause electrical shock or fire.
- Do not tie up the power supply cord into a bundle by hand.
- Abnormal temperature rise on power supply cord may happen.
- Do not insert your fingers or other objects into the unit, high speed rotating fan may cause injury.
- Do not sit or step on the unit, you may fall down accidentally.
- Keep plastic bag (packaging material) away from small children, it may cling to nose and mouth and prevent breathing.
- When installing air-conditioning air conditioner, do not let any substance other than the specified refrigerant, eg. air etc mix into refrigeration cycle (piping). Mixing of air etc. will cause abnormal high pressure in refrigeration cycle and result in explosion, injury etc.
- Do not pierce or burn as the appliance is pressurized. Do not expose the appliance to heat, flame, sparks, or other sources of ignition. Else, it may explode and cause injury or death.
- Do not add or replace refrigerant other than specified type. It may cause product damage, burst and injury etc.

- For R32/R410A model, use piping, flare nut and tools which is specified for R32/R410A refrigerant. Using of existing (R22) piping, flare nut and tools may cause abnormally high pressure in the refrigerant cycle (piping), and possibly result in explosion and injury.

For R32 and R410A, the same flare nut on the outdoor unit side and pipe can be used.

Since the working pressure for R32/R410A is higher than that of refrigerant R22 model, replacing conventional piping and flare nuts on the outdoor unit side are recommended.

If reuse piping is unavoidable, refer to instruction "IN CASE OF REUSING EXISTING REFRIGERANT PIPING"

Thickness of copper pipes used with R32/R410A must be more than 0.8 mm. Never use copper pipes thinner than 0.8 mm.

It is desirable that the amount of residual oil less than 40 mg/10 m.

Engage authorized dealer or specialist for installation.

If installation done by the user is incorrect, it will cause water leakage, electrical shock or fire.

For refrigeration system work, install piping according to this installation instructions strictly. If installation is defective, it will cause water leakage, electrical shock or fire.

Use the attached accessories parts and specified parts for installation. Otherwise, it will cause the set to fall, water leakage, fire or electrical shock.

Install at a strong and firm location which is able to withstand weight of the set. If the strength is not enough or installation is not properly done, the set will drop and cause injury.

For electrical work, follow the national regulation, legislation and this installation instructions. An independent circuit and single outlet must be used. If electrical circuit capacity is not enough or defect found in the electrical work, it will cause electrical shock or fire.

Do not use joint cable for indoor / outdoor connection cable. Use the specified indoor/outdoor connection cable, refer to instruction 5 **CONNECT THE CABLE TO THE INDOOR UNIT** and connect tightly for indoor/outdoor connection. Clamp the cable so that no external force will have impact on the terminal. If connection or fixing is not perfect, it will cause heat up or fire at the connection.

Wire routing must be properly arranged so that control board cover is fixed properly. If control board cover is not fixed perfectly, it will cause fire or electrical shock.

This equipment is strongly recommended to be installed with Earth Leakage Circuit Breaker (ELCB) or Residual Current Device (RCD), with sensitivity of 30 mA at 0.1 sec or less. Otherwise, it may cause electrical shock and fire in case of equipment breakdown or insulation breakdown.

During installation, install the refrigerant piping properly before running the compressor. Operation of compressor without fixing refrigeration piping and valves at opened position will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.

During pump down operation, stop the compressor before removing the refrigeration piping. Removal of refrigeration piping while compressor is operating and valves are opened will cause suck-in of air, abnormal high pressure in refrigeration cycle and result in explosion, injury etc.

Tighten the flare nut with torque wrench according to specified method. If the flare nut is over-tightened, after a long period, the flare may break and cause refrigerant gas leakage.

After completion of installation, confirm there is no leakage of refrigerant gas. It may generate toxic gas when the refrigerant contacts with fire.

Ventilate if there is refrigerant gas leakage during operation. It may cause toxic gas when the refrigerant contacts with fire.

Be aware that refrigerants may not contain an odour.

CAUTION

- General
 - Must ensure the installation of pipe-work shall be kept to a minimum. Avoid use dented pipe and do not allow acute bending.
 - Must ensure that pipe-work shall be protected from physical damage.
 - Must comply with national gas regulations, state municipal rules and legislation.
 - Notify relevant authorities in accordance with all applicable regulations.
 - Must ensure mechanical connections be accessible for maintenance purposes.
 - In cases that require mechanical ventilation, ventilation openings shall be kept clear of obstruction.
 - When done in confined spaces, follow the precautions in #1 and comply with national regulations.
 - In case of field charge, the effect on refrigerant charge caused by the different pipe length has to be quantified, measured and labelled. Always contact local municipal offices for proper handling.
 - Ensure the actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed.
 - Ensure refrigerant charge not to leak.
 - Wear appropriate protective equipment, including respiratory protection, as conditions warrant.
 - Keep all sources of ignition and hot metal surfaces away.
- Servicing
 - 2-1. Qualification of workers
 - Any qualified person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification.
 - Service shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
 - Servicing shall be performed only as recommended by the manufacturer.
 - The system is inspected, regularly supervised and maintained by a trained and certified service personnel who is employed by the person user or party responsible.
 - 2-2. Checks to the area
 - Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised.
 - For repairs to the refrigerating system, the precautions in #2-3 to #2-7 must be followed before conducting work on the system.
 - 2-3. Work procedure
 - Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.
 - 2-4. General work area
 - All maintenance staff and others working in the local area shall be instructed and supervised on the nature of work being carried out.
 - Avoid working in confined spaces. Always ensure away from source, at least 2 meter of safety distance, or zoning of free space area at least 2 meter in radius.
 - 2-5. Checking for presence of refrigerant
 - The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially flammable atmospheres.
 - Ensure that the leak detection equipment being used is suitable for use with flammable refrigerants, i.e. non sparking, adequately sealed or intrinsically safe.
 - In case of leakage/spillage happened, immediately ventilate area and stay upwind and away from spill/release.
 - In case of leakage/spillage happened, do not notify persons down wind of the leaking/spill, isolate immediate hazard area and keep unauthorized personnel out.
 - 2-6. Presence of fire extinguisher
 - Any hot work shall be undertaken on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available at hand.
 - Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.
 - 2-7. No ignition sources
 - No person carrying out work in relation to a refrigerating system which involves exposing any pipe work that contains or has contained flammable refrigerant shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. He/She must not be smoking when carrying out such work.
 - All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which flammable refrigerant can possibly be released to the surrounding space.
 - Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks.
 - "No Smoking" signs shall be displayed.
 - 2-8. Ventilated area
 - Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work.
 - A degree of ventilation shall continue during the period that the work is carried out.
 - The ventilation shall safely dissipate any released refrigerant and preferably expel it externally into the atmosphere.
 - 2-9. Checks to the refrigerating equipment
 - Where electrical components are being changed, they shall be fit for the purpose and to the correct specification.
 - At all times the manufacturer's maintenance and service guidelines shall be followed.
 - If in doubt consult the manufacturer's technical department for assistance.
 - The following checks shall be applied to installations using flammable refrigerants.
 - The actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed.
 - The ventilation machinery and outlets are operating adequately and are not obstructed.
 - If an indirect refrigerant circuit is being used, the secondary circuit shall be checked for the presence of refrigerant.
 - Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected.
 - Refrigerant pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corroded refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are properly protected against being so corroded.

- This equipment must be properly earthed. Earth line must not be connected to gas pipe, water pipe, earth of lightning rod and telephone. Otherwise, it may cause electrical shock in case of equipment breakdown or insulation breakdown.

CAUTION

- Do not install the unit in a place where leakage of flammable gas may occur. In case gas leaks and accumulates at surrounding of the unit, it may cause fire.
- Prevent liquid or vapor from entering sumps or sewers since vapor is heavier than air and may form suffocating atmospheres.
- Do not release refrigerant during piping work for installation, re-installation and during repairing refrigeration parts.
- Take care of the liquid refrigerant, it may cause frostbite.
- Do not install this appliance in a laundry room or other location where water may drip from the ceiling, etc.
- Do not touch the sharp aluminium fin, sharp parts may cause injury.

- Carry out drainage piping as mentioned in installation instructions.

If drainage is not perfect, water may enter the room and damage the furniture.

Select an installation location which is easy for maintenance. Incorrect installation, service or repair of this air conditioner may increase the risk of rupture and this may result in loss damage or injury and/or property.

For electrical work, follow the national regulation and legislation.

Power supply connection to the room air conditioner.

Use power supply cord 3 x 1.5 mm² type designation 60245 IEC 57 or heavier cord.

Connect the power supply cord to the mains using one of the following method.

Power supply point should be in easily accessible place for power disconnection in case of emergency.

In some countries, permanent connection of this air conditioner to the power supply is prohibited.

1) Power supply connection to the receptacle using power plug.

Use an approved 15/16 A power plug with earth pin for the connection to the socket.

2) Power supply connection to a circuit breaker for permanent connection.

Use an approved 16 A circuit breaker for the permanent connection. It must be a double pole switch with a minimum 3.0 mm contact gap.

• Installation work. It may need two people to carry out the installation work.

• Keep any required ventilation openings clear of obstruction.

PRECAUTION FOR USING R32 REFRIGERANT

- Pay careful attention to the following points and the installation work procedures.

WARNING

- The appliance shall be stored, installed and operated in a well ventilated room with indoor floor area larger than A_{in} (m²) [refer Table A] and without any continuously operating ignition source. Keep away from open flames, any operating gas appliances or any operating electric heater. Else, it may explode and cause injury or death.
- The mixing of different refrigerants within a system is prohibited. Models that use refrigerant R32 and R410A have a different charging port thread diameter to prevent erroneous charging with refrigerant R22 and for safety.
- A logbook shall be maintained. The charging port thread diameter for R32 and R410A is 12.7 mm (1/2 inch.).
- Ensure that foreign matter (oil, water, etc.) does not enter the piping.
- Also, when storing the piping, securely seal the opening by pinching, taping, etc. (Handling of R32 is similar to R410A.)
- Operation, maintenance, repairing and refrigerant recovery should be carried out by trained and certified personnel in the use of flammable refrigerants and as recommended by the manufacturer. Any personnel conducting an operation, servicing or maintenance on a system or associated parts of the equipment should be trained and certified.
- Any part of refrigerating circuit (evaporators, air coolers, AHU, condensers or liquid receivers) or piping should not be located in the proximity of heat sources, open flames, operating gas appliance or an operating electric heater.
- The user/owner or their authorized representative shall regularly check the alarms, mechanical ventilation and detectors, at least once a year, where as required by national regulations, to ensure their correct functioning.
- A logbook shall be maintained. The results of these checks shall be recorded in the logbook.
- In case of ventilations in occupied spaces shall be checked to confirm no obstruction.
- Before a new refrigerating system is put into service, the person responsible for placing the system in operation should ensure that trained and certified operating personnel are instructed on the basis of the instruction manual about the construction, supervision, operation and maintenance of the refrigerating system, as well as the safety measures to be observed, and the properties and handling of the refrigerant used.
- The general requirement of trained and certified personnel are indicated as below:
 - a) Knowledge of legislation, regulations and standards relating to flammable refrigerants; and,
 - b) Detailed knowledge of and skills in handling flammable refrigerants, personal protective equipment, refrigerant leakage prevention, handling of cylinders, charging, leak detection, recovery and disposal; and,
 - c) Able to understand and to apply in practice the requirements in the national legislation, regulations and Standards; and,
 - d) Continuously undergo regular and further training to maintain this expertise.
- Air-conditioner piping in the occupied space shall be installed in such a way to protect against accidental damage in operation and service.
- Precautions shall be taken to avoid excessive vibration or pulsation to refrigerating piping.
- Ensure protection devices, refrigerating piping and fittings are well protected against adverse environmental effects (such as the danger of water collecting and freezing in relief pipes or the accumulation of dirt and debris).
- Expansion and contraction of long runs piping in refrigerating systems shall be designed and installed securely (mounted and guarded) to minimize the likelihood of hydraulic shock damaging the system.
- Protect the refrigerating system from accidental rupture due to moving furniture or reconstruction activities.
- To ensure no leaking, field-made refrigerant joints indoors shall be tightness tested. The test method shall have a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure (1.04 MPa, max 4.15 MPa). No leak shall be detected.

2-10. Checks to electrical devices

- Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures.
- Initial safety check shall include but not limit to:-
 - That capacitors are discharged; this shall be done in a safe manner to avoid possibility of sparking.
 - That there is no live electrical components and wiring are exposed while charging, recovering or purging the system.
 - That there is continuity of earth bonding.
- At all times the manufacturer's maintenance and service guidelines shall be followed.
- If in doubt consult the manufacturer's technical department for assistance.
- If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily repaired with.
- If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used.
- The owner of the equipment must be informed or reported so all parties are advised thereafter.

3. Repairs to sealed components

- During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc.
- If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.
- Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.
- Ensure that apparatus is sealed securely.
- Ensure that seals or sealing materials have not degraded such that they no longer serve the purpose of preventing the ingress of flammable atmospheres.
- Replacement parts shall be in accordance with the manufacturer's specifications.

NOTE: - The use of silicon sealant may inhibit the effectiveness of some types of leak detection equipment.
- Intrinsically safe components do not have to be isolated prior to working on them.

4. Repair to intrinsically safe components

- Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permeable to equipment in the event of a fault.
- Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere.
- The test apparatus shall be at the correct rating.
- Replace components only with parts specified by the manufacturer. Unspecified parts by manufacturer may result ignition of refrigerant in the atmosphere from a leak.

5. Cabling

- Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects.
- The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

6. Detection of refrigerant leaks

- Under no circumstances shall potential sources of ignition be used in the searching or detection of refrigerant leaks.
- A handle torch (or any other detector using a naked flame) shall not be used.
- The following leak detection methods are deemed acceptable for all refrigerant systems.
 - No leaks shall be detected when using detection equipment with a sensitivity of 5 grams per year of refrigerant or better under a pressure of at least 0.25 times the maximum allowable pressure (>1.04 MPa, max 4.15 MPa) for example, a universal sniffer.
 - Electronic leak detectors may be used to detect flammable refrigerants, but the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.)
 - Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used.
 - Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed and the appropriate percentage of gas (25 % maximum) is confirmed.
- Leak detection fluids are also suitable for use with most refrigerants, for example, bubble method and fluorescent method agents. The use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.
- If a leak is suspected, all naked flames shall be removed/extinguished.
- If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. The precautions in #7 must be followed to remove the refrigerant.

7. Removal and evacuation

- When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, it is important that best practice is followed since flammability is a consideration.
- The following procedure shall be adhered to:
 - Remove refrigerant -> • purge the circuit with inert gas -> • evacuate -> • purge with inert gas -> • open (by cutting or brazing)
- The refrigerant charge shall be recovered into the correct recovery cylinders.
- The system shall be purged with OFN to render the appliance safe. (remark: OFN = oxygen free nitrogen, type of inert gas)
- This process may need to be repeated several times.
- Compressed air or oxygen shall not be used for this task.
- Purging shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum.
- This process shall be repeated until no refrigerant is within the system.
- When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.
- This operation is absolutely vital if brazing operations on the pipe work are to take place.
- Ensure that the outlet for the vacuum pump is not close to any potential ignition sources and there is ventilation available.

8. Charging procedures

- In addition to conventional charging procedures, the following requirements shall be followed.
 - Ensure that contamination of different refrigerants does not occur when using charging equipment.
 - Hoses or lines shall be used to minimize the amount of refrigerant contained in them.
 - Cylinders shall be kept in an appropriate position according to the instructions.
 - Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
 - Label the system when charging is complete (if not already).
 - Extreme care shall be taken not to over the refrigerating system.
- Prior to recharging the system it shall be pressure tested with OFN (refer to #7).
- The system shall be leak tested on completion of charging but prior to commissioning.
- A follow up leak test should be carried out prior to leaving the site.
- Electrostatic charge may accumulate and create a hazardous condition when charging and discharging the refrigerant.
- To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.

9. Decommissioning

- Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its details.
- It is recommended good practice that all refrigerants are recovered safely.
- Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant.
- It is essential that electrical power is available before the task is commenced.
 - a) Become familiar with the equipment and its operation.
 - b) Isolate system electrically.
 - c) Before attempting the procedure ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.

- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with instructions.
- h) Do not over fill cylinders. (No more than 80 % volume liquid charge).
- i) Do not exceed the maximum working pressure of the cylinder, even temporarily.
- j) When the cylinder is full or components are installed in a position where they are unlikely to be exposed to any substance which are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigerating system unless it has been cleaned and checked.

Electrostatic charge may accumulate and create a hazardous condition when charging or discharging the refrigerant.

To avoid fire or explosion, dissipate static electricity during transfer by grounding and bonding containers and equipment before charging/discharging.

10. Labelling

- Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant.
- The label shall be dated and signed.
- Ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

11. Recovery

- When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.
- When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed.
- Ensure that the correct number of cylinders for holding the total system charge are available.
- All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant).
- Cylinders shall be complete with pressure relief valve and associated shut-off valves in good working order.
- Recovery cylinders shall be evacuated and, if possible, cooled before recovery occurs.
- The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of concerning the equipment that is at hand and shall be suitable for the recovery of flammable refrigerant.
- In addition, a set of calibrated weighing scales shall be available and in good working order.
- Hoses shall be complete with leak-free disconnect couplings and in good condition.
- Hoses used for the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release.
- Consult manufacturer if in doubt.
- The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant Waste Transfer Note arranged.
- Do not mix refrigerants in recovery units and especially not in cylinders.
- If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant.
- The evacuation process shall be carried out prior to returning the compressor to the suppliers.
- Only electric heating to the compressor body shall be employed to accelerate this process.
- When oil is drained from a system, it shall be carried out safely.

Required tools for Installation Works		Thermometer	
1 Phillips screw driver	6 Pipe cutter	11 Thermometer	16 Torque wrench
2 Level gauge	7 Reamer	12 Megameter	18 N•m (1.8 kgf•m)
3 Electric drill, hole core drill (Ø70 mm)	8 Knife	13 Multimeter	42 N•m (4.3 kgf•m)
4 Hexagonal wrench (4 mm)	9 Gas leak detector	14 Vacuum pump	55 N•m (5.6 kgf•m)
5 Spanner	10 Measuring tape	15 Gauge manifold	65 N•m (6.6 kgf•m)
			100 N•m (10.2 kgf•m)

Attached accessories


No.	Accessories part	Qty.	No.	Accessories part	Qty.
1	Installation plate	1	6	Remote control holder fixing screw	2
2	Installation plate fixing screw	5	7	Drain elbow	1
3	Remote Control	1	8	Air purifier filter	1
4	Battery	2	Piping size		
5	Remote control holder	1	Applicable piping kit		
				Gas	Liquid
				CZ-3F5, 7BP	9.52 mm (3/8") 6.35 mm (1/4")
				CZ-4F5, 7, 10BP	12.7 mm (1/2") 6.35 mm (1/4")
				CZ-5F5, 7, 10BP	15.88 mm (5/8") 6.35 mm (1/4")

SELECT THE BEST LOCATION

- | INDOOR UNIT | OUTDOOR UNIT |
|--|--|
| <ul style="list-style-type: none"> Do not install the unit in excessive oil fume area such as kitchen, workshop and etc. There should not be any heat source or steam near the unit. There should not be any obstacles blocking the air circulation. A place where air radiation in the room is good. A place where drainage can be easily done. A place where noise prevention is taken into consideration. Do not install the unit near the door way. Ensure the spaces indicated by arrows from the wall, ceiling, fence or other obstacles. Indoor unit of this air conditioner shall be installed in a height of at least 1.8 m. | <ul style="list-style-type: none"> If an awning is built over the unit to prevent direct sunlight or rain, be careful that heat radiation from the condenser is not obstructed. There should not be any animal or plant which could be affected by hot air discharged. Keep the spaces indicated by arrows from the wall, ceiling, fence or other obstacles. Do not place |

1 SELECT THE BEST LOCATION (Refer to "Select the best location" section)

2 HOW TO FIX INSTALLATION PLATE

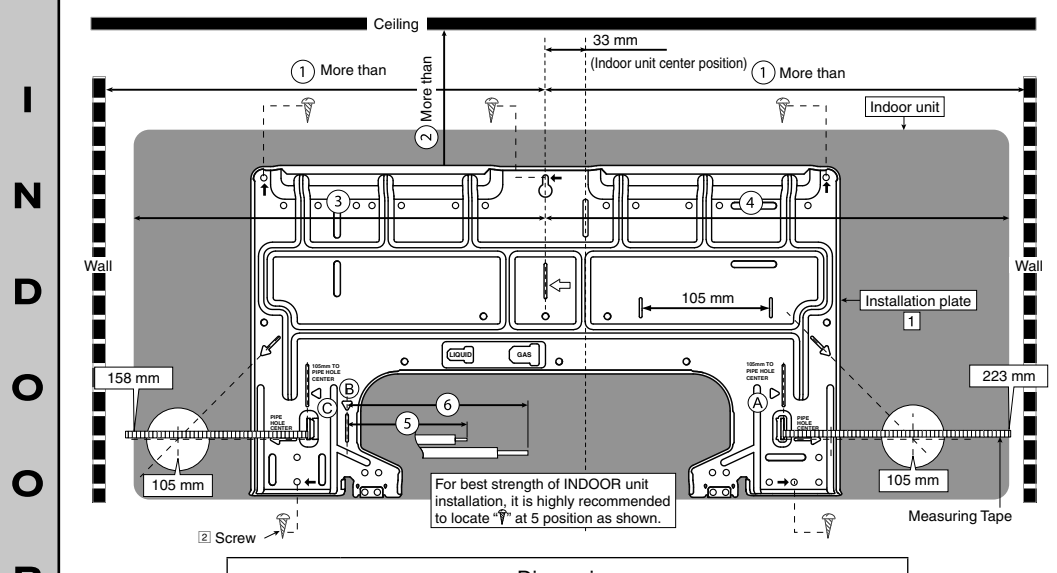


Dimension					
①	②	③	④	⑤	⑥
465 mm	68 mm (+)	350 mm	415 mm	71 mm	120 mm

- The center of installation plate should be at more than ① at right and left of the wall.
- The distance from installation plate edge to ceiling should be more than ②.
- From installation plate center to unit's left side is ③.
- From installation plate center to unit's right side is ④.
- For left side piping, piping connection for liquid should be about ⑤ from this line.
- For left side piping, piping connection for gas should be about ⑥ from this line.
- Alternatively, liquid and gas piping connection location reference is marked on installation plate.

- Mount the installation plate on the wall with 5 screws or more (at least 5 screws). (If mounting the unit on the concrete wall, consider using anchor bolts.)
- Always mount the installation plate horizontally by aligning the marking-off line with the thread and using a level gauge.
- Drill the piping plate hole with $\phi 70$ mm hole-core drill.
- Line according to the left and right side of the installation plate. The meeting point of the extended line is the center of the hole. Another method is by putting measuring tape at position as shown in the diagram above. The hole center is obtained by measuring the distance namely 105 mm for left and right hole respectively.
- Drill the piping hole at either the right or the left and the hole should be slightly slanting to the outdoor side.

3 TO DRILL A HOLE IN THE WALL AND INSTALL A SLEEVE OF PIPING

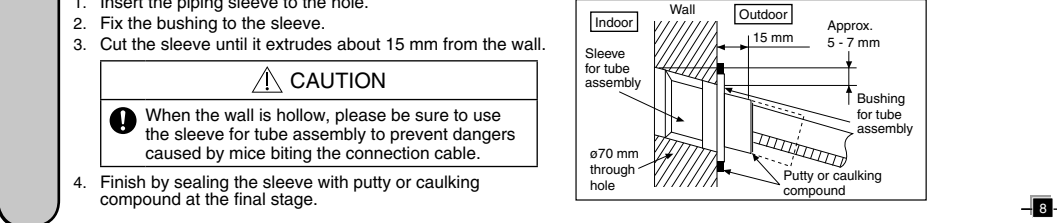


- Insert the piping sleeve to the hole.
- Fix the bushing to the sleeve.
- Cut the sleeve until it extrudes about 15 mm from the wall.

CAUTION
When the wall is hollow, please be sure to use the sleeve for tube assembly to prevent dangers caused by mice biting the connection cable.

- Finish by sealing the sleeve with putty or caulking compound at the final stage.

3. FOR THE EMBEDDED PIPING

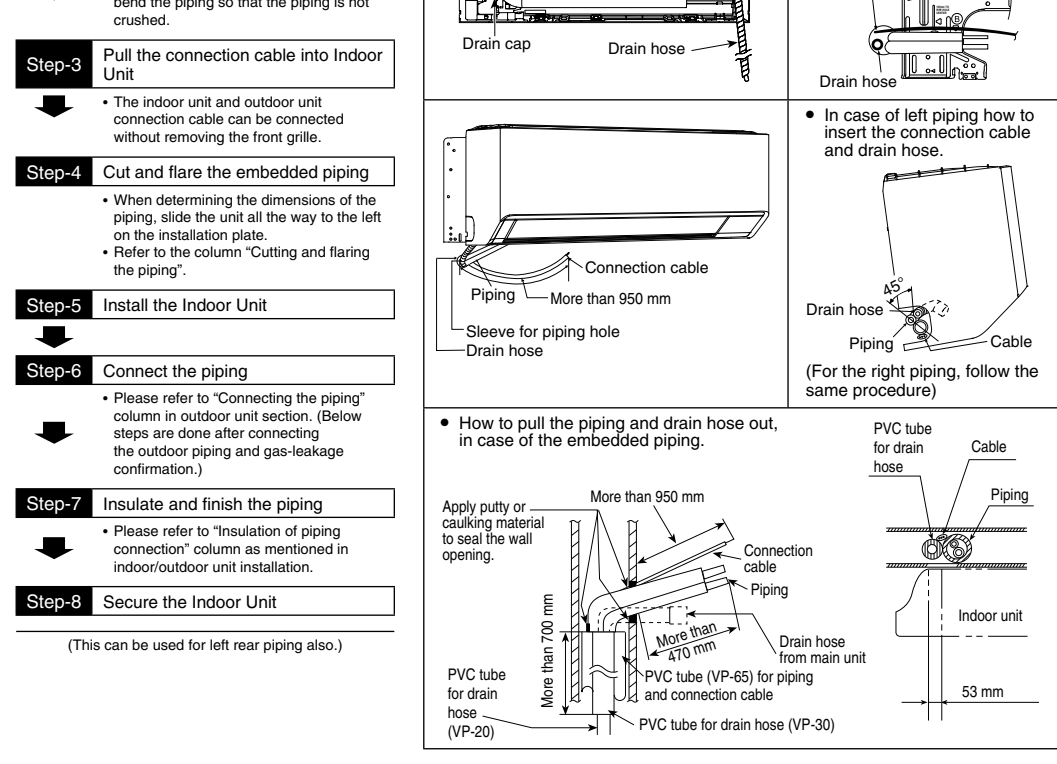

5 CONNECT THE CABLE TO THE INDOOR UNIT


The indoor and outdoor unit connection cable can be connected without removing the front grille.

- Install the indoor unit on the installing holder that mounted on the wall.
- Open the front panel and grille door by loosening the screw.
- Connection cable between indoor unit and outdoor unit shall be approved polychloroprene sheathed, 4 x 1.5 mm² flexible cord, type designation 60245 IEC 57 or heavier cord. Do not use joint connection cable. Replace the wire if the existing wire (from concealed wiring, or otherwise) is too short. Follow the national regulation and legislation for electrical work.
- Bind all the indoor and outdoor connection cable with tape and route the connection cable via the right side escapement.
- Remove the tapes and connect the connection cable between indoor unit and outdoor unit according to the diagram below.




Terminals on the indoor unit	1	2	3
Colour of wires (connection cable)	White	Blue	Green/Yellow
Terminals on the outdoor unit	1	2	3


4 INDOOR UNIT INSTALLATION

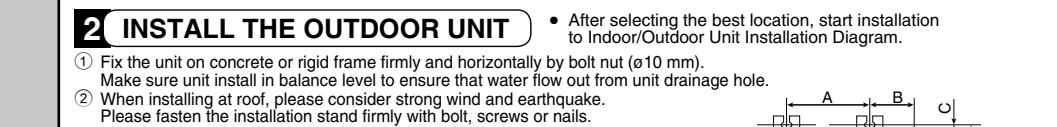

- FOR THE RIGHT REAR PIPING
 - Pull out the Indoor piping
 - Install the Indoor Unit
 - Secure the Indoor Unit
 - Insert the connection cable
- FOR THE RIGHT AND RIGHT BOTTOM PIPING
 - Pull out the Indoor piping
 - Install the Indoor Unit
 - Insert the connection cable
 - Secure the Indoor Unit

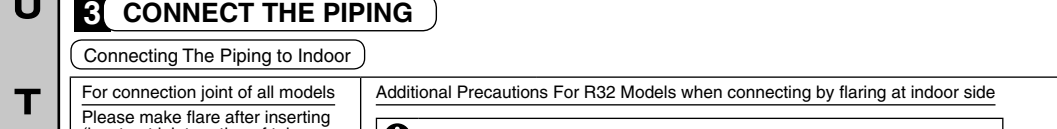

- Secure the Indoor Unit
 - Power supply cord arrangement
 - Press the lower left and right side of the unit against the installation plate until hooks engages with their sicut (sound click).

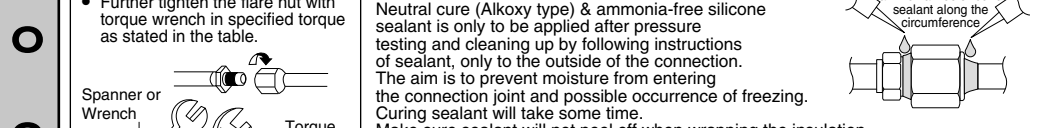

- Secure the connection cable
 - Secure the connection cable to the terminal board with the holder.
 - Close grille door by tighten with screw and close the front panel.

WARNING
This equipment must be properly earthed.


- Isolating Devices (Disconnecting means) should have minimum 3.0 mm contact gap.
- Ensure the colour of wires of outdoor unit and the terminal Nos. are the same to the indoor's respectively.
- Earth wire shall be Yellow/Green (Y/G) in colour and longer than other AC wires as shown in the figure for the electrical safety in case of the slipping out of the cord from the anchorage.

4 AIR TIGHTNESS TEST ON THE REFRIGERATING SYSTEM


AIR PURGING METHOD IS PROHIBITED FOR R32 SYSTEM

- Do not purge the air with refrigerants but use a vacuum pump to vacuum the installation.
- There is no extra refrigerant in the outdoor unit for air purging.

- Before system is charged with refrigerant and before the refrigerating system is put into operation, below site test procedure and acceptance criteria shall be verified by the certified technicians, and/or the installer.
- Be sure to check whole system for gas leakage.

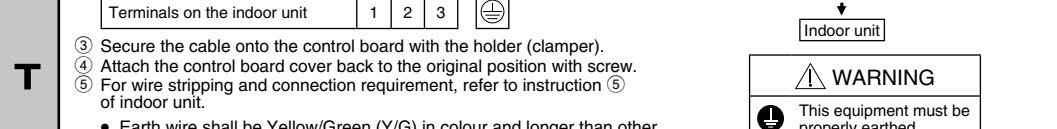

- Connect a charging hose with a push pin to the Low side of a charging set and the service port of the 3-way valve. During extremely cold winter, material contraction might happened, try to further tighten the 2-way, 3-way valve to ensure they are fully closed.
- Attach the gauge manifold set correctly and tightly. Make sure that both valves of the manifold gauge (low pressure and high pressure) is in close position.
- Connect the center hose of the manifold gauge to a vacuum pump.
- Turn on the motor switch of the vacuum pump, then turn open the low side manifold gauge valve and make sure that the needle in the gauge moves from 0cmHg (0 MPa) to -76 cmHg (-0.1 MPa) or vacuum until 500 microns is achieved. This process continues for approximately ten minutes. Then close the low side manifold gauge valve.
- Remove the vacuum pump from the centre hose and connect the center hose to cylinder of any applicable inert gas as test gas.
- Charge the test gas into the system and wait until the pressure within the system to reach the min. 1.04 MPa (10.4bar).
- Wait and monitor the pressure reading on the gauges. Check if there is any pressure drop. Waiting time depends on the size of the system.
- If there is any pressure drop, perform step 9-12. If there is no pressure drop, perform step 13.
- Use Gas Leak Detector to check for leaks. Must use the detection equipment with a sensitivity of 5 grams per year of test gas or better.
- Move the probe along the air conditioning system to check for leaks, and mark for repair.
- Any leak detected and marked shall be repaired.
- After repair, repeat evacuation steps 3-4 and tightness test steps 5-7. Check the pressure drop as in step 8.
- If no leak, Recover the test gas. Perform evacuation of steps 3-4. Then proceed to step 14.
- Disconnect the charging hose from the service port of the 3-way valve.
- Tighten the service port caps of the 3-way valve at a torque of 18 Nm with a torque wrench.
- Remove the valve caps of both of the 2-way valve and 3-way valve.
- Open both of the valves, using a hexagonal wrench (4 mm). It is recommended to allow refrigerant slowly flow into the refrigerant system to prevent refrigerant freezing. Slightly open 2-way valve for 5 seconds then close the valve. Repeat this action for 3 cycles then fully open the valve.
- Mount back the valve caps onto the 2-way valve and the 3-way valve to complete this process.

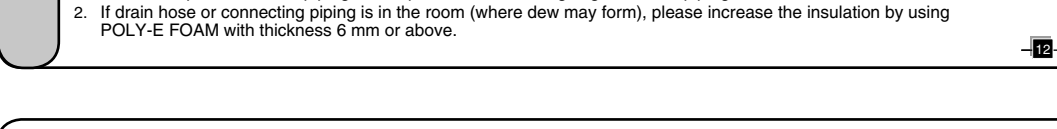

Terminals on the outdoor unit	1	2	3
Colour of wires	White	Blue	Green/Yellow
Terminals on the indoor unit	1	2	3

- Secure the cable onto the control board with the holder (clamping).
- Attach the control board cover back to the original position with screw.
- For wire stripping and connection requirement, refer to instruction ⑤ of indoor unit.
- Earth wire shall be Yellow/Green (Y/G) in colour and longer than other AC wires for safety reason.


WARNING
This equipment must be properly earthed.

6 PIPING INSULATION

- Please carry out insulation at pipe connection portion as mentioned in Indoor/Outdoor Unit Installation Diagram. Please wrap the insulated piping end to prevent water from going inside the piping.
- If drain hose or connecting piping is in the room (where dew may form), please increase the insulation by using POLY-E FOAM with thickness 6 mm or above.

4 HOW TO TAKE OUT FRONT GRILLE

- Slide the vertical airflow vane to slightly downward.
- Slide the 2 knobs on the upside of front grille away from the center to release them.
- Open front panel.
- Remove the 1 screw on the front grille as shown in the illustration.

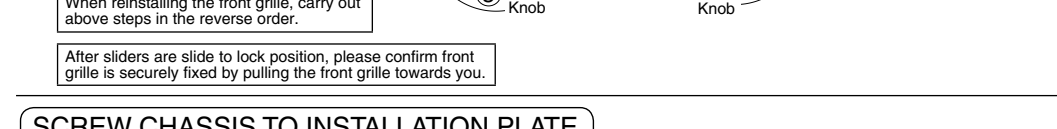


- Slide the 2 knobs on the front grille to unlock position.
- Pull the front grille towards you to remove the front grille.

When reinstalling the front grille, carry out above steps in the reverse order.

After sliders are slide to lock position, please confirm front grille is securely fixed by pulling the front grille towards you.

SCREW CHASSIS TO INSTALLATION PLATE

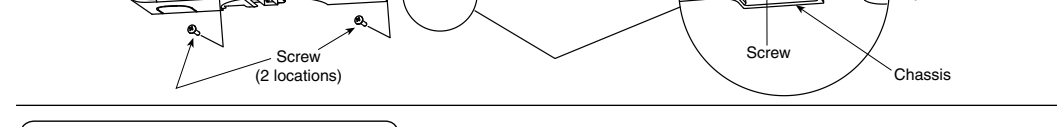


- Fasten the chassis to the installation plate with screws (Self purchase, Screw size: M4, max. length 10 mm) to provide a neat appearance of indoor unit. Please refer column "How to take out front grille" to remove the front grille.

AUTO SWITCH OPERATION

The below operations will be performed by pressing the "AUTO" switch.

- AUTO OPERATION MODE
 - The Auto operation will be activated immediately when the Auto Switch is pressed and release within 5 sec.
- TEST RUN OPERATION (FOR PUMP DOWN/SERVICING PURPOSE)
 - The Test Run operation will be activated if the Auto Switch is pressed continuously for more than 5 sec. to below 8 sec. A "pep" sound will occur at the fifth sec., in order to identify the starting of Test Run operation.
- REMOTE CONTROLLER RECEIVING SOUND ON/OFF
 - The ON/OFF of Remote controller receiving sound can be change over by the following steps:
 - press "AUTO" switch continuously for more than 16 sec. to below 21 sec.. A "pep", "pep", "pep", "pep" sound will occur at the sixteenth sec.
 - press the "AC Reset" button once, "pep" sound will occur indicates that Remote controller receiving sound setting mode is activated.
 - press "AUTO" switch again, Everyday "AUTO" switch is pressed (within 60 sec. interval), Remote controller receiving status will be reversed between ON and OFF. Long "pep" sound indicates that Remote controller receiving sound is ON. Short "pep" sound indicates that Remote controller receiving sound is OFF.

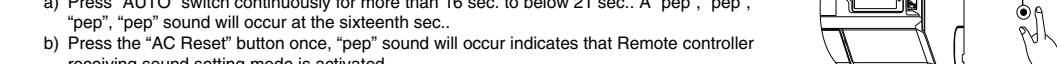

CUTTING AND FLARING THE PIPING

- Please cut using pipe cutter and then remove the burrs.
- Remove the burrs by using reamer. If burrs is not removed, gas leakage may be caused. Turn the piping end down to avoid the metal powder entering the pipe.
- Please make flare after inserting the flare nut onto the copper pipes.

When properly flared, the internal surface of the flare will evenly shine and be of even thickness. Since the flare part comes into contact with the connections, carefully check the flare finish.

DISPOSAL OF OUTDOOR UNIT DRAIN WATER

- If a drain elbow is used, the unit should be placed on a stand which is taller than 5 cm.
- If the unit is used in an area where temperature falls below 0°C for 2 or 3 days in succession, it is recommended not to use a drain elbow, for the drain water freezes and the fan will not rotate.

CHECK THE DRAINAGE

- Open front panel and remove air filters.
- Drainage checking can be carried out without removing the front grille.
- Pour a glass of water into the drain tray-styrofoam.
- Ensure that water flows out from drain hose of the indoor unit.

EVALUATION OF THE PERFORMANCE

- Operate the unit at cooling/heating operation mode for fifteen minutes or more.
- Measure the temperature of the intake and discharge air.
- Ensure the difference between the intake temperature and the discharge is more than 8°C during Cooling operation or more than 14°C during Heating operation.

Note:
During winter, turn on the power supply and standby the unit for at least 15 minutes before test run. Allow sufficient time to warm up refrigerant and prevent wrong error code judgement.

INSTALLATION OF FILTER

- Open the front panel.
- Remove the air filters.
- Put the air purifier filter into place as shown in illustration at right.

IN CASE OF REUSING EXISTING REFRIGERANT PIPING

- Observe the followings to decide reusing the existing refrigerant piping.
- Poor refrigerant piping could result in product failure.
- In the circumstances listed below, do not reuse any refrigerant piping. Instead, make sure to install a new piping.
 - Heat insulation is not provided for either liquid-side or gas-side piping or both.
 - The existing refrigerant pipe has been left in an open condition.
 - The diameter and thickness of the existing refrigerant piping does not meet the requirement.
 - The piping length and elevation does not meet the requirement.
- Perform proper pump down before reuse piping.
- In the circumstances listed below, clean it thoroughly before reuse.
 - The compressor has a failure history.
 - Oil color is darken. (ASTM 4.0 and above)
 - The existing air-conditioner is gas/oil heat pump type.
 - Do not reuse the flare to prevent gas leak.
 - Make sure to install a new flare.
 - If there is a welded part on the existing refrigerant piping, conduct a gas leak check on the welded part.
 - Replace deteriorated heat insulating material with a new one.
 - Heat insulating material is required for both liquid-side and gas-side piping.

Insulating Pump Down Method

- Operate air conditioner at cooling mode for 10 ~ 15 minutes.
- After 10 ~ 15 minutes of pre operation, close 2-way valve. After 3 minutes, close 3-way valve.
- Take out air conditioner unit.
- Install New Refrigerant conditioner.


CHECKING ITEMS

- Is there any gas leakage at flare nut tightness?
- Has the heat insulation been carried out at flare nut connection?
- Is the connection cable being fixed to terminal board firmly?
- Is the connection cable being clamped firmly?
- Is the drainage ok? (Refer to "Check the drainage" section)
- Is the indoor unit properly done?
- Is the earth wire connection hooked to the installation plate?
- Is the power supply voltage complied with rated value?
- Is the cooling/heating operation normal?
- Is the thermostat operation normal?
- Is the remote control's LCD operation normal?

ACXF60-57290
PRINTED IN MALAYSIA

安裝說明

空調器

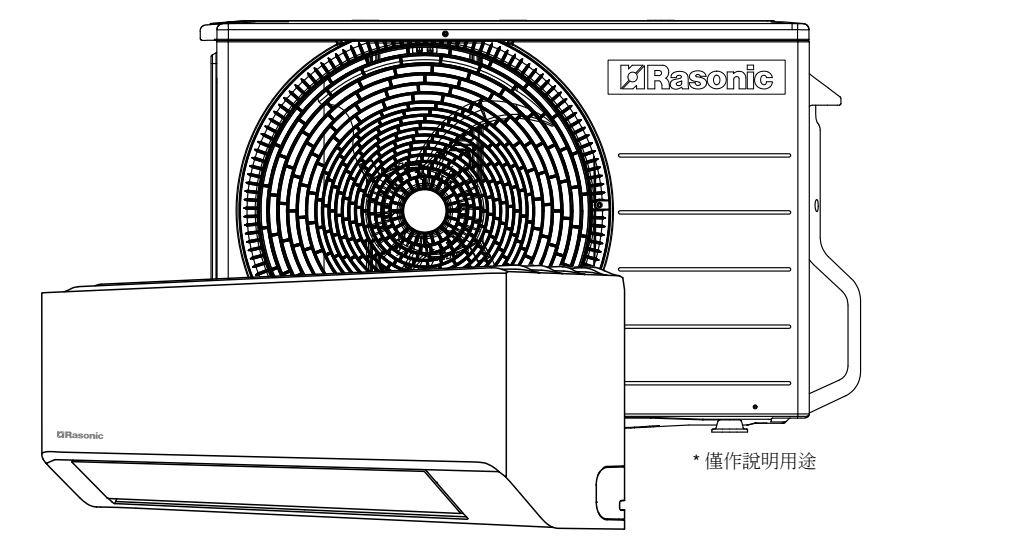

型號：RS/RU-YU9** (1.0HP)
RS/RU-YU12** (1.5HP)

注意 R32 冷媒
此空氣調節機包含 R32 冷媒劑并採用 R32 冷媒劑進行操作。
須由具備資質的人員對此產品進行安裝或維修。

- 此設備必須正確地接地。地線不可以被連接到煤氣管、水管、避雷針地線和電話線地線。
勿將空調調節機安裝於易燃氣體可能洩漏之處。
防止液體或蒸汽進入污水坑或下水道...

使用 R32 冷媒劑注意事項
請密切注意以下地點和安裝工作程序。

- 警告
本設備應儲存、安裝并工作於通風良好的空間內。
禁止在系統內混合不同的冷劑。
確保無異物(油、水等)進入導管。
操作、維護、修理以及冷劑回收應根據製造商的建議...

- 2-10. 電氣設備檢查
電氣師的維修和檢驗應包括初始安全檢查和部件檢查程序。
3. 密封部件維修
維修密封部件期間，在拆下密封蓋之前，應為待作業的設備斷開所有電源。
4. 本質安全部件維修
切勿為電路增加任何固定電感負載或電容負載。
5. 電阻
檢查以確保電阻不會受到磨損、腐蝕、超壓、振動、線路或任何其他不良環境影響。

安全措施
• 安裝之前請詳細閱讀此“安全措施”。
• 電氣工作必須由授權技工安裝。
• 請務必遵照所述注意事項，因為其重要內容與您的安全息息相關。

- 警告
• 除非製造商推薦，否則切勿使用工具加速除霜過程或進行清理。
• 不要將外機安裝在靠近陽臺的扶手。
• 切勿將您的手指或其他物體插入本機。
• 切勿將您的手指或其他物體插入鼻子和嘴巴導致窒息。
• 切勿坐或踩踏在本機上以免意外排氣。

- 1. 一般
• 必須確保保管件的安裝應保持在最低限度。
• 必須確保保管件免受實體損傷。
• 必須確保機械連接使於進行保養。
2. 檢修
2-1. 工作人員資格
• 參與冷劑回路工作介入冷劑迴路的所有具備資質的人員均應持有由行業認可之評估機構頒發的當有效證照。
2-2. 檢查該區域
• 開始在包含可燃性冷劑的系統上作業之前，必須進行安全檢查。
2-3. 作業程序
• 應按照可控的程序進行作業，以便將工作期間存在可燃氣體或蒸汽的風險降至最低。
2-4. 一般作業區域
• 應將所有進行作業之性質告知在該區域內作業的所有護護人員和其他人員。
2-5. 檢查是否存在冷劑
• 在作業之前及作業過程中，應使用適當的冷劑偵測器檢測該區域。

安裝時所需的工具
1 非力螺絲起子 6 剪管器 11 溫度計 16 扭力扳手
2 水平儀 7 擴孔器 12 高阻表 17 42 Nmm (4.3 kgf*cm)
3 電鑽、空鑽 (直徑 Ø70 mm) 8 刀子 13 萬用電表 18 55 Nmm (5.6 kgf*cm)
4 六角板手 (4 mm) 9 漏氣偵查器 14 真空泵 19 65 Nmm (6.6 kgf*cm)
5 扳手 10 帶尺 15 量規膠管 20 100 Nmm (10.2 kgf*cm)

選擇最佳位置
室內機 室外機
• 切勿將機組安裝到油煙瀰漫之區域。
• 機組附近應沒有任何熱源和蒸汽。
• 不應有任何阻礙空氣流通的障礙物。

表 A
型號 W (HP) 配管尺寸 標準長度 (m) 最大高度 (m) 最小管子長度 (m) 最大長度 (m) 補充冷劑量 (g/m) 附加氣體所需導管長度 (m) 最大冷劑充填量 (kg) Amin (m²)
YU9** 1.0HP 9.52 mm (3/8") 6.35 mm 15 3 20 10 7.5 0.58 不適用 (†)
YU12** 1.5HP (3/8") 6.35 mm 15 3 20 10 7.5 0.60 不適用 (†)

- 8. 充填步驟
• 除常規充填步驟外，應遵循以下要求。
• 使用充填設備時，確保不會出現不同冷劑的污染物。
• 導管或管道應盡可能短，以將管道中所包含之冷劑的數量減至最小。
9. 回收
• 執行此程序之前，技術人員須十分熟悉本設備及其全部詳情。
• 建議遵循良好作業規範，所有冷劑均應安全回收。
10. 添加標籤
• 應為設備添加標籤，說明設備已經停用並且冷劑已排空。
• 標籤應當注明日期并簽名。
11. 回收
• 當出於檢修或停用設備之目的從系統排放冷劑時，建議遵循良好作業規範，所有冷劑均應安全排放。

室內/室外裝機圖
電線電纜長度 約 650 mm 約 1550 mm
導管方向 (正面)
注意不要將排水管向上彎曲
顧客應購買的安裝零件 (X)
安裝板 (X)
套管襯套 (X)
套管 (X)
油灰 (X)
粘膠型密封劑
排水管線，使其盡可能貼近牆面上，但小心別弄斷它。
電源電纜 (X)
纖維尼龍膠帶 (寬) (X)
包裹之前先進行排水試驗。
將排水試驗時，取下水管線，將水倒入熱交換器。
電線固定座 (X)
綁紮方向最好不多於兩個。為實現良好通風與多戶外安裝，請諮詢授權經銷商/專業人士。
將控制器支架固定到牆面上
控制器 (X) 控制器支架 (X)
導管連接的隔熱
在檢查是否有氣體洩露後，進行隔熱處理並使用纖維尼龍膠帶將其固定。
將控制器支架固定到牆面上
• 本安裝僅適用於說明目的。
• 室內機實際上將採用不同的方式。

